REMOVAL AND INSTALLATION (Continued)

LIFTER RAMP TO FRONT OF VEHICLE R4410-B

Halo

Removal

- Remove glass, sunshade and entire unit as outlined. Remove lifter arms as outlined.
- If only halo is to be removed, carefully bend one track inward and pull halo tab out of channel. Pull other tab out of channel on other side.

Installation

- 1. Install halo.
- 2. Slightly crimp cable track tabs to hold flanged tube ends in place.
- 3. Install lifter arms as outlined.
- 4. Install moon roof, glass and sunshade as outlined.
- 5. Adjust glass panel as outlined.


Switch

Removal

- Remove two map lens assemblies by holding lens in switch depressed position, and using a flat, thin tool (such as a putty knife), pop out lens assembly at center gap between two lens assemblies.
- Remove two roof console retaining screws and remove roof console by lowering forward edge of console and slide console rearward, disengaging console rear retaining tabs.
- 3. Disconnect two wiring connectors.
- 4. Test switch assembly, if necessary.
- Using a small screwdriver, pry apart two switch retaining tabs and connector retaining tab. Remove switch.

Installation "

- Snap switch into its housing (ribbed portion of switch knob is rearward), slide wiring under metal clip and attach connector to metal retaining tab.
- Connect two wiring connectors.
- Install roof console by engaging two latch tabs, pushing console forward, swinging upward and installing two retaining screws.
- Install two map lamp lens assemblies by engaging lens retaining tab at outboard edge of opening and snapping center edge of lens into console.

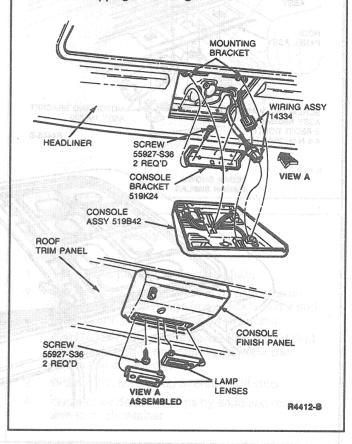

Motor

Removal and Installation

- 1. Remove switch as outlined.
- 2. Disconnect motor electrical connectors.
- 3. Remove motor and retaining screws.

 NOTE: Once motor is removed, it must be synchronized (timed) as outlined under Adjustments.
- 4. To install, reverse Removal procedure.