
## **DISASSEMBLY AND ASSEMBLY (Continued)**


- 7. Install engine oil pan retaining bolts. Tighten to 15-23 N⋅m (11-17 lb-ft).
- 8. Connect engine oil level sensor.
- Position cylinder heads and gaskets on block and install retaining bolts. Tighten in sequence in two steps:
  - 49-69 N·m (36-51 lb-ft)
  - 83-93 N·m (62-69 lb-ft)
- 10. Connect cooler hose to LH cylinder head.
- 11. Install oil indicator tube.
- 12. Install cylinder head covers and gaskets. Tighten retaining bolts to 9.8-16 N·m (7-12 lb-ft).
- 13. Install water outlet assembly. Tighten retaining bolts to 15-23 N·m (11-17 lb-ft).
- 14. Install water bypass pipe.
- 15. Install water pump retaining bolts. Tighten bolts to 15-23 N·m (11-17 lb-ft).
- 16. Install ignition coil pack bracket retaining bolts. Tighten bolts to 28-42 N·m (21-31 lb-ft).
- 17. Install ignition coil pack retaining screws. Tighten screws to 4.5-7 N·m (40-62 lb-in).
- 18. Install six injector insulators in cylinder heads.
- 19. Install fuel rail assembly retaining bolts. Tighten bolts to 15-23 N·m (11-17 lb-ft).
- 20. Connect wiring harness at fuel injectors.
- 21. Install center rear timing belt cover.
- 22. Install upper rear timing belt cover.
- 23. Install camshaft timing belt pulley retaining bolts. Tighten bolts to 21-25 N·m (15-18 lb-ft).
- 24. Install timing belt as outlined.
- 25. Install center timing belt cover.
- 26. Install lower timing belt cover.
- 27. Install crankshaft damper pulley.
- 28. Install spark plugs. Tighten to 22-27 N·m (16-20 lb-ft).
- Install spark plug connectors and ignition lead.
  NOTE: Ensure connectors are located correctly in clips to prevent improper connection.

	SHAPE	PART NUMBER/ PART NAME	LOCATION OF INSTALLATION
1	کے	CLAMP, WIRE 1	CYLINDER HEAD COVER
2	M	CLAMP, WIRE 2	CYLINDER HEAD COVER LH
3	wy.	CLAMP, WIRE 3	CYLINDER HEAD COVER RH SURGE TANK RH
•	ww .	CLAMP, WIRE 4	oradoulo) enimeteb
(5)	r r	CLAMP, WIRE 5	CYLINDER HEAD COVER RH
6	<u> </u>	CLAMP, WIRE 6	CYLINDER HEAD COVER RH

(A. 0450408444901440484048400840084061646616**A14891-A** 

- Install clamp to cylinder head and wires one through six.
- b. Connect plug wires onto spark plug.

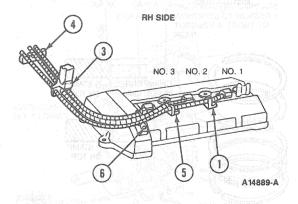

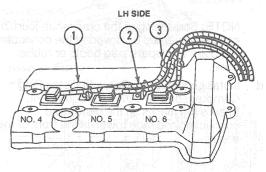

A14890-A