REMOVAL AND INSTALLATION (Continued)


FF Vehicles

Removal

WARNING: DO NOT MODIFY THE FUEL SYSTEM CONFIGURATION OR COMPONENTS, OR REPLACE COMPONENTS WITH PARTS NOT SPECIALLY DESIGNED FOR USE WITH FUEL METHANOL. FORD MOTOR COMPANY HAS SPECIALLY-DESIGNED THE MATERIALS, COMPONENTS AND SYSTEM CONFIGURATION FOR METHANOL-FUELED VEHICLES AND EACH PARTICULAR SYSTEM IS PRECISELY CALIBRATED FOR EFFICIENT OPERATION. THE USE OF DIFFERENT PARTS OR MATERIALS COULD PRODUCE AN UNTESTED CONFIGURATION THAT COULD RESULT IN FIRE, PERSONAL INJURY, OR COULD CAUSE ENGINE

NOTE: Clean contaminants away from all Debasiation components.

- 1. Remove throttle body as outlined.
- Carefully disconnect fuel charging wiring from fuel injector.

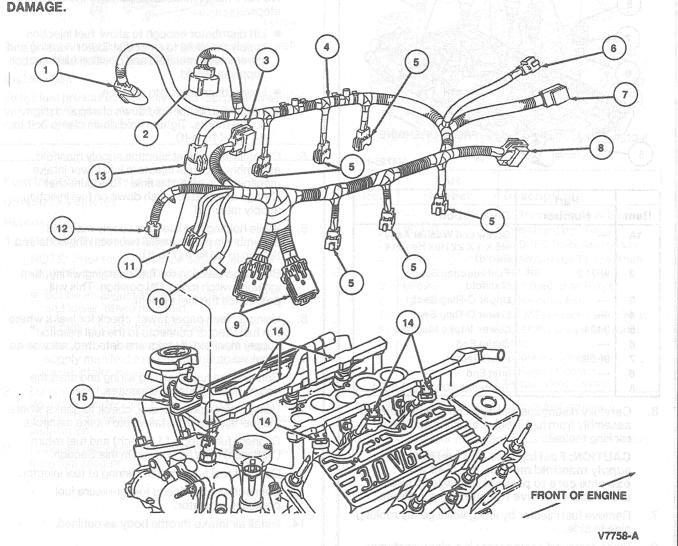

Item	Part Number	Description
1		To Synchronizer Assy
2		To Ignition Coil

(Continued)

. Indiana a finite in an angles and the second and		
	Part	
Item	Number	Description
3		To TP Sensor
4	9D930	Fuel Charging Wiring

(Continued)