
### **REMOVAL AND INSTALLATION (Continued)**

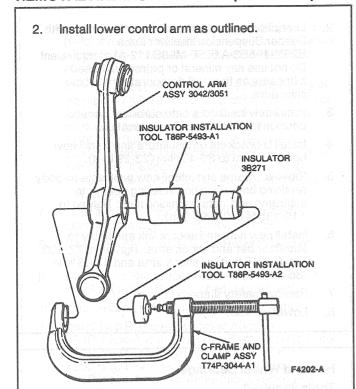


# Tension Strut-to-Subframe Insulators Removal

- 1. Remove lower control arm as outlined.
- Remove and discard nut, washer and insulator from front of tension strut and pull strut rearward to remove from subframe.
- 3. Remove and discard insulator from tension strut.

#### Installation

- Install new insulator on tension strut end and insert into subframe.
- 2. Install new front insulator.
- Clean tension strut threads to remove dirt and contamination.

- 4. Install new washer and new nut. Tighten to 98-132 N·m (73-97 lb-ft).
- 5. Install lower control arm as outlined.

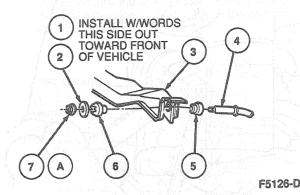

Item	Part Number	Description
1	N804018-S36M	Flatwasher (Except SHO/MTX and Police) (2 Reg'd)
2	N805627-S36M	Cupped Washer (SHO and Police) (2 Req'd)
3	<u>—</u> , , , , , , , , , , , , , , , , , , ,	Subframe
4	3468	Tension Strut (2 Req'd)
5	3C078	Insulator (2 Req'd)
6	3C067	Bushing Assy (2 Req'd)
7A	N800237-S101	Nut (2 Req'd)
Α		Tighten to 98-132 N·m (73-97 Lb-Ft)

## Stabilizer Bar/Link Assembly and/or Insulators

#### Removal

- 1. Raise vehicle on a hoist. Refer to Section 00-02.
- Support vehicle with hoist or safety stands behind subframe.