DIAGNOSIS AND TESTING (Continued)

PINPOINT TEST EE: FLUID LEVEL INDICATOR/PEDAL TRAVEL SWITCH/PRESSURE SWITCH DIAGNOSIS (Continued)

TEST STEP	RESULT	ACTION TO TAKE
DTC 64: CHECK PUMP MOTOR PRESSURE CAPABILITY		
Turn ignition switch OFF.	Yes a vector of the set of the se	REVERIFY code 64.
Disconnect 55-pin plug from ABS module. ABS MODULE	No D	REPLACE pump and motor.
	a da	
	igatis	
	· 1944	
	가요.(취임 pg.)	
	un las no Palitine e en il e	
	The state of the s	
	1,21 1990 197	
55 PIN CONNECTOR H7769-B		
 Connect EEC-IV breakout box 014-00322 with 		
Anti-Lock Test Adapter T90P-50-ALA or equivalent		
to the anti-lock 55-pin plug harness.		
The common with a gradient way with a red district regard to the		
NTI-LOCK		
90P-50-ALA // 55 PIN		
CONNECTOR	Total Control State (Control State (

014-00322		
TOTAL CAR		
LITTER		
H///U-B		
Jumper Pins 15, 34 and 60.		
 Apply and hold brake pedal. Turn ignition switch to ON. 		
	DTC 64: CHECK PUMP MOTOR PRESSURE CAPABILITY Turn ignition switch OFF. Disconnect 55-pin plug from ABS module. ABS MODULE TOWNECTOR CONNECTOR H7769-B Connect EEC-IV breakout box 014-00322 with Anti-Lock Test Adapter T90P-50-ALA or equivalent to the anti-lock 55-pin plug harness. NTI-LOCK EST DAPTER DOP-50-ALA Jumper Pins 15, 34 and 60. Apply and hold brake pedal.	DTC 64: CHECK PUMP MOTOR PRESSURE CAPABILITY Turn ignition switch OFF. Disconnect 55-pin plug from ABS module. ABS MODULE ABS MODULE Connect EEC-IV breakout box 014-00322 with Anti-Lock Test Adapter T90P-50-ALA or equivalent to the anti-lock 55-pin plug harness. NTI-LOCK ST JOP-50-ALA Topy and hold brake pedal.

TH7929B