


DISASSEMBLY AND ASSEMBLY (Continued)

13. Install No. 11 needle bearing with outer lip facing down.

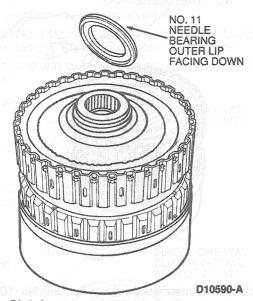

Reverse Clutch many first and the control of the co

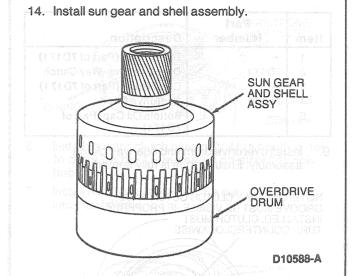

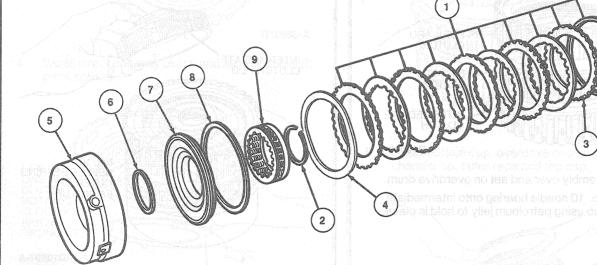

| Item | Description |
|------|----------------|
| 1 | Clutch Pack |
| 2 | Snap Ring |
| 3 | Pressure Plate |
| 4 | Wave Spring |

(Continued)

| Item | Description |
|------|-------------------|
| 5 | Clutch Cylinder |
| 6 | Inner Piston Seal |
| 7 | Piston |
| 8 | Outer Piston Seal |
| 9 | Return Spring |

D5955-D