REMOVAL AND INSTALLATION (Continued)

- 6. Install fuel filler hoses which connect fuel tank to fuel tank filler pipe. Install hose clamps and tighten to 2.7-3.7 N·m (24-32 lb-in).
- 7. Replace fuel drained from fuel tank.
- 8. Start engine and check all connections for leaks.

