
REMOVAL AND INSTALLATION (Continued)

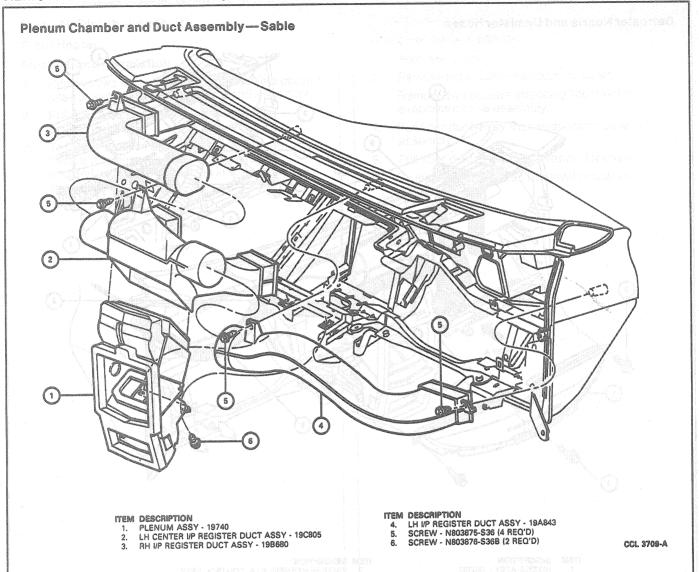

Defroster Nozzle

Removal and Installation

- 1. Remove instrument panel. Refer to Section 01-12.
- 2. Disconnect vacuum hose from retaining tab on defroster assembly.
- 3. Lower plenum chamber by loosening the two screws retaining it to instrument panel and screw retaining it to plenum.
- 4. Remove screw retaining defroster nozzle to plenum.
- 5. Remove three screws retaining defroster nozzle to instrument panel.
- Disconnect LH demister hose from defroster nozzle and both RH hoses from plenum.
- 7. To install, reverse Removal procedure.