
REMOVAL AND INSTALLATION (Continued)

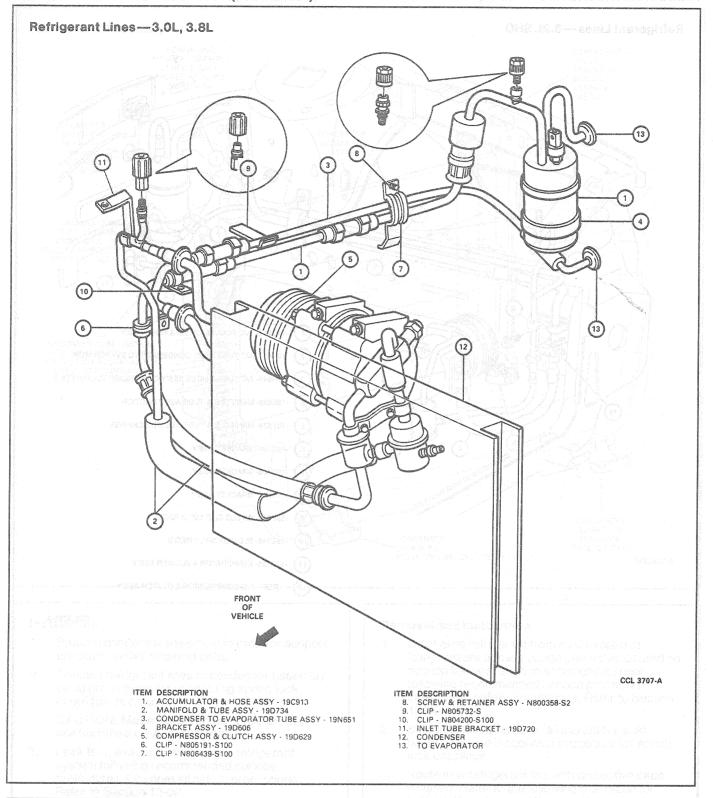

4. Connect refrigerant line into system using new O-rings lubricated with clean specified refrigerant oil. At condenser, use connecting procedure for spring lock couplings.

CAUTION: Make sure correct type O-rings are installed on A/C fittings.

5. Leak test, evacuate and charge refrigerant system following recommended service procedures. Observe safety precautions. Refer to Section 12-00.