# **REMOVAL AND INSTALLATION (Continued)**

## Bulb, Illumination

### Removal and Installation

WARNING: ILLUMINATION BULBS ARE PRESSURIZED AND MAY SHATTER IF IMPROPERLY HANDLED. WEAR EYE PROTECTION WHEN SERVICING ILLUMINATION BULBS.

- 1. Remove instrument cluster as outlined.
- 2. Allow illumination bulbs to cool before servicing.
- 3. Remove bulb and socket assembly. Dispose of carefully.
- 4. Install new bulb and socket assembly.
- 5. Install instrument cluster as outlined. Check instrument panel illumination.

# Low Fuel Warning Assembly, Electronic Removal and Installation

- 1. Remove instrument cluster as outlined.
- Depress clip retaining assembly to lower left of cluster (rear view) backplate and remove assembly.
- Position assembly in pocket slides and push inward to fully snap assembly in cluster.
- 4. Install instrument cluster as outlined.

## Flexible Printed Circuit

### Removal

- 1. Remove instrument cluster as outlined.
- 2. Remove low fuel warning assembly as outlined.
- 3. Remove all bulb and socket assemblies by twisting counterclockwise.

- 4. Remove speedometer and gauges. Refer to Section 13-02.
- 5. Remove clips using long-nose pliers. Squeeze both ends of clip equally so that locking ears will slide through clip opening in backplate. Push clip through opening.

CAUTION: Do not overbend clips as they may break

 After all clips are removed, printed circuit can be removed.

#### Installation

- Position printed circuit on backplate and install clips by bending tabs on clips with fingers. Push clip into clip opening until locking ears are locked into backplate.
  - NOTE: An audible click will be heard when clips are locked into position.
- 2. Install speedometer and gauges as outlined.
- Install all bulb and socket assemblies into backplate by twisting clockwise.
- 4. Install low fuel warning assembly as outlined.
- 5. Install instrument cluster as outlined.

## **SPECIFICATIONS**

## TORQUE SPECIFICATIONS

Description	N·m	Lb-In
Instrument Cluster Screws	2-3	18-27
Steering Column Opening Cover Screws	9-14	80-124