
# **REMOVAL AND INSTALLATION (Continued)**

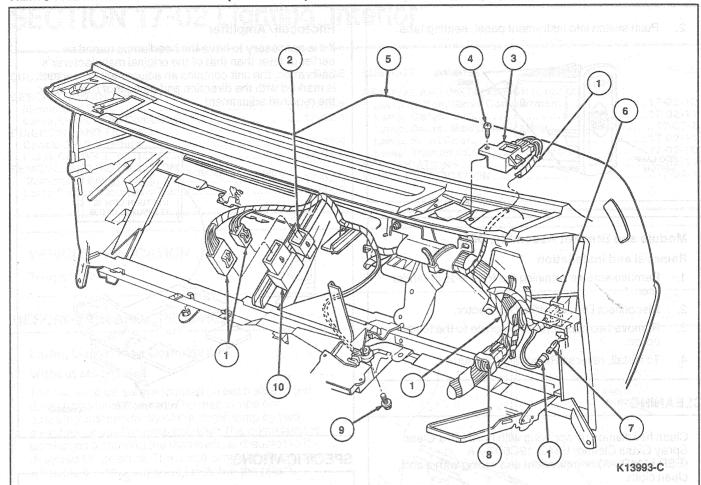

Item	Part Number	Description
1	13A090	Wiring Assy
2	14B193	Headlamp Dimmer Relay
3	14A597	Light Sensor Amplifier
4	N803876	Screw

(Continued)

Item	Part Number	Description Telephone
5	04320	Instrument Panel
6	13A024	Autolamp Switch
7	13465	Bulb Assy
8	14401	Wiring Assy
9	N801846-S36MG	Screw
10	14A672	Autolamp Relay

## **Headlamp Control Relay**

## Removal and Installation

- 1. Disconnect battery ground cable.
- Remove relay from bracket mounted on instrument panel to the LH side of the glove compartment. Refer to the illustration following Potentiometer.
- 3. Disconnect the connector from relay.
- 4. To install, reverse Removal procedure.

## Fog Lamp Switch

#### Removal

- Using a flat-bladed tool, separate switch assembly from instrument panel.
- Pull switch out from panel and disconnect electrical connector.

#### Installation

1. Connect electrical connector to switch.