
## **REMOVAL AND INSTALLATION (Continued)**

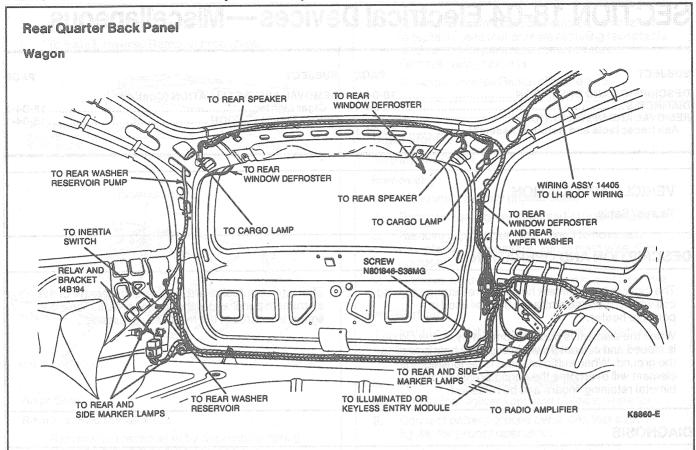

## **SPECIFICATIONS**

TOROUF	CO SO SOO	PARTIE PO	8 TEA 10 10 10 10 10 10 10 10 10 10 10 10 10
B 6 B 55 6 6 5 6 6 6 6 6 6 6 6 6 6 6 6 6	100 mm	K _2000 28 ~ 6	ы кикики:~~

DESCRIPTION	N∙m	Lb-in
Dropping Resistor Mounting Screw	5.2-6.7	47-59
Air Bag Sensor Mounting Screw	4-5.6	36-49
Power Distribution Box Mounting Screw	3.6-4.1	32-36
Wiring Assembly Connector Screw	4.1-5.4	37-47
Connector Retaining Bolt	1.4-2	12-18
Ground Screw	3.4-4.8	30-42
Connector Retaining Bolt	5.2-7.2	46-64
Bracket Mounting Screw	7.6-10.4	6-8 (Lb-Ft
Bracket Mounting Nut	29.7-40.3	22-30 (Lb-Ft)
Fuse Panel Retaining Screws	2.1-2.9	19-26 (Lb-Ft)

## SPECIAL SERVICE TOOLS

7S-17018-A