

METRICS

J1930 TERMINOLOGY LIST

GLOSSARY

ALPHABETICAL INDEX

WE WANT TO HEAR FROM YOU

Index/ Important Information

*The primary class is an Arabic numeral designating the first SAE English grade system.
The length of all bolts is measured from the outer face of the head to threads.

INTRODUCTION

Most threaded fasteners are covered by specifications that define required mechanical properties, such as tensile strength, yield strength, proof load and hardness. These specifications are carefully considered in initial selection of fasteners for a given application. To assure continued satisfactory vehicle performance, replacement fasteners used should be of the correct strength, as well as the correct nominal diameter, thread pitch, length, and finish.

Most original equipment fasteners (English system or Metric) are identified with markings or numbers indicating the strength of the fastener. These markings are described in the pages that follow. Attention to these markings is important in assuring that the proper replacement fasteners are used.


Further, some metric fasteners, especially nuts, are colored blue. This metric blue identification is in most cases a temporary aid for production start-up, and color will generally revert to normal black or bright after start-up.

English system and metric system fasteners are available through your Ford Parts and Service operation.

NOMENCLATURE FOR BOLTS


(ENGLISH) INCH SYSTEM

Bolt, 1/2-13x1

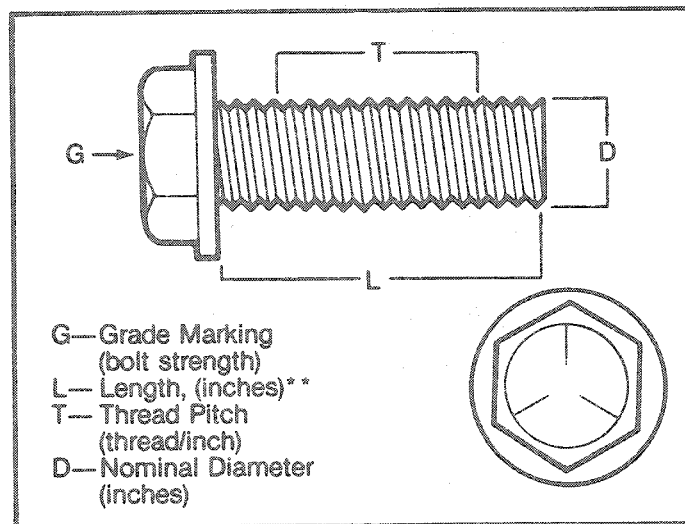

METRIC SYSTEM

Bolt M12-1.75x25

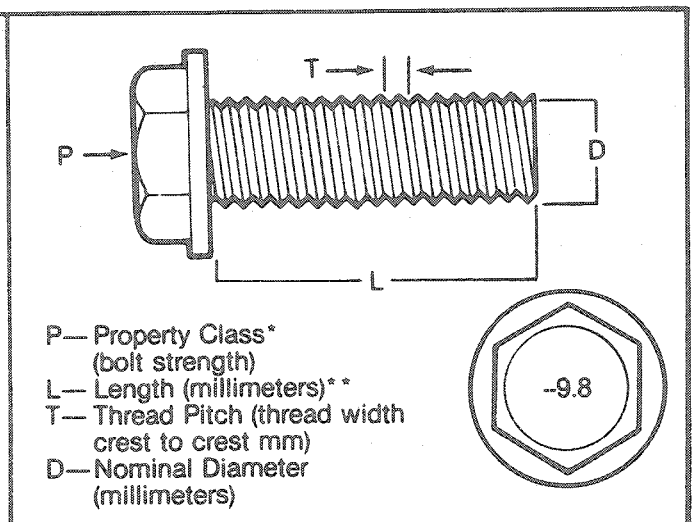


*The property class is an Arabic numeral distinguishable from the slash SAE English grade system.

**The length of all bolts is measured from the underside of the head to the end.

Metrics


BOLT STRENGTH IDENTIFICATION

(ENGLISH) INCH SYSTEM

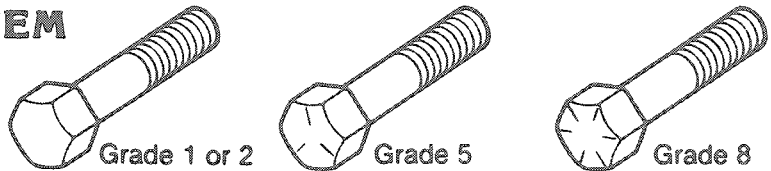

English (Inch) bolts—Identification marks correspond to bolt strength—increasing number of slashes represent increasing strength.

METRIC SYSTEM



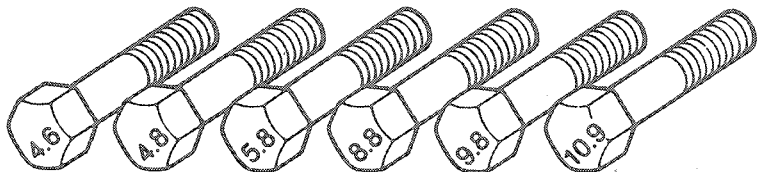


Metric bolts—Identification class numbers correspond to bolt strength—increasing numbers represent increasing strength. Common metric fastener bolt strength property are 9.8 and 10.9 with the class identification embossed on the bolt head.

HEX NUT STRENGTH IDENTIFICATION


(ENGLISH) INCH SYSTEM

METRIC SYSTEM


Grade	Hex Nut Grade 5	Hex Nut Grade 8	Class	Hex Nut Property Class 9	Hex Nut Property Class 10
Identification			Identification		
	3 Dots	6 Dots		Arabic 9	Arabic 10
Increasing dots represent increasing strength.			May also have blue finish or paint daub on hex flat. Increasing numbers represent increasing strength.		

OTHER TYPES OF PARTS

Metric identification schemes vary by type of part, most often a variation of that used of bolts and nuts. Note that many types of English and metric fasteners carry no special identification if they are otherwise unique.



—Stamped U-Nuts



—Tapping, thread forming and certain other case hardened screws



CLASS
10.9



CLASS
9.8



CLASS
8.8

—Studs, Large studs may carry the property class number. Smaller studs use a geometric code on the end.

Metrics

ENGLISH METRIC CONVERSION

Description	Multiply	By	For Metric Equivalent
ACCELERATION	Foot/sec ²	0.304 8	metre/sec ² (m/s ²)
	Inch/sec ²	0.025 4	metre/sec ²
TORQUE	Pound-inch	0.112 98	newton-metres (N·m)
	Pound-foot	1.355 8	newton-metres
POWER	horsepower	0.746	kilowatts (kw)
PRESSURE or STRESS	inches of water	0.2491	kilopascals (kPa)
	pounds/sq. in.	6.895	kilopascals (kPa)
	pounds/sq. in.	0.069	bar
ENERGY or WORK	BTU	1 055.	joules (J)
	foot-pound	1.355 8	joules (J)
	kilowatt-hour	3 600 000. or 3.6×10^6	joules (J = one W's)
LIGHT	foot candle	10.764	lumens/metre ² (lm/m ²)
FUEL PERFORMANCE	miles/gal	0.425 1	kilometres/litre (km/l)
	gal/mile	2.352 7	litres/kilometre (l/km)
VELOCITY	miles/hour	1.609 3	kilometres/hr. (km/h)
LENGTH	inch	25.4	millimetres (mm)
	foot	0.304 8	metres (m)
	yard	0.914 4	metres (m)
	mile	1.609	kilometres (km)
AREA	inch ²	645.2	millimetres ² (mm ²)
		6.45	centimetres ² (cm ²)
	foot ²	0.092 9	metres ² (m ²)
	yard ²	0.836 1	metres ²
VOLUME	inch ³	16 387.	mm ³
		16.387	cm ³
		0.016 4	litres (l)
	quart	0.946 4	litres
	gallon	3.785 4	litres
	yard ³	0.764 6	metres ³ (m ³)
MASS	pound	0.453 6	kilograms (kg)
	ton	907.18	kilogram (kg)
	ton	0.90718	tonne (t)
FORCE	kilogram	9.807	newtons (N)
	ounce	0.278 0	newtons
	pound	4.448	newtons
TEMPERATURE	degree fahrenheit	(°F - 32) 0.556	degree Celsius (°C)

Metrics

DECIMAL AND METRIC EQUIVALENTS

Fractions	Decimal Inch	Metric mm
1/64	.015625	.397
1/32	.03125	.794
3/64	.046875	1.191
1/16	.0625	1.588
5/64	.078125	1.984
3/32	.09375	2.381
7/64	.109375	2.778
1/8	.125	3.175
9/64	.140625	3.572
5/32	.15625	3.969
11/64	.171875	4.366
3/16	.1875	4.763
13/64	.203125	5.159
7/32	.21875	5.556
15/64	.234375	5.953
1/4	.250	6.35
17/64	.265625	6.747
9/32	.28125	7.144
19/64	.296875	7.54
5/16	.3125	7.938
21/64	.328125	8.334
11/32	.34375	8.731
23/64	.359375	9.128
3/8	.375	9.525
25/64	.390625	9.922
13/32	.40625	10.319
27/64	.421875	10.716
7/16	.4375	11.113
29/64	.453125	11.509
15/32	.46875	11.906
31/64	.484375	12.303
1/2	.500	12.7

Fractions	Decimal Inch	Metric mm
33/64	.515625	13.097
17/32	.53125	13.494
35/64	.546875	13.891
9/16	.5625	14.288
37/64	.578125	14.684
19/32	.59375	15.081
39/64	.609375	15.478
5/8	.625	15.875
41/64	.640625	16.272
21/32	.65625	16.669
43/64	.671875	17.066
11/16	.6875	17.463
45/64	.703125	17.859
23/32	.71875	18.256
47/64	.734375	18.653
3/4	.750	19.05
49/64	.765625	19.447
25/32	.78125	19.844
51/64	.796875	20.241
13/16	.8125	20.638
53/64	.828125	21.034
27/32	.84375	21.431
55/64	.859375	21.828
7/8	.875	22.225
57/64	.890625	22.622
29/32	.90625	23.019
59/64	.921875	23.416
15/16	.9375	23.813
61/64	.953125	24.209
31/32	.96875	24.606
63/64	.984375	25.003
1	1.00	25.4

Metrics

TORQUE CONVERSION

NEWTON METRES (N·m)	POUND-FEET (LB·FT)
1	0.7376
2	1.5
3	2.2
4	3.0
5	3.7
6	4.4
7	5.2
8	5.9
9	6.6
10	7.4
15	11.1
20	14.8
25	18.4
30	22.1
35	25.8
40	29.5
50	36.9
60	44.3
70	51.6
80	59.0
90	66.4
100	73.8
110	81.1
120	88.5
130	95.9
140	103.3
150	110.6
160	118.0
170	125.4
180	132.8
190	140.1
200	147.5
225	166.0
250	184.4

POUND-FEET (LB·FT)	NEWTON METRES (N·m)
1	1.356
2	2.7
3	4.0
4	5.4
5	6.8
6	8.1
7	9.5
8	10.8
9	12.2
10	13.6
15	20.3
20	27.1
25	33.9
30	40.7
35	47.5
40	54.2
45	61.0
50	67.8
55	74.6
60	81.4
65	88.1
70	94.9
75	101.7
80	108.5
90	122.0
100	135.6
110	149.1
120	162.7
130	176.3
140	189.8
150	203.4
160	216.9
170	230.5
180	244.0

J1930 Terminology List

NOTE: Certain Ford component names have been changed in this Service Manual to conform to Society of Automotive Engineers (SAE) directive J1930.

SAE J1930 standardizes automotive component names for all vehicle manufacturers.

This chart lists new 1993 SAE J1930 component names and the obsolete 1992 component names.

New Term	New Acronyms/ Abbreviations	Old Acronyms/ Term
4X4 Low	4X4L	- 4X4L - 4X4 Low
Air Conditioning	A/C	- A/C - Air Conditioning
Air Conditioning Clutch	ACC	- ACC - Air Conditioning Clutch
Air Conditioning Cyclic Switch	ACCS	- ACCS - Air Conditioning Cyclic Switch
Air Conditioning Demand	ACD	- ACD - Air Conditioning Demand
Air Conditioning On	ACON	- ACON - Air Conditioning On
Automatic Ride Control	ARC	- ACL - Acceleration Signal
Barometric Pressure	BARO	- BP - Barometric Pressure
Battery Positive Voltage	B+	- BATT+ - Battery Positive
Blower	BLR	- BLR - Blower
Brake On/Off	BOO	- BOO - Brake On/Off
Bypass Air	BPA	- BPA - Bypass Air
Canister Purge	CANP	- CANP - Canister Purge
Charge Air Cooler	CAC	- Intercooler
Clutch Pedal Position switch	CPP switch	- CES - CIS - Clutch Engage Switch - Clutch Interlock Switch
Coast Clutch Solenoid	CCS	- CCS - Coast Clutch Solenoid
Computer Control Dwell	CCD	- CCD - Computer Control Dwell
Constant Control Relay Module	CCRM	- IRCM - Integrated Relay Control Module
Crankshaft Position sensor	CKP sensor	- CPS - VRS - Variable Reluctance Sensor

J1930 Terminology List

New Term	New Acronyms/ Abbreviations	Old Acronyms/ Term
Cylinder Identification	CID	- CID - Cylinder Identification
Data Link Connector	DLC	- Self-Test connector
Data Negative	DATA-	- DATA- - Data Negative
Data Output Line	DOL	- DOL - Data Output Line
Data Positive	DATA+	- DATA+ - Data Positive
Daytime Running Lamps	DRL	- DRL - Daytime Running Lamps
Defroster	DEF	- DEF - Defroster
Diagnostic Test Mode	DTM	- Self-Test mode
Diagnostic Trouble Code	DTC	- Self-Test code
Differential Pressure Feedback EGR	DPFE	- DPFE - Differential Pressure Feedback EGR
Distributor Ignition	DI	- CBD - DS - TFI - Closed Bowl Distributor - Duraspark Ignition - Thick Film Ignition
Dual Overhead Cam	DOHC	- DOHC - Dual Overhead Cam
Dual Plug Inhibit	DPI	- DPI - Dual Plug Inhibit
EGR Pressure Transducer	EPT	- EPT - EGR Pressure Transducer
EGR Temperature	EGRT	- EGRT - EGR Temperature
EGR Vacuum Regulator	EVR	- EVR - EGR Vacuum Regulator
EGR Valve Position	EVP	- EVP - EGR Valve Position
Electronic Air Pump	EAP	- EAP - Electronic Air Pump
Electronic Engine Control	EEC	- EEC - Electronic Engine Control
Electronic Ignition	EI	- DIS - EDIS - Distributorless Ignition System - Electronic Distributorless Ignition System
Electronic Pressure Control	EPC	- EPC - Electronic Pressure Control
Electronic Secondary Air Injection	EAIR	- EAM - Electronic Air Management

J1930 Terminology List

New Term	New Acronyms/ Abbreviations	Old Acronyms/ Term
Engine Coolant Temperature	ECT	– ECT – Engine Coolant Temperature
Engine RPM sensor	RPM sensor	– RPMS – Engine RPM sensor
Exhaust Gas Recirculation	EGR	– EGR – Exhaust Gas Recirculation
Fan Control	FC	– EDF – Electro-Drive Fan
Flexible Fuel sensor	FF sensor	– FCS – FFS – FFV – Fuel Compensation Sensor – Flex Fuel Sensor
Flexible Fuel vehicle	FF vehicle	– FFV – Flexible Fuel Vehicle
Fuel Pressure Regulator Control	FPRC	– FPRC – Fuel Pressure Regulator Control
Fuel Pump	FP	– FP – Fuel Pump
Fuel Pump Monitor	FPM	– FPM – Fuel Pump Monitor
Governor Control Module	GCM	– GEM – Governor Electronic Module
Ground	GND	– GND – Ground
Headlamp	HDL	– HDL – Headlamp
Heated Oxygen Sensor	HO2S	– HEGO – Heated Exhaust Gas Oxygen Sensor
High Fan Control	HFC	– HEDF – High Speed Electro-Drive Fan
High Fuel Pump	HFP	– HFP – High Fuel Pump
High Output	HO	– HO – High Output
High Swirl Combustion	HSC	– HSC – High Swirl Combustion
Idle Air Control	IAC	– ISC – Idle Speed Control
Idle Air Control Bypass Air	IAC BPA	– ISC-BPA – Idle Speed Control — Bypass Air
Ignition Control Module	ICM	– DIS module – EDIS module – TFI module
Ignition Diagnostic Monitor	IDM	– IDM – Ignition Diagnostic Monitor
Inertia Fuel Shutoff switch	IFS switch	– Inertia Switch

J1930 Terminology List

New Term	New Acronyms/ Abbreviations	Old Acronyms/ Term
Intake Air Temperature	IAT	- ACT - Air Charge Temperature
Intake Manifold Runner Control	IMRC	- IAC - Inlet Air Control
Keep Alive Memory	KAM	- KAM - Keep Alive Memory
Keep Alive Power	KAPWR	- KAPWR - Keep Alive Power
Knock Sensor	KS	- KS - Knock Sensor
Low Fan Control	LFC	- EDF - Electro-Drive Fan
Low Fuel Pump	LFP	- LFP - Low Fuel Pump
Malfunction Indicator Lamp	MIL	- CEL - "CHECK ENGINE" Light - "SERVICE ENGINE SOON" Light
Manifold Absolute Pressure	MAP	- MAP - Manifold Absolute Pressure
Manifold Absolute Pressure Per Altitude	MAPPA	- GMAPPA - Governor Manifold Absolute Pressure Per Altitude
Manual Lever Position	MLP	- MLP - Manual Lever Position
Mass Air Flow	MAF	- MAF - Mass Air Flow
Mass Air Flow Return	MAF RTN	- MAF RTN - Mass Air Flow Return
Multiport Fuel Injection	MFI	- EFI - Electronic Fuel Injection
Octane Adjust	OCT ADJ	- OCT ADJ - Octane Adjust
Overhead Cam	OHC	- OHC - Overhead Cam
Oxidation Catalytic Converter	OC	- COC - Conventional Oxidation Catalyst
Park/Neutral Position switch	PNP switch	- NDS - NGS - TSN - Neutral Drive Switch - Neutral Gear Switch - Transmission Select Switch Neutral
Positive Crankcase Ventilation	PCV	- PCV - Positive Crankcase Ventilation
Power Ground	PWR GND	- PWR GND - Power Ground

J1930 Terminology List

New Term	New Acronyms/ Abbreviations	Old Acronyms/ Term
Power Steering Pressure switch	PSP switch	– PSPS – Power Steering Pressure Switch
Powertrain Control Module	PCM	– ECA – ECM – ECU – EEC processor – Engine Control Assembly – Engine Control Module – Engine Control Unit
Pressure Feedback EGR	PFE	– EPT – Exhaust Pressure Transducer
Profile Ignition Pickup	PIP	– PIP – Profile Ignition Pickup
Programmable Speedometer/Odometer Module	PSOM	– PSOM – Programmable Speedometer/ Odometer Module
Pulsed Secondary Air Injection	PAIR	– MPA – PA – Thermactor II – Managed Pulse Air – Pulse Air
Reduction Oxidation Catalytic Converter	REDOX	– REDOX – Reduction Oxidation Catalytic Converter
Scan Tool	ST	– GST – NGS – Generic Scan Tool – New Generation STAR Tester
Secondary Air Injection	AIR	– AM – CT – MTA – Air Management – Conventional Thermactor – Managed Thermactor Air – Thermactor
Secondary Air Injection Bypass	AIRB	– AM1 – TAB – Air Management 1 – Thermactor Air Bypass
Secondary Air Injection Diverter	AIRD	– AM2 – TAD – Air Management 2 – Thermactor Air Diverter
Self-Test Input	STI	– STI – Self-Test Input
Self-Test Output	STO	– STO – Self-Test Output
Sequential Multiport Fuel Injection	SFI	– SEFI – Sequential Electronic Fuel Injection

J1930 Terminology List

New Term	New Acronyms/ Abbreviations	Old Acronyms/ Term
Shift Indicator Lamp	SIL	- SIL - Shift Indicator Lamp
Shift Solenoid	SS	- SS - Shift Solenoid
Signal Return	SIG RTN	- SIG RTN - Signal Return
Solid State Relay	SSR	- SSR - Solid State Relay
Spark Output	SPOUT	- SAW - Spark Angle Word
Speed Density	SD	- SD - Speed Density
Super High Output	SHO	- SHO - Super High Output
Supercharger/Supercharged	SC	- SC - Supercharger/Supercharged
Tachometer	TACH	- TACH - Tachometer
Three Way Catalytic Converter	TWC	- TWC - Three Way Catalytic Converter
Three Way + Oxidation Catalytic Converter	TWC+OC	- TWC & COC - Three Way Catalyst and Conventional Oxidation Catalyst
Throttle Body	TB	- TB - Throttle Body
Throttle Body Injection	TBI	- CFI - Central Fuel Injection
Throttle Position	TP	- TP - Throttle Position
Throttle Position Output	TPOUT	- TPOUT - Throttle Position Output
Torque Converter Clutch	TCC	- CCC - CCO - MCCC - Converter Clutch Control - Converter Clutch Override - Modulated Converter Clutch Control
Torque Converter Clutch solenoid	TCC solenoid	- LUS - MLUS - Lock Up Solenoid - Modulated Lock Up Solenoid
Transmission Control Module	TCM	- 4EAT Module
Transmission Control Switch	TCS	- TCS - Transmission Control Switch

J1930 Terminology List

New Term	New Acronyms/ Abbreviations	Old Acronyms/ Term
Transmission Control Indicator Lamp	TCIL	– TCIL – Transmission Control Indicator Lamp
Transmission Oil Temperature	TOT	– TOT – Transmission Oil Temperature
Transmission Range Reverse	TRR	– TSR – Transmission Select Switch Reverse
Transmission Range Overdrive	TROD	– TSOD – Transmission Select Switch Overdrive
Transmission Range Drive	TRD	– TSD – Transmission Select Switch Drive
Transmission Range Low	TRL	– TSL – Transmission Select Switch Low
Transmission Speed Sensor	TSS	– TSS – Transmission Speed Sensor
Turbocharger/Turbocharged	TC	– TC – Turbocharger/Turbocharged
Variable Control Relay Module	VCRM	– VRCM – Variable Relay Control Module
Vehicle Power	VPWR	– VPWR – Vehicle Power
Vehicle Speed Sensor	VSS	– VSS – Vehicle Speed Sensor
Wide Open Throttle	WOT	– WOT – Wide Open Throttle

Glossary

The glossary is a list of technical terms or acronyms and their definitions. It is not intended to be a dictionary of components and their functions. If you desire a detailed description of a specific component, refer to the related Service Manual Group.

2V: Two Valve.

4EAT: 4-speed Electronic Automatic Transaxle.

4V: Four Valve.

4x4 Low (4x4L): Indicates that the 4x4 Low range of the transfer case has been selected.

4x4L: 4x4 Low.

A/C: Air Conditioning.

A/T: Automatic Transmission/Transaxle.

A4LD: Automatic 4-speed Lock-up-convertor Drive transmission.

Absolute Pressure: The pressure referenced to a perfect vacuum.

ACC: Air Conditioning Clutch.

ACCS: Air Conditioning Cyclic Switch.

ACD: Air Conditioning Demand.

ACON: Air Conditioning On.

ACP: Air Conditioning Pressure.

Actuator: A mechanism for moving or controlling something indirectly instead of by hand.

Air Conditioning (A/C): A vehicular accessory system that modifies the passenger compartment air by cooling and drying the air.

Air Conditioning Clutch (ACC): Indicates status of the A/C clutch.

Air Conditioning Cyclic Switch (ACCS): Indicates status of the A/C cyclic switch.

Air Conditioning Demand (ACD): Indicates status of the A/C demand switch.

Air Conditioning On (ACON): Indicates status of the A/C system.

Air Conditioning Pressure (ACP): Indicates pressure in the A/C system.

AIR: Secondary Air Injection.

AIRB: Secondary Air Injection Bypass.

Glossary

AIRD: Secondary Air Injection Diverter.

Ambient Temperature: Temperature of the air surrounding an object.

AOD: Automatic Overdrive transmission.

AODE: Automatic Overdrive Electronic transmission.

AODE-W: Automatic Overdrive Electronic Wide-ratio transmission.

ARC: Automatic Ride Control.

ATDC: After Top Dead Center.

Automatic Ride Control (ARC): A system that automatically adjusts the suspension system to accommodate varying road and driving conditions.

AVOM: Analog Volt-Ohm Meter.

AX4S: Automatic 4-speed Synchronous transaxle.

AXODE: Automatic Overdrive Electronic transaxle.

B+: Battery Positive Voltage.

BARO: Barometric Pressure.

Barometric Pressure (BARO): *formerly BP* The pressure of the surrounding air at any given temperature and altitude.

Base Idle: Idle rpm determined by the throttle lever hardset on the throttle body with the IAC solenoid disconnected.

Base Timing: Spark advance in degrees before top dead center of the base engine without any control from the PCM or ICM.

Battery: An electrical storage device designed to produce a DC voltage by means of an electrochemical reaction.

Battery Positive Voltage (B+): *formerly VBATT or BATT+* The positive voltage from the battery or any circuit connected directly to the battery. Compare "Vehicle Power (VPWR)."

Blower (BLR): A device designed to supply a current of air at a moderate pressure. A blower usually consists of an impeller assembly, a motor and a suitable case. The blower case is designed as part of the ventilation system.

BLR: Blower.

BOO: Brake On/Off.

BPA: Bypass Air.

Glossary

Brake On/Off (BOO): Indicates the position of the brake pedal.

Breakout Box: A service tool that "tees" between the PCM and the 60-pin harness connector. The breakout box contains 60 test pins that can be probed for EEC system testing.

BTDC: Before Top Dead Center.

Bypass Air (BPA): Mechanical control of throttle bypass air.

CAC: Charge Air Cooler.

Camshaft: A shaft on which phased cams are mounted. The camshaft is used to regulate the opening and closing of the intake and exhaust valves.

Camshaft Position (CMP): *formerly CID sensor, hall sensor, or dual hall sensor* Indicates camshaft position.

Canister: A device designed to hold dry material. An evaporative emission canister contains activated charcoal which absorbs fuel vapors and holds them to be purged at an appropriate time.

Canister Purge (CANP): Controls purging of the EVAP canister.

CANP: Canister Purge.

Case Ground (CSE GND): PCM case ground.

Catalytic Convertor: An in-line, exhaust system device used to reduce the level of engine exhaust emissions.

CCD: Computer Controlled Dwell.

CCRM: Constant Control Relay Module.

CCS: Coast Clutch Solenoid.

Charge Air Cooler (CAC): *formerly Intercooler* A device that lowers the temperature of the pressurized intake air.

CID: Cylinder Identification.

Circuit: A complete electrical path or channel, usually includes the source of electrical energy. Circuit may also describe the electrical path between two or more components. May also be used with fluids, air or liquids.

CKP: Crankshaft Position.

Clutch: A mechanical device which uses mechanical, magnetic or friction type connections to facilitate engaging or disengaging of two shafts or rotating members.

Clutch Pedal Position (CPP): *formerly CES or CIS* Indicates clutch pedal position.

CMP: Camshaft Position.

Glossary

CO: Carbon Monoxide.

CO₂: Carbon Dioxide.

Coast Clutch Solenoid (CCS): Controls the coast clutch in the transmission.

Computed Timing: The total spark advance in degrees before top dead center. Equals base timing plus / minus an additional factor calculated by the PCM based on input from a number of sensors.

Constant Control Relay Module (CCRM): *formerly IRCM* A relay module that provides on-off control of various EEC components.

Continuous Memory: The portion of KAM used to store DTC's generated during Continuous Self-Test.

Continuous Self-Test: A continuous test of the EEC system conducted by the PCM whenever the vehicle is operating.

Control: A means or a device to direct and regulate a process or guide the operation of a machine, apparatus or system.

Coolant: A fluid used for heat transfer. Coolants usually contain additives such as rust inhibitors and antifreeze.

CPP: Clutch Pedal Position.

Crankshaft: The part of an engine which converts the reciprocating motion of the pistons to rotary motion.

Crankshaft Position (CKP): *formerly CPS or VRS* Indicates crankshaft position.

CSE GND: Case Ground.

Curb Idle: PCM controlled idle rpm.

Cylinder Identification (CID): Provides crankshaft or camshaft position information for fuel injection synchronization.

Data: General term for information, usually represented by numbers, letters, or symbols.

Data Link Connector (DLC): *formerly Self-Test connector* Connector providing access and / or control of the vehicle information, operating conditions, and diagnostic information.

Data Output Line (DOL): A circuit that sends certain information from the PCM to the instrument cluster.

Data Positive or Negative (DATA+ or DATA-): Circuits that carry data to the DLC, Message Center, or VCRM.

DATA+ or DATA-: Data Positive or Negative.

Daytime Running Lamps (DRL): A system that keeps the vehicle running lamps on at all times while the vehicle is operating.

Glossary

DEF: Defroster.

Defroster (DEF): An electrically heated device designed to remove frost, ice, or snow from the rear window of the vehicle.

DI: Distributor Ignition.

Diagnostic Test Mode (DTM): "formerly Self-Test mode" A level of capability in an On-Board Diagnostic (OBD) system. This may include different functional states to observe signals, a base level to read Diagnostic Trouble Codes, a monitor level which includes information on signal levels, bi-directional control with on / off board aids, and the ability to interface with remote diagnosis.

Diagnostic Trouble Code (DTC): "formerly Self-Test code" An alpha / numeric identifier for a fault condition identified by the On-Board Diagnostic System.

Differential Pressure: The pressure difference between two regions, such as between the intake manifold and the atmospheric pressures.

Differential Pressure Feedback EGR (DPFE): An EGR system that monitors differential EGR pressure across a remote orifice to control EGR flow.

Distributor: A mechanical device designed to switch a high voltage secondary circuit from an ignition coil to spark plugs in the proper firing sequence.

Distributor Ignition (DI): "formerly TFI, CBD, or Duraspark" A system in which the ignition coil secondary circuit is switched by a distributor in proper sequence to various spark plugs.

DLC: Data Link Connector.

DOHC: Dual Overhead Cam.

DOL: Data Output Line.

DPFE: Differential Pressure Feedback EGR.

DPI: Dual Plug Inhibit.

DRL: Daytime Running Lamps.

DTC: Diagnostic Trouble Code.

DTM: Diagnostic Test Mode.

Dual Overhead Cam (DOHC): An engine configuration that uses two camshafts positioned above the valves.

Dual Plug Inhibit (DPI): A circuit that inhibits the operation of the second plug in each cylinder on dual plug vehicles.

DVOM: Digital Volt-Ohm Meter.

Glossary

E4OD: Electronic 4-speed Overdrive transmission.

EAIR: Electronic Secondary Air Injection.

EAP: Electric Air Pump.

ECT: Engine Coolant Temperature.

EEC: Electronic Engine Control.

EEC-IV: Ford's fourth generation EEC system.

EGR: Exhaust Gas Recirculation.

EGR Pressure Transducer (EPT): An EGR system that uses a mechanical pressure transducer to control EGR flow.

EGR Temperature (EGRT): Sensing EGR function based on temperature change. Primarily in systems with mechanical flow control devices.

EGR Vacuum Regulator (EVR): Controls EGR flow by changing vacuum to the EGR valve.

EGR Valve Position (EVP): An EGR system that directly monitors EGR valve position to control EGR flow.

EGRT: EGR Temperature.

EI: Electronic Ignition.

Electric Air Pump (EAP): An electric pump used in EAIR systems.

Electronic Engine Control (EEC): The system that provides electronic control of engine operation.

Electronic Ignition (EI): *formerly DIS or EDIS* A system in which the ignition coil secondary circuit is dedicated to specific spark plugs without the use of a distributor. Ford currently has two types of EI systems, Low Data Rate (formerly DIS) and High Data Rate (formerly EDIS).

Electronic Pressure Control (EPC): Controls fluid pressure in the transmission.

Electronic Secondary Air Injection (EAIR): A pump-driven system for providing secondary air using an electric air pump.

Engine: A machine designed to convert thermal energy into mechanical energy to produce force or motion.

Engine Coolant Temperature (ECT): The temperature of the engine coolant.

Engine RPM (RPM): *formerly RPMS* Indicates engine rpm.

Engine Running Self-Test: A test of the EEC system conducted by the PCM with the engine running and the vehicle at rest.

Glossary

EPC: Electronic Pressure Control.

EPT: EGR Pressure Transducer.

EVAP: Evaporative Emission.

Evaporative Emission (EVAP): A system to prevent fuel vapor from escaping into the atmosphere. Typically includes a charcoal canister to store fuel vapors.

EVP: EGR Valve Position.

EVR: EGR Vacuum Regulator.

Exhaust Gas Recirculation (EGR): Reducing NOx emissions levels by adding exhaust gas to the incoming air / fuel mixture.

Failure Mode Effects Management (FMEM): An alternative vehicle operation strategy that protects vehicle function from the adverse effect of an EEC system failure.

Fan: A device designed to supply a current of air. A fan may also have a frame, motor, wiring harness and the like.

Fan Control (FC): "formerly EDF" Controlling the engine cooling fan.

FC: Fan Control.

FF: Flexible Fuel.

Flexible Fuel (FF): "formerly Flex Fuel or FFV" A system capable of using a variety of fuels for vehicle operation.

FMEM: Failure Mode Effects Management.

Four Valve (4V): Four valves, two intake and two exhaust, per cylinder.

FP: Fuel Pump.

FPM: Fuel Pump Monitor.

FPRC: Fuel Pressure Regulator Control.

Fuel: Any combustible substance burned to provide heat or power. Typical fuels include gasoline and diesel fuel. Other types of fuel include ethanol, methanol, natural gas, propane or in combination.

Fuel Pressure Regulator Control (FPRC): Controls the fuel pressure regulator. Used primarily to provide extra fuel during cold starts.

Fuel Pump (FP): A pump used to deliver fuel to the engine.

Fuel Pump Monitor (FPM): Monitors operation of the fuel pump.

Glossary

Fuel Rich/Lean: A qualitative evaluation of air / fuel ratio based on an A / F ratio known as stoichiometry or 14.7:1. In the EEC system, rich / lean is determined by a voltage signal from the HO2S. An excess of oxygen (lean) is indicated by an HO2S voltage of less than .4 volts; a rich condition is indicated by an HO2S voltage of greater than .6 volts.

FWD: Front Wheel Drive.

GCM: Governor Control Module.

GEN: Generator.

Generator (GEN): *formerly Alternator* A rotating machine designed to convert mechanical energy into electrical energy.

GND: Ground.

Goose: A brief opening and closing of the throttle (Dynamic Response test).

Governor: A device designed to automatically limit engine speed.

Governor Control Module (GCM): *formerly GEM* The module that controls the governor.

Ground (GND): An electrical conductor used as a common return for an electric circuit(s) and with a relative zero potential.

GVW: Gross Vehicle Weight.

Hall Effect: A process where current is passed through a small slice of semi-conductor material at the same time as a magnetic field to produce a small voltage in the semi-conductor.

Hard Fault: A fault currently present in the system.

Hardware Limited Operating Strategy (HLOS): A mode of operation where the PCM replaces output commands with fixed values in response to certain PCM malfunctions.

HC: Hydrocarbon.

HDL: Headlamp.

Headlamp (HDL): Indicates status of the headlamps.

Heated Oxygen Sensor (HO2S): *formerly HEGO* An Oxygen Sensor (O2S) that is electrically heated.

HFC: High Fan Control.

HFP: High Fuel Pump.

High Fan Control (HFC): *formerly HEDF* Controlling the high speed cooling fan.

High Fuel Pump (HFP): Controls the high speed fuel pump.

Glossary

High Swirl Combustion (HSC): A cylinder and piston configuration that causes swirling of the air / fuel mixture in the cylinder.

HLOS: Hardware Limited Operating Strategy.

HO: High Output.

HO2S: Heated Oxygen Sensor.

HSC: High Swirl Combustion.

IAC: Idle Air Control.

IAT: Intake Air Temperature.

ICM: Ignition Control Module.

Idle Air Control (IAC): *formerly ISC* Electrical control of throttle bypass air.

IDM: Ignition Diagnostic Monitor.

IFS: Inertia Fuel Shutoff.

IGN GND: Ignition Ground.

Ignition: System used to provide high voltage spark for internal combustion engines.

Ignition Control Module (ICM): *formerly TFI module, DIS module, or EDIS module* The module that controls the ignition system.

Ignition Diagnostic Monitor (IDM): Monitors operation of the ignition system.

IMRC: Intake Manifold Runner Control.

Inertia Fuel Shutoff (IFS): *formerly Inertia switch* An inertia system that shuts off the fuel delivery system when activated by predetermined force limits.

Injector: A device for delivering metered pressurized fuel to the intake system or the cylinders.

Intake Air: Air drawn through a cleaner and distributed to each cylinder for use in combustion.

Intake Air Temperature (IAT): *formerly ACT* The temperature of the intake air.

Intake Manifold Runner Control (IMRC): *formerly IAC* Controls airflow through runners in the intake manifold.

Intermittent: A fault that may not be present or identifiable at the present time.

KAM: Keep Alive Memory.

KAPWR: Keep Alive Power.

Glossary

Keep Alive Memory (KAM): A portion of the memory within the PCM that must maintain power even when the vehicle is not operating.

Keep Alive Power (KAPWR): Dedicated, unswitched power circuit that maintains KAM.

Key On Engine Off Self-Test: A test of the EEC system conducted by the PCM with power applied and the engine at rest.

Knock: The sharp metallic sound produced when two pressure fronts collide in the combustion chamber of an engine.

Knock Sensor (KS): Detects engine knock.

KOEO: Key On Engine Off.

KOER: Key On Engine Running.

KS: Knock Sensor.

L: Liters.

LFC: Low Fan Control.

LFP: Low Fuel Pump.

Low Fan Control (LFC): *formerly EDF* Controlling the low speed cooling fan.

Low Fuel Pump (LFP): Controls the low speed fuel pump.

M/T: Manual Transmission / Transaxle.

MAF: Mass Air Flow.

MAF RTN: Mass Air Flow Return.

Malfunction Indicator Lamp (MIL): A required on-board indicator to alert the driver of an emission related malfunction. May read either "CHECK ENGINE" or "SERVICE ENGINE SOON."

Manifold: A device designed to collect or distribute fluid, air or the like.

Manifold Absolute Pressure (MAP): The absolute pressure of the intake manifold air.

Manifold Absolute Pressure Per Altitude (MAPPA): *formerly GMAPPA* Manifold absolute pressure value adjusted for altitude.

Manual Lever Position (MLP): Indicates the position of the manual lever in electronically controlled transmissions.

MAP: Manifold Absolute Pressure.

Glossary

MAPPA: Manifold Absolute Pressure Per Altitude.

Mass Air Flow (MAF): A system which provides information on the mass flow rate of the intake air to the engine.

Mass Air Flow Return (MAF RTN): A return circuit for the MAF sensor.

MFI: Multiport Fuel Injection.

MIL: Malfunction Indicator Lamp.

MLP: Manual Lever Position.

Module: A self-contained group of electrical / electronic components, which is designed as a single replaceable unit.

Monitor Box: An optional EEC system test device which connects in series with the PCM and its harness and permits measurements of PCM inputs and outputs.

Multiport Fuel Injection (MFI): *formerly EFI* A fuel-delivery system in which each cylinder is individually fueled.

NAAO: North American Automotive Operations.

NC: Normally Closed.

NO: Normally Open.

NOx: Nitrous Oxides.

O2S: Oxygen Sensor.

OASIS: On-line Automotive Service Information System.

OBD: On-Board Diagnostic.

OC: Oxidation Catalytic Convertor.

OCT ADJ: Octane Adjust.

Octane Adjust (OCT ADJ): Can alter engine strategy to compensate for changes in fuel octane.

OHC: Overhead Cam.

On-Board Diagnostic (OBD): A system that monitors some or all computer input and control signals. Signal(s) outside of the predetermined limits imply a fault in the system or in a related system.

Open Circuit: A circuit which does not provide a complete path for flow of current.

Overhead Cam (OHC): An engine configuration that uses a single camshaft positioned above the valves.

Glossary

Overlay Card: A plastic card used with the monitor box to identify EEC signals for each engine. The card also programs the monitor box for auto mode measurements.

Oxidation Catalytic Converter (OC): *formerly COC* A catalytic converter system that reduces levels of HC and CO.

Oxygen Sensor (O2S): *formerly EGO* A sensor which detects oxygen (O2) content in the exhaust gases.

PAIR: Pulsed Secondary Air Injection.

Park / Neutral Position (PNP): *formerly NDS, NGS, or TSN* Indicates the selected non-drive modes of the transmission.

PCM: Powertrain Control Module.

PCV: Positive Crankcase Ventilation.

PFE: Pressure Feedback EGR.

PIP: Profile Ignition Pickup.

PNP: Park / Neutral Position.

Positive Crankcase Ventilation (PCV): A system that vents vapors from the crankcase.

Power Ground (PWR GND): The main ground circuit in the EEC system.

Power Steering: A system which provides additional force to the steering mechanism, reducing the driver's steering effort.

Power Steering Pressure (PSP): *formerly PSPS* Indicates the pressure in the power steering system.

Powertrain: The elements of a vehicle by which motive power is generated and transmitted to the driven axles.

Powertrain Control Module (PCM): *formerly EEC processor, ECA, ECM, or ECU* The module that controls the EEC system.

Pressure Feedback EGR (PFE): An EGR system that monitors EGR pressure across a remote orifice to control EGR flow.

Profile Ignition Pickup (PIP): Provides crankshaft or camshaft position information for ignition synchronization.

Programmable Speedometer / Odometer Module (PSOM): A module that processes vehicle speed information for use in various electronic systems. The PSOM can be programmed to accommodate various tire and axle combinations.

PSOM: Programmable Speedometer / Odometer Module.

PSP: Power Steering Pressure.

Glossary

Pulsed Secondary Air Injection (PAIR): *formerly Thermactor II* A pulse-driven system for providing secondary air without an air pump by using the engine exhaust system pressure fluctuations or pulses.

Pump: A device used to raise, transfer, or compress fluids by suction, pressure or both.

PWR GND: Power Ground.

QSB: Quarterly Service Bulletin.

Quick Test: A functional diagnostic test of the EEC system consisting of vehicle preparation and hookup, KOEO and KOER Self-Tests.

RABS: Rear Antilock Brake System.

Recorder: An optional EEC system test device which works jointly with the monitor box. It allows up to eight EEC signals to be electronically recorded over a 50 second period.

REDOX: Reduction Oxidation Catalytic Convertor.

Reduction Oxidation Catalytic Convertor (REDOX): A catalytic convertor system that is designed to operate at high temperatures. At low temperatures, it reduces levels of HC and CO. At high temperatures, it reduces levels of HC, CO, and NOx.

Reference Voltage (VREF): A dedicated circuit that provides a 5.0 volt signal used as a reference by certain sensors.

Relay: A generally electromechanical device in which connections in one circuit are opened or closed by changes in another circuit.

Relay Module (RM): A module containing two or more relays.

Return (RTN): A dedicated sensor ground circuit.

RM: Relay Module.

RPM: Engine RPM.

RTN: Return.

RWD: Rear Wheel Drive.

SC: Supercharged.

Scan Tool (ST): A device that interfaces with and communicates information on a data link.

SD: Speed Density.

Secondary Air: Air provided to the exhaust system.

Glossary

Secondary Air Injection (AIR): *formerly Thermactor or Air Management* A pump driven system for providing secondary air.

Secondary Air Injection Bypass (AIRB): *formerly TAB or AM1* Vents secondary air to atmosphere.

Secondary Air Injection Diverter (AIRD): *formerly TAD or AM2* Diverts secondary air to either the catalyst or the exhaust manifold.

Self-Test: One of three subsets of the EEC system Quick Test; Key On Engine Off, Engine Running, and Continuous.

Self-Test Input (STI): A dedicated circuit used to initiate the PCM Self-Test.

Self-Test Output (STO): A dedicated circuit used to output PCM diagnostic information pulses.

Sensor: The generic name for a device that senses either the absolute value or a change in a physical quantity such as temperature, pressure or flow rate, and converts that change into an electrical quantity signal.

Sequential Multiport Fuel Injection (SFI): *formerly SEFI* A multiport fuel delivery system in which each injector is individually energized and timed relative to its cylinder intake event. Normally fuel is delivered to each cylinder once per two crankshaft revolutions in four cycle engines and once per crankshaft revolution in two cycle engines.

SFI: Sequential Multiport Fuel Injection.

Shift Indicator Lamp (SIL): A lamp that indicates the preferred shift points for manual transmission / transaxle vehicles.

Shift Solenoid (SS): Controls shifting in an automatic transmission / transaxle.

SHO: Super High Output.

Short Circuit: An undesirable connection between a circuit and any other point.

SIG RTN: Signal Return.

Signal Return (SIG RTN): A dedicated sensor ground circuit that is common to two or more sensors.

SIL: Shift Indicator Lamp.

Solenoid: A device consisting of an electrical coil which, when energized, produces a magnetic field in a plunger which is pulled to a central position. A solenoid may be used as an actuator in a valve or switch.

Spark Output (SPOUT): Desired spark timing information sent from the PCM to the ICM.

Speed: The magnitude of velocity (regardless of direction).

Speed Density (SD): A system which infers information from various sensor inputs on the flow rate of the intake air to the engine.

Glossary

SPOUT: Spark Output.

SS: Shift Solenoid.

ST: Scan Tool.

STI: Self-Test Input.

STO: Self-Test Output.

Supercharged (SC): An intake system that utilizes a supercharger.

Supercharger: A mechanically driven device that pressurizes the intake air, thereby increasing the density of charge air and the consequent power output from a given engine displacement.

Switch: A device for making breaking, or changing the connections in an electrical circuit.

System: A group of interacting mechanical or electrical components serving a common purpose.

TACH: Tachometer.

Tachometer (TACH): A circuit that provides input for an electronic tachometer display.

TB: Throttle Body.

TCC: Torque Converter Clutch.

TCIL: Transmission Control Indicator Lamp.

TCS: Transmission Control Switch.

Test: A procedure whereby the performance of a product is measured under various conditions.

Three Way + Oxidation Catalytic Converter (TWC+OC):*formerly TWC & COC* A catalytic converter system that has both Three Way Catalyst (TWC) and Oxidation Catalyst (OC). Usually secondary air is introduced between the two catalysts.

Three Way Catalytic Converter (TWC): A catalytic converter system that reduces levels of HC, CO, and NOx.

Throttle: A valve for regulating the supply of a fluid, usually air or an air / fuel mix, to an engine.

Throttle Body (TB): The device containing the throttle.

Throttle Position (TP): Indicates the position of the throttle plate.

Throttle Position Output (TPOUT): Communicates throttle position information from the PCM to the GCM.

Timing: Relationship between spark plug firing and piston position usually expressed in crankshaft degrees before (BTDC) or after (ATDC) top dead center of the compression stroke.

Glossary

Torque Converter: A device which by its design multiplies the torque in a fluid coupling between an engine and transmission / transaxle.

Torque Converter Clutch (TCC): *formerly CCC, CCO, LUS, MLUS, or MCCC* Controlling the torque converter clutch.

TOT: Transmission Oil Temperature.

TP: Throttle Position.

TPOUT: Throttle Position Output.

TR: Transmission Range.

Transaxle: A device consisting of a transmission and axle drive gears assembled in the same case. Compare "Transmission."

Transmission: A device which selectively increases or decreases the ratio of relative rotation between its input and output shafts. Compare "Transaxle."

Transmission Control Indicator Lamp (TCIL): Indicates that the TCS has been activated.

Transmission Control Switch (TCS): Modifies the operation of electronically controlled transmissions.

Transmission Oil Temperature (TOT): Indicates temperature of transmission fluid.

Transmission Range (TR): The range in which the transmission is operating.

Transmission Range Drive (TRD): *formerly TSD* Indicates operator selection of the Drive transmission range.

Transmission Range Low (TRL): *formerly TSL* Indicates operator selection of the Low transmission range.

Transmission Range Overdrive (TOD): *formerly TSOD* Indicates operator selection of the Overdrive transmission range.

Transmission Range Reverse (TRR): *formerly TSR* Indicates operator selection of the Reverse transmission range.

Transmission Speed Sensor (TSS): Indicates rotational speed of the transmission output shaft or turbine shaft.

TRD: Transmission Range Drive.

TRL: Transmission Range Low.

TOD: Transmission Range Overdrive.

TRR: Transmission Range Reverse.

TSB: Technical Service Bulletin.

Glossary

TSS: Transmission Speed Sensor.

TWC: Three Way Catalytic Convertor.

TWC+OC: Three Way + Oxidation Catalytic Convertor.

Two Valve (2V): Two valves, one intake and one exhaust, per cylinder.

Valve: A device by which the flow of liquid, gas, vacuum, or loose material in bulk may be started, stopped or regulated by a movable part that opens, shuts or partially obstructs one or more ports or passageways. A "Valve" is also the moveable part of such a device.

Variable Control Relay Module (VCRM): A relay module that provides variable control of various EEC components.

VCRM: Variable Control Relay Module.

VECI Label: Vehicle Emission Control Information Label.

Vehicle Power (VPWR): A switched circuit that provides power to the EEC system. Compare "Battery Positive Voltage (B+)."

Vehicle Speed Sensor (VSS): A sensor which provides vehicle speed information.

VOM: Volt-Ohm Meter.

VPWR: Vehicle Power.

VREF: Reference Voltage.

VSS: Vehicle Speed Sensor.

WAC: Wide Open Throttle A/C Cutoff.

Warm Up Oxidation Catalytic Convertor (WU-OC): A catalytic convertor system designed to lower HC and CO emissions during engine warm up. Usually located in or near the exhaust manifold.

Warm Up Three-Way Catalytic Convertor (WU-TWC): A catalytic convertor system designed to lower HC, CO, and NOx emissions during engine warm up. Usually located in or near the exhaust manifold.

Wide Open Throttle (WOT): A condition of maximum airflow through the throttle body.

Wide Open Throttle A/C Cutoff (WAC): Turns A/C system off during wide open throttle or certain other operating conditions.

WOT: Wide Open Throttle.

WU-OC: Warm Up Oxidation Catalytic Convertor.

WU-TWC: Warm Up Three-Way Catalytic Convertor.

Alphabetical Index

A

Accelerator Pedal and Linkage	10-02-1
Accelerator Cable Bracket	10-02-2
Accelerator Pedal and Shaft Assembly	10-02-2
Diagnosis	10-02-1
Linkage	10-02-1
Removal & Installation	10-02-2
Specifications	10-02-7
Throttle Cable	10-02-3
Air Conditioning System	12-03A-1
A/C Plenum Chamber	12-03A-49
Adjustments	12-03A-72
Ambient Sensor Assy	12-03A-26
Blend Door Actuator	12-03A-31
Blend Door Actuator, Electric	12-03A-7
Blower Motor & Wheel Assy	12-03A-46
Blower Speed Controller	12-03A-6
Blower Switch	12-03A-30
Cold Engine Lock Out Switch (CELO)	12-03A-7
.....	12-03A-30
Components	12-03A-20
Condenser	12-03A-62
Constant Control Relay Module (CCRM)	12-03A-11
Control Assembly	12-03A-4
.....	12-03A-20
Defroster Nozzle & Demister Duct/Hoses	12-03A-52
Description & Operation	12-03A-1
Diagnosis & Testing	12-03A-22
Evaporator Case Assy	12-03A-33
Evaporator Core	12-03A-37
Fixed Orifice Tube	12-03A-61
Heater Core	12-03A-43
Heater Hoses	12-03A-66
Input Sensors	12-03A-5
Normal System Operation (Automatic)	12-03A-9
Pressure Relief Valve	12-03A-9
Recirc Duct Assembly	12-03A-46
Refrigerant Lines	12-03A-63
Register Ducts	12-03A-53
Removal & Installation	12-03A-23
Service Tools	12-03A-75
Specifications	12-03A-74
Spring Lock Coupling	12-03A-62
Suction Accumulator/Drier	12-03A-58
Sunload Sensor Assembly	12-03A-26
System Airflow	12-03A-16
Temperature Control	12-03A-16
Air Intake System	03-12-1
Air Cleaner	03-12-2
Air Filter Element—Replacement	03-12-1
Air Inlet Resonator	03-12-6
Description	03-12-1
Mass Air Flow (MAF) Sensor	03-12-6
Removal & Installation	03-12-1
Specifications	03-12-6
Antenna	15-02-1
Antenna Cable & Base	15-02-2
Antenna with Cable & Mast	15-02-2
Antennas, Manual and Power	15-02-2
Automatic Power Antenna Module	15-02-5
Diagnosis & Testing	15-02-1
Mast, Power	15-02-5
Removal & Installation	15-02-2
Specifications	15-02-5
Audio Systems—Service	15-00-1
Description and Operation	15-00-1
Diagnosis and Testing	15-00-3
Radio	15-00-1
Service Tools	15-00-27
B	
Battery	14-01-1
Adding Water	14-01-9
Battery Charging	14-01-4
Battery Cleaning	14-01-8
Battery Drain Test	14-01-3
Battery Tray	14-01-7
Cleaning and Inspection	14-01-8
Maintenance	14-01-8
Removal and Installation	14-01-5
Service Tools	14-01-9
Specifications	14-01-9
Testing	14-01-1
Battery and Charging System—Service	14-00-1
Adjustments	14-00-4
Battery Check	14-00-3
Charging System Test	14-00-3
Description & Operation	14-00-1
Diagnosis	14-00-2
Fuse Link	14-00-2

Alphabetical Index

Preliminary Checks	14-00-2	Diagnosis & Testing	06-09-5
Service Tools	14-00-4	Hydraulic Control Unit	06-09-2
Body Panels, Front End	01-02-1		06-09-65
Adjustments	01-02-8	Master Cylinder	06-09-2
Cowl Vent Screen	01-02-6		06-09-65
Fender, Front	01-02-5	Master Cylinder Reservoir Checking & Filling	06-09-63
Hood	01-02-1	On-Board Diagnostics	06-09-5
Hood Alignment	01-02-8	Operation	06-09-4
Hood Bumpers	01-02-9	Pedal Travel Switch	06-09-4
Hood Hinge	01-02-1		06-09-69
Hood Lift Assist & Support (Gas Cylinder)	01-02-1		06-09-70
Radiator Grille	01-02-2	Removal & Installation	06-09-63
Removal & Installation	01-02-1	Service Tools	06-09-71
Specifications	01-02-9	Specifications	06-09-71
Splash Shield & Insulator	01-02-4	Vacuum Booster	06-09-1
Stone Deflector, Front	01-02-2	Warning Indicator Functions	06-09-5
Body—Service	01-00-1	Wheel Sensors	06-09-3
Adjustments	01-00-9	Brake System, Hydraulic	06-06-1
Appearance Protection	01-00-8	Adjustments	06-06-11
Body Alignment, Unitized	01-00-9	Brake Master Cylinder Reservoir	06-06-6
Body Maintenance	01-00-7	Brake Pedal	06-06-8
Body Misalignment Check	01-00-9	Brake Pressure Control Valve	06-06-6
Body Sealer Types	01-00-2		06-06-13
Cleaning & Inspection	01-00-7	Brake System, Anti-Lock	06-06-1
Diagnosis & Testing	01-00-2	Brake System, Dual	06-06-2
Dust & Water Leaks	01-00-2	Brake Vacuum Booster Push Rod-To-Master Cylinder	06-06-11
Floorpan Plug & Grommets	01-00-7	Fluid Level Indicator	06-06-6
Lower Body Side Stone Protection Vinyl Service	01-00-2	Hydraulic System Bleeding	06-06-12
Paint Repair	01-00-2	Master Cylinder	06-06-1
Rattle Elimination	01-00-7		06-06-6
Repair	01-00-4		06-06-10
Service Tools	01-00-12	Overhaul	06-06-10
Sheet Metal	01-00-3	Pressure Control Valves	06-06-2
Trim	01-00-7	Removal & Installation	06-06-6
Underbody Dimensions	01-00-10	Service Tools	06-06-14
Underbody Misalignment Check	01-00-9	Specifications	06-06-13
Vinyl Insert Moulding Care	01-00-7	Brake System, Parking	06-05-1
Brake System, Anti-Lock	06-09-1	Adjustments	06-05-6
ABS Module	06-09-3	Cable, Front	06-05-4
	06-09-6	Cables, Rear	06-05-5
	06-09-66	Control Assembly	06-05-3
Acid Shield	06-09-2	Description	06-05-1
Adjustments	06-09-70	Diagnosis & Testing	06-05-3
Brake Booster Assembly	06-09-63	Parking Brake Manual Release Handle & Cable Assembly	06-05-4
Brake System Bleeding	06-09-5	Removal & Installation	06-05-3
Description	06-09-1		

Alphabetical Index

Service Tools	06-05-8
Specifications	06-05-8
Vacuum Release Parking Brake	06-05-3
Brake System, Power	06-07-1
Adjustments	06-07-4
Brake Booster-to-Master Cylinder Push Rod ...	06-07-4
Brake Booster, Vacuum	06-07-1
Description	06-07-1
Diagnosis & Testing	06-07-1
Removal & Installation	06-07-1
Specifications	06-07-5
Brake System—Service	06-00-1
Brake Hose	06-00-15
Brake Pedal Free Height Measurements	06-00-3
Brake Pedal Travel Measurement	06-00-3
Brake Tubing.....	06-00-14
Cleaning & Inspection	06-00-13
Description	06-00-1
Diagnosis & Testing	06-00-2
Disc Brakes	06-00-14
Drum Brakes	06-00-14
Hydraulic System	06-00-2
Master Cylinder	06-00-2
Power Brake Functional Test	06-00-4
Service Precautions	06-00-13
Service Tools	06-00-16
Specifications	06-00-16
Brakes, Front Disc	06-03-1
Brake Lining	06-03-4
Brake Rotor	06-03-5
Caliper Assembly	06-03-3
Description	06-03-1
Overhaul	06-03-6
Removal & Installation	06-03-3
Rotor Service	06-03-8
Rotor Splash Shield	06-03-5
Service Precautions	06-03-3
Service Tools	06-03-10
Specifications	06-03-10
Brakes, Rear Disc	06-04-1
Anchor Plate	06-04-4
	06-04-9
Brake Adapter	06-04-4
	06-04-11
Brake Shoe & Lining	06-04-7
Caliper Assembly	06-04-4
	06-04-5
	06-04-11
Description	06-04-1
Overhaul	06-04-11
Removal & Installation	06-04-5
Rotor	06-04-8
Rotor Refinishing	06-04-13
Rotor Splash Shield	06-04-9
Service Tools	06-04-14
Specifications	06-04-13
Brakes, Rear Drum	06-02-1
Adjustments	06-02-9
Bearing Hub Unit Assembly	06-02-3
Brake Backing Plate	06-02-7
Brake Drum Refinishing	06-02-7
Brake Drums	06-02-3
Brake Shoe Relining	06-02-8
Brake Shoes	06-02-4
Cleaning & Inspection	06-02-7
Removal & Installation	06-02-3
Service Tools	06-02-10
Specifications	06-02-10
Wheel Cylinder	06-02-6
Bumpers	01-19-1
Bumper Cover	01-19-10
Bumper, Front & Rear	01-19-6
Bumper Isolator & Bracket	01-19-10
Bumper Stone Deflector	01-19-10
Plastic Bumper Cover	01-19-11
Removal & Installation	01-19-1
Repair	01-19-11
Specifications	01-19-13
C	
Charging System Gauge/Warning Indicator	13-04-1
Bulb, Indicator	13-04-2
Description & Operation	13-04-1
Diagnosis & Testing	13-04-1
Removal & Installation	13-04-2
Climate Control System—Service	12-00-1
Adding Refrigerant Oil	12-00-63
Basic Principles	12-00-2
Checking for Leaks	12-00-20
Clutch Cycling Pressure Switch	12-00-10
Compressor & Magnetic Clutch Assembly	12-00-7
Compressor Clutch Circuit	12-00-37

C

Charging System Gauge/Warning Indicator	13-04-1
Bulb, Indicator	13-04-2
Description & Operation	13-04-1
Diagnosis & Testing	13-04-1
Removal & Installation	13-04-2
Climate Control System—Service	12-00-1
Adding Refrigerant Oil	12-00-63
Basic Principles	12-00-2
Checking for Leaks	12-00-20
Clutch Cycling Pressure Switch	12-00-10
Compressor & Magnetic Clutch Assembly	12-00-7
Compressor Clutch Circuit	12-00-37

Alphabetical Index

Condenser	12-00-7
Description & Operation	12-00-4
Diagnosis & Testing	12-00-12
Evaporator Core	12-00-9
Fixed Orifice Tube	12-00-9
General Information	12-00-3
Heater Core Leak Test	12-00-51
Refrigerant Recovery	12-00-59
Refrigerant System Service	12-00-56
Refrigerant Systems	12-00-6
	12-00-15
Refrigerant-134a (R-134a) Systems	12-00-56
Refrigerant-12 (R-12) System	12-00-56
Safety Precautions	12-00-3
Service Gauge Port Valves	12-00-10
Service Precautions	12-00-3
Service Tools	12-00-64
Specifications	12-00-64
Spring Lock Coupling	12-00-7
Suction Accumulator/Drier	12-00-9
Vacuum System	12-00-13
Clock	13-07-1
Description & Operation	13-07-1
Diagnosis & Testing	13-07-1
Removal & Installation	13-07-3
Setting Time	13-07-1
Clutch Controls	08-02-1
Clutch Cable Assembly	08-02-7
Clutch Control System, Self-Adjusting	08-02-1
Clutch Pedal Quadrant & Pawl Assembly	08-02-4
Description & Operation	08-02-1
Diagnosis	08-02-3
Removal & Installation	08-02-4
Specifications	08-02-9
Starter/Clutch Interlock Switch	08-02-2
	08-02-8
Testing	08-02-2
Clutch/Pressure Plate	08-01-1
Clutch Disc and Pressure Plate	08-01-4
Description & Operation	08-01-1
Release Bearing	08-01-2
Release Fork & Lever	08-01-3
Removal & Installation	08-01-2
Service Tools	08-01-4
Specifications	08-01-4
Clutch System—Service	08-00-1
Clutch Disc	08-00-4

Clutch Release Bearing	08-00-4
Description	08-00-1
Diagnosis	08-00-1
Dowels, Engine	08-00-3
Pressure Plate and Cover	08-00-5
Removal & Installation	08-00-3
Compressor and Clutch—FX-15	12-03C-1
Clutch Field Coil	12-03C-6
Clutch Hub & Pulley	12-03C-4
Compressor External Leak Test	12-03C-2
Compressor Manifold Leak Test	12-03C-2
Compressor Rotating Torque Check	12-03C-3
Description & Operation	12-03C-1
Diagnosis & Testing	12-03C-2
Maintenance	12-03C-10
Manifold & Hose Assembly	12-03C-4
Removal & Installation	12-03C-3
Service Tools	12-03C-11
Shaft Seal	12-03C-7
Specifications	12-03C-11
Compressor and Clutch—10P15F	12-03B-1
Clutch Field Coil	12-03B-6
Clutch Hub & Pulley	12-03B-4
Clutch Pulley Bearing	12-03B-6
Compressor—Out of Vehicle	12-03B-10
Description & Operation	12-03B-1
Maintenance	12-03B-2
Major Service Operations	12-03B-10
Removal & Installation	12-03B-3
Service Tools	12-03B-16
Shaft Seal & Seat	12-03B-6
Specifications	12-03B-15
Suction or Discharge Manifold	12-03B-3
Testing	12-03B-2

D

Distributor Ignition (DI)	03-07A-1
Cleaning & Inspection	03-07A-13
Description	03-07A-1
Distributor Assembly	03-07A-4
Distributor Cap	03-07A-3
Distributor Rotor	03-07A-3
Ignition Control Module (ICM)	03-07A-9
Operation	03-07A-1

Alphabetical Index

Removal & Installation	03-07A-3
Service Tools	03-07A-14
Spark Plug Hole Taperset Installation	03-07A-13
Spark Plug Inspection Chart	03-07A-12
Spark Plug Wires	03-07A-10
	03-07A-13
Spark Plugs	03-07A-11
Specifications	03-07A-14
Tachometer Connection	03-07A-13
Doors, Deck Lid and Liftgate	01-03-1
Adjustments	01-03-8
Door Alignment	01-03-8
Door Hinge Check	01-03-4
Doors	01-03-2
Hinge	01-03-2
Hinge, Liftgate	01-03-9
Liftgate	01-03-6
Lubrication	01-03-1
Luggage Compartment Deck Lid	01-03-6
Luggage Compartment Deck Lid	
Weatherstrip	01-03-6
Removal & Installation	01-03-2
Service Tools	01-03-9
Specifications	01-03-9
Torsion Bar, Deck Lid Hinge	01-03-8
Torsion Bar Loading	01-03-9
Weatherstrips	01-03-4
Drive Belts, Accessory	03-05-1
Adjustments	03-05-2
Belt Cracking/Chunking	03-05-1
Belt Noise	03-05-2
Description	03-05-1
Diagnosis	03-05-1
Generator Belt	03-05-2
Power Steering, A/C Belt	03-05-4
Removal & Installation	03-05-3
Service Tools	03-05-5
Specifications	03-05-5

E

Electrical Devices—Miscellaneous	18-04-1
Ash Receptacle & Retainer Assembly	18-04-1
Cigar Lighter	18-04-2
Diagnosis	18-04-1

Electronic Ignition (EI) — High Data Rate System,	
Flexible Fuel (FF)	03-07C-1
Adjustments	03-07C-8
Camshaft Position Sensor (CMP)	03-07C-3
Cleaning & Inspection	03-07C-7
Coil Pack Bracket	03-07C-5
Crankshaft Position (CKP) Sensor Assembly	03-07C-4
Description & Operation	03-07C-1
Diagnosis & Testing	03-07C-4
Electronic Ignition (EI) Coil Pack	03-07C-5
Ignition Coil Pack	03-07C-3
	03-07C-7
Ignition Control Module (ICM)	03-07C-2
	03-07C-5
Ignition Control Module (ICM) Bracket	03-07C-6
Removal & Installation	03-07C-4
Service Tools	03-07C-8
Spark Plug Wires	03-07C-6
	03-07C-7
Specifications	03-07C-8
Electronic Ignition (EI) System	03-07B-1
Adjustments	03-07B-8
Camshaft Position (CMP) Sensor	03-07B-2
Camshaft Position (CMP) Sensor	
Assembly	03-07B-5
Cleaning & Inspection	03-07B-8
Crankshaft Position (CKP) Sensor	03-07B-1
Crankshaft Position (CKP) Sensor	
Assembly	03-07B-5
Description & Operation	03-07B-1
Diagnosis & Testing	03-07B-5
Ignition Coil Pack	03-07B-2
	03-07B-6
Ignition Coils	03-07B-8
Ignition Control Module (ICM)	03-07B-2
	03-07B-6
Ignition Diagnostic Monitor	03-07B-2
Removal & Installation	03-07B-5
Service Tools	03-07B-8
Spark Plug Wires	03-07B-7
	03-07B-8
Specifications	03-07B-8
Engine and Transaxle Mounting	02-03-1
Engine Mounts, 3.0L EFI Engine	02-03-4
Engine Mounts, 3.0L SHO Engine	02-03-1
Engine Mounts, 3.8L EFI Engine	02-03-6
Insulator, LH & Support Assembly No. 1A	02-03-2
Insulator, RH Front, No.2 and/or RH Rear,	
No.3	02-03-4

Alphabetical Index

Removal & Installation	02-03-1	Main & Connecting Rod Bearings	03-00-16
Service Tools	02-03-9	Oil Pan	03-00-23
Specifications	02-03-8	Oil Pump	03-00-22
Transaxle Hydramount Assembly, LH	02-03-7	Overhaul	03-00-13
Engine Cooling	03-03-1	Pistons, Pins & Rings	03-00-18
Cleaning	03-03-32	Push Rods	03-00-29
Cooling Fan	03-03-6	Service Tools	03-00-30
Cooling System Pressure Test	03-03-10	Tappets, Hydraulic	03-00-21
Description & Operation	03-03-1	Valve Clearance	03-00-11
Diagnosis & Testing	03-03-9	Valve Rocker Arm	03-00-29
Draincock Replacement	03-03-31	Valves, Refacing	03-00-27
Fan, Motor and Constant Control Relay			
Module (CCRM)	03-03-16	Engine, 3.0L/3.0L FF	03-01A-1
Inspection	03-03-33	Camshaft	03-01A-46
Oil Cooler Transfer or Replacement	03-03-30	Camshaft Bearings	03-01A-50
Radiator	03-03-10	Connecting Rod Bearings	03-01A-36
Radiator Core	03-03-32	Crankshaft	03-01A-44
Radiator Hose	03-03-27	Crankshaft Pulley/Damper/Front Oil Seal	03-01A-6
Radiator Pressure Cap	03-03-33	Crankshaft Rear Oil Seal	03-01A-2
Radiator Tank	03-03-28	Cylinder Heads	03-01A-17
Removal & Installation	03-03-10		03-01A-63
Service Procedures	03-03-32	Description & Operation	03-01A-1
Service Tools	03-03-37	Disassembly & Assembly	03-01A-51
Specifications	03-03-36	EGR Valve, Tube & Fitting/Orifice	03-01A-30
Testing	03-03-10	Emission Calibration Label	03-01A-2
Thermostat	03-03-9	Engine Assembly	03-01A-38
	03-03-20	Engine Identification	03-01A-1
Water Pump	03-03-22	Engine Lifting/Support Points	03-01A-38
Water Pump Inlet Tube Assembly	03-03-28	Exhaust Manifold, LH/RH	03-01A-33
Engine—Service	03-00-1	Flywheel	03-01A-43
Adjustments	03-00-11	Front Cover	03-01A-8
Camshaft	03-00-21	Inspection	03-01A-63
Camshaft End Play	03-00-9	Intake Manifold	03-01A-14
Camshaft Lobe Lift	03-00-8	In-Vehicle Service	03-01A-2
Connecting Rods	03-00-20	Main Bearing Inserts	03-01A-24
Core Plugs	03-00-15	Oil Pan & Oil Pump	03-01A-25
Crankshaft	03-00-17	Pistons & Connecting Rods	03-01A-24
Crankshaft End Play	03-00-10		03-01A-61
Cylinder Block	03-00-13	Removal & Installation	03-01A-38
Cylinder Heads	03-00-23	Rocker Arm Cover	03-01A-12
Diagnosis & Testing	03-00-3	Sensors	03-01A-27
Engine Identification	03-00-2	Service Tools	03-01A-68
Engine Oil Leaks	03-00-3	Specifications	03-01A-65
Exhaust Emission Control System	03-00-2	Subassemblies	03-01A-61
Exhaust Manifolds	03-00-30	Tappet	03-01A-22
Flywheel	03-00-30	Thermostat	03-01A-16
Hydraulic Tappet/Lash Adjuster	03-00-8	Throttle Body	03-01A-3
Intake Manifolds	03-00-30	Timing Chain	03-01A-32
		Water Pump	03-01A-10

Alphabetical Index

Testing	11-00-2
Subframe	02-01-1
Removal & Installation	02-01-1
Service Tools	02-01-3
Specifications	02-01-3
Suspension and Wheel Ends, Front	04-01-1
Adjustments	04-01-17
Component Replacement	04-01-2
Components	04-01-2
Control Arm, Lower	04-01-6
Control Arm-to-Tension Strut Insulator, Lower	04-01-7
Description	04-01-1
Hub & Wheel Bearings	04-01-9
Inner Pivot Bushing	04-01-6
Removal & Installation	04-01-6
Service Tools	04-01-18
Shock Absorber Strut, Spring, Bearing and Seat Assembly and Upper Mount	04-01-12
Specifications	04-01-17
Stabilizer Bar/Link Assembly and/or Insulators	04-01-8
Steering Knuckle	04-01-16
Suspension Fasteners	04-01-3
Tension Strut-to-Subframe Insulators	04-01-8
Wheel Assembly	04-01-5
Wheel Bearings	04-01-17
Suspension and Wheel Ends, Rear	04-02-1
Anti-Lock Sensor Ring	04-02-30
Bearing & Hub Assembly, Disc Brakes	04-02-29
Bearing & Hub Assembly, Drum Brakes	04-02-29
Component Replacement	04-02-4
Components	04-02-3
Control Arm	04-02-28
Description & Operation	04-02-1
Removal & Installation	04-02-12
Service Tools	04-02-32
Shock Absorber	04-02-12
Specifications	04-02-31
Springs	04-02-25
Stabilizer Bar, Insulators and Link Assembly	04-02-16
Suspension Arm, Lower	04-02-21
Suspension Arms, Upper	04-02-19
Tension Strut	04-02-21
Wheel Assembly	04-02-8
Suspension—Service	04-00-1
Adjustments	04-00-3

Ball Joint, Lower	04-00-2
Camber, Rear	04-00-7
Caster & Camber, Front	04-00-5
Service Tools	04-00-11
Shock Absorber Checks	04-00-2
Specifications	04-00-9
Steering Pull/Drift	04-00-7
Suspension, Front	04-00-1
Suspension, Rear	04-00-2
Toe, Front	04-00-6
Toe, Rear	04-00-9
Wheel Alignment, Rear	04-00-9
Wheel Turning Angle, Front	04-00-7

T

Tachometer, Oil Pressure, Coolant Temperature

Gauges/Warning Indicators	13-05-1
Coolant Temperature Sending Unit	13-05-8
Description & Operation	13-05-1
Diagnosis & Testing	13-05-3
Engine Oil Pressure	13-05-3
Indicator Bulb	13-05-8
Magnetic Temperature Gauge	13-05-2
Oil Pressure Indicator	13-05-2
Removal & Installation	13-05-6
Service Tools	13-05-9
Specifications	13-05-8
Tachometer	13-05-1
	13-05-6

Transaxle, Automatic—AXODE

Transaxle, Automatic—AXODE	07-01-1
Air Pressure Checks	07-01-85
Cleaning & Inspection	07-01-184
Control Pressure Test	07-01-52
Converter Leakage Check	07-01-84
Description & Operation	07-01-2
Diagnosis & Testing	07-01-28
Diagnostic Hydraulic/Mechanical Chart	
Instructions	07-01-28
Disassembly & Assembly	07-01-96
Downshifts	07-01-15
Exploded View	07-01-16
	07-01-17
Fluid Leakage in Converter Area	07-01-83
Identification Tag	07-01-15
Installation	07-01-182

Alphabetical Index

Road Test	00-04-4
Service Tools	00-04-14

P

Phone, Cellular	15-04-1
Component Location	15-04-5
Description & Operation	15-04-1
Diagnosis & Testing	15-04-3
Dual Phone Numbers	15-04-3
Programming	15-04-2
System/Carrier Concerns	15-04-4

R

Radio and Tape Chassis	15-01-1
Cassette Tape Player	15-01-5
.....	15-01-13
Cleaning	15-01-13
Control Functions	15-01-1
Description & Operation	15-01-1
JBL Amplifier	15-01-8
JBL Suppression Choke	15-01-12
Premium Sound Amplifier (Low & High-Level)	15-01-8
Radio & Digital Disc Player	15-01-7
Radio Interference Suppression	15-01-10
Removal & Installation	15-01-7
Service Tools	15-01-13
Specifications	15-01-13
Tape Error Messages	15-01-5
Restraints, Active	01-20A-1
Adjustments	01-20A-15
Auxiliary Seat, Station Wagon	01-20A-2
Belt Buckle	01-20A-2
Child Restraint — Tether Attachment	01-20A-2
Child Seat Installation with Locking Clip	01-20A-17
Cleaning & Inspection	01-20A-13
Description & Operation	01-20A-1
Lap/ Safety Belts, Center	01-20A-2
Lap/Shoulder Safety Belt, Front	01-20A-2
Lap/Shoulder Safety Belt, Rear	01-20A-2
.....	01-20A-9
Lap/Shoulder Safety Belt Retractor Assembly, Front	01-20A-6

Location	01-20A-3
Major Service Operations	01-20A-13
Removal & Installation	01-20A-6
Safety Belt, Auxiliary Seat	01-20A-12
Safety Belt Maintenance	01-20A-13
Safety Belts, Rear	01-20A-9
Service Tools	01-20A-18
Specifications	01-20A-18
Tether Attachment	01-20A-4

Restraints, Passive—Supplemental Air Bag

System	01-20B-1
Air Bag Modules	01-20B-9
Deployed Air Bags	01-20B-11
.....	01-20B-71
Description	01-20B-1
Diagnosis and Testing	01-20B-12
Diagnostic Monitor	01-20B-4
.....	01-20B-68
Diagnostic Trouble Code Table	01-20B-16
Disposal Procedures	01-20B-71
Driver Air Bag	01-20B-2
Electrical Schematic — Air Bag System	01-20B-14
Electrical System	01-20B-6
Glossary	01-20B-13
Live Air Bags	01-20B-11
Location of Air Bag System Components	01-20B-13
Module, Driver Air Bag	01-20B-68
Module, Passenger Air Bag	01-20B-69
Parts Replacement	01-20B-9
Passenger Air Bag, Optional	01-20B-3
Removal and Installation	01-20B-66
Sensor, Center Cowl Crash	01-20B-67
Sensor — Center Radiator	01-20B-66
Sensor, LH Kick Panel Safing	01-20B-67
Sensors	01-20B-6
Service of Air Bag Equipped Vehicles Involved In Collisions	01-20B-10
Service Precautions	01-20B-11
Service Tools	01-20B-73
Specifications	01-20B-73
Undeployed Air Bag — Faulty	01-20B-71
Warning Labels	01-20B-8

S

Seat, Articulated Sport	01-10B-1
Air Pump/Motor	01-10B-9

Alphabetical Index

Main Components & Functions	07-01-3	Shift Control Cable Assembly	07-05-5
Oil Pump & Main Control Assembly	07-01-182	Shift Knob	07-05-3
On-Board Diagnostic Quick Tests	07-01-53	Shift Lever & Housing Assembly	07-05-5
Parts Cross-Reference	07-01-189	Specifications	07-05-9
Preliminary Testing & Diagnosis	07-01-61	Transaxle, Manual—MTX IV	07-03-1
Removal	07-01-88	Bearing Cups	07-03-53
Removing the Transmission Tester & Clearing		Cleaning & Inspection	07-03-50
DTC's	07-01-63	Clutch Housing	07-03-39
Service Tools	07-01-187	Description	07-03-1
Shift Point Road Test	07-01-81	Diagnosis	07-03-11
Specifications	07-01-186	Differential	07-03-47
Speedometer Drive Assembly	07-01-185	Disassembly & Assembly	07-03-31
Stall Test	07-01-85	Exploded View	07-03-3
Subassemblies	07-01-113	Fifth Gear Shaft Assembly	07-03-37
Torque Converter End Play Check	07-01-87	Fifth Gear Shift Control	07-03-44
Torque Converter Reactor One-Way Clutch		Flywheel	07-03-30
Check	07-01-86		07-03-51
Transaxle	07-01-89	Flywheel Ring Gear	07-03-30
	07-01-183	Gearset	07-03-20
	07-01-184	Input Cluster Shaft Bearings	07-03-52
Transaxle Assembly	07-01-160	Input Cluster Shaft Seal Assembly	07-03-52
Transaxle Disassembly	07-01-96	Main Shaft Assembly	07-03-31
Transaxle Fluid Condition Check	07-01-82		07-03-34
Transaxle Fluid Cooler Flow Test	07-01-84	Main Shift Control Shaft	07-03-42
Transaxle Fluid Drain & Refill	07-01-88	Major Service Operations	07-03-52
Transaxle Fluid Leakage Checks	07-01-82	Power Flow	07-03-8
Transaxle Fluid Level Check	07-01-81	Removal & Installation	07-03-16
Transaxle, Automatic—Cooling	07-02-1	Reverse Shift Relay Lever & Bracket	07-03-45
Diagnosis & Testing	07-02-1	Selector Control Plate	07-03-45
Oil Cooler Steel Lines	07-02-1	Service Tools	07-03-63
Service Procedures	07-02-1	Shift Controls	07-03-8
Service Tools	07-02-3	Shift Knob, Boot & Control Assembly	07-03-56
Specifications	07-02-3	Specifications	07-03-62
Transaxle, Automatic—External Controls	07-05-1	Speedometer Driven Gear	07-03-55
Adjustments	07-05-8	Synchronizer	07-03-33
Bezel Assembly	07-05-4	Transaxle Noise	07-03-11
Brake-Shift Interlock	07-05-1	Trim, Exterior	01-08-1
Column Shift	07-05-8	Body Side Protection & Bumper Rubstrip	
Description & Operation	07-05-1	Mouldings	01-08-1
Diagnosis	07-05-2	Mouldings, Exterior	01-08-2
Floor Shift	07-05-3	Removal & Installation	01-08-1
	07-05-8	Roof Luggage Carrier	01-08-2
Indicator Bulb	07-05-5	Specifications	01-08-6
Interlock Cable Assembly	07-05-6	Trim, Interior	01-05-1
Manual Linkage	07-05-8	Auxiliary Visor Assembly	01-05-18
Overdrive Lockout	07-05-2	Carpets & Floor Mats	01-05-21
PRNDL Cable Adjustment	07-05-8	Description	01-05-1
Removal & Installation	07-05-3	End Cap Replacement, Roll-Up Type	01-05-25

Alphabetical Index

Headlining	01-05-19
Luggage Cover	01-05-24
Moulding, A-Pillar	01-05-15
Removal & Installation	01-05-1
Retractable Spring Rewinding	01-05-24
Service Tools	01-05-26
Specifications	01-05-26
Sun Visors	01-05-17
Trim Panel, Liftgate	01-05-13
Trim Panel, Luggage Compartment	01-05-14
Trim Panel, Package Tray	01-05-23
Trim Panel, Quarter	01-05-7
Trim Panels, Cowl Side	01-05-6
Trim Panels, Door	01-05-1
Trim Panels, Scuff Plate/Lower Body Center	01-05-5

W

Arm Assembly, Front	01-16-21
Description & Operation	01-16-1
Diagnosis & Testing	01-16-7
Fluidic Washer Nozzle	01-16-28
Fluidic Washer System	01-16-6
Pivot Shafts & Wiper Linkage, Front	01-16-23
Pump Assembly	01-16-26
Removal & Installation	01-16-18
Service Tools	01-16-33
Specifications	01-16-32
Washer Circuit	01-16-9
Washer Hose, Rear	01-16-26
Washer Pump & Reservoir Assembly, Front	01-16-25
Washer Pump & Reservoir Assembly, Rear	01-16-27
Windshield Washer Low Fluid Warning Indicator	01-16-5
Wiper Arm & Blade Assembly, Rear	01-16-24
Wiper Blades	01-16-22
Wiper Circuit	01-16-8
Wiper Control Module (WCM)	01-16-19
Wiper Motor, Front	01-16-18
Wiper/Washer Switch, Rear	01-16-20

Wheels and Tires	04-04-1
Adjustments	04-04-7
Cleaning & Inspection	04-04-6
Description	04-04-1
Hoisting	04-04-5
Removal & Installation	04-04-5
Service Tools	04-04-13
Spare Tire, Lightweight Temporary	04-04-4
Specifications	04-04-13
Steel Wheels	04-04-7
Tire	04-04-6
Tire and Wheel Balance	04-04-10
Tire Inflation	04-04-8
Tire Maintenance	04-04-8
Tire Replacement	04-04-10
Tire Rotation	04-04-9
Tire Service	04-04-10
Tire Sizes	04-04-7
Tread Wear Indicators	04-04-9
Wheelcovers	04-04-2
Wheel and Tire	04-04-5
Wheel and Tire Indexing	04-04-9
Wheel Bearing, Front	04-04-13
Wheel Lug Nuts	04-04-4
Wheel Ornaments	04-04-6

Wiper and Washer Systems	01-16-1
Adjustments	01-16-29
Arm & Blade Assembly	01-16-29

Wiring and Circuit Protection	18-01-1
Alternator Connectors	18-01-8
Component Connectors	18-01-8
Deck Lid	18-01-34
Diagnosis & Testing	18-01-4
Distributor Ignition (DI) Module	18-01-9
Door, Front	18-01-32
Door, Rear	18-01-33
Engine Wiring	18-01-17
Fender Apron, LH	18-01-15
Fuse Link Continuity Test	18-01-4
Fuse Links	18-01-4
Fuse Panel	18-01-4
Fuses & Circuit Breakers	18-01-2
In-Line Connector, Submersible	18-01-7
In-Line Connectors	18-01-7
Instrument Panel, Main	18-01-23
Liftgate	18-01-34
Package Tray	18-01-29
Power Distribution Box	18-01-6
Radiator Support Wiring	18-01-10
Removal & Installation	18-01-4
Roof	18-01-31
Service Tools	18-01-37
Specifications	18-01-37

Alphabetical Index

Bench Tests	03-06-6	Switch, Ignition	11-05-1
Description and Operation	03-06-1		11-05-06
Diagnosis & Testing	03-06-3	Switch, Multi-Function	11-05-2
Disassembly & Assembly	03-06-7		11-05-6
Exploded View	03-06-8	Turn Signal Switching	11-05-2
Jump Starting	03-06-2	Windshield Washer Switching	11-05-2
Removal & Installation	03-06-7	Windshield Wiper Switching	11-05-2
Road Service	03-06-2		
Service Tools	03-06-12	Steering System, Power	11-02-1
Specifications	03-06-11	Adjustments	11-02-68
Starter Drive Replacement	03-06-9	Atsugi Steering Pump	11-02-10
Starter Load Test	03-06-4	Cleaning & Inspection	11-02-67
Starter Motor	03-06-7	Description	11-02-1
Starter Motor Brushes Replacement	03-06-9	Diagnosis & Testing	11-02-12
Exploded View	03-06-8	Disassembly & Assembly	11-02-44
Steering Column	11-04-1	External Leakage	11-02-14
Adjustments	11-04-27	Gear Housing, Rack Yoke Plug, Rack Assembly, Rack Bushing & Oil Seals	11-02-55
Brake Shift Interlock Solenoid	11-04-14	Input Shaft & Valve Assembly	11-02-48
Contact Assembly	11-04-9	Operation	11-02-11
Description	11-04-1	Power Steering Pump	11-02-28
Diagnosis & Testing	11-04-6	Pressure & Return Line Fitting	11-02-39
Disassembly & Assembly	11-04-17		11-02-46
Exploded View	11-04-2		11-02-60
Gear Shift Lever, Cover and/or Shift Lever Clip	11-04-12	Pressure & Return Lines	11-02-34
Ignition Lock Cylinder	11-04-13	Pump Reservoir	11-02-41
Ignition Lock Cylinder Assembly	11-04-9	Remote Reservoir	11-02-28
Removal & Installation	11-04-8	Removal & Installation	11-02-28
Service Tools	11-04-28	Rotary Valve	11-02-11
Shaft Bearing, Intermediate	11-04-15	Service Tools	11-02-72
Shaft Bearing, Lower	11-04-16	Specifications	11-02-71
Shaft Bearing, Upper	11-04-14	Steering Gear	11-02-1
Specifications	11-04-27		11-02-29
Steering Shaft, Intermediate	11-04-12		11-02-46
Steering Wheel	11-04-8	Steering Pump	11-02-61
Tilt Lock Lever	11-04-8	Tie Rod End Replacement	11-02-28
Steering Column Switches	11-05-1	VAPS Module	11-02-43
Cornering Lamp Switching	11-05-2	Variable Assist Power Steering (VAPS)	11-02-5
Description & Operation	11-05-1	Steering System—Service	11-00-1
Diagnosis & Testing	11-05-3	Cleaning & Inspection	11-00-15
Flasher Unit	11-05-7	Description	11-00-1
Hazard Flashing Switching	11-05-2	Diagnosis	11-00-6
Headlamp Dimmer/Flash-to-Pass Switching	11-05-2	Power Steering Pump Model Identification	11-00-1
Removal & Installation	11-05-6	Preliminary Tests	11-00-2
Service Tools	11-05-8	Pump Flow & Pressure Test	11-00-2
Specifications	11-05-8	Purging Power Steering System of Air	11-00-5
Switch, Blade-Type	11-05-1	Service Tools	11-00-13
		Specifications	11-00-13

Alphabetical Index

Back Trim Cover, Front Seat	01-10B-3	Control Switches	10-03A-39
Cushion, Front Seat	01-10B-7	Control Switches Test	10-03A-4
Description	01-10B-1	Description	10-03A-1
Diagnosis	01-10B-2	Diagnosis & Testing	10-03A-3
Lumbar & Bolster Support	01-10B-1	Linkage Actuator Cable	10-03A-44
Lumbar Support Pad	01-10B-8	Operation	10-03A-3
Operation	01-10B-1	Pinpoint Tests	10-03A-21
Removal & Installation	01-10B-3	Removal & Installation	10-03A-34
Specifications	01-10B-9	Service Tools	10-03A-46
Seats and Tracks	01-10A-1	Specifications	10-03A-45
Adjustments	01-10A-32	Speed Control Amplifier Assembly	10-03A-38
Diagnosis	01-10A-4	Speed Control Metering (Dump) Valve	10-03A-3
Head Restraint, Front Seat	01-10A-22		10-03A-39
Head Restraints	01-10A-2		10-03A-45
Power Seat	01-10A-3	Speed Control Servo Assembly	10-03A-34
Recliner, Manual	01-10A-2	Speed Control Tester	10-03A-9
Removal & Installation	01-10A-6	Vacuum Reservoir	10-03A-41
Seat Back, Front	01-10A-22	VSS	10-03A-38
Seat Back Latch, Rear — Wagon	01-10A-17	VSS Test	10-03A-7
Seat Back Trim Cover, Front	01-10A-25	Speed Control System — 3.2L SHO	10-03B-1
Seat Back Trim Cover, Rear	01-10A-29	Actuator Cable	10-03B-10
Seat Control Switch	01-10A-13		10-03B-14
Seat Cushion, Rear	01-10A-13	Adjustments	10-03B-14
Seat Cushion Trim Cover, Front	01-10A-26	Clockspring Assembly	10-03B-13
Seat, Rear — Center Armrest Cover	01-10A-31	Control Switches	10-03B-12
Seat, 6-Way Power	01-10A-1	Deactivator Switch	10-03B-1
Seat Track, Manual	01-10A-1	Description	10-03B-1
Seat Track, 6-Way Power	01-10A-7	Diagnosis & Testing	10-03B-2
Seats—Bucket and Split Bench, Manual	01-10A-6	Operation	10-03B-2
Service Tools	01-10A-33	Removal & Installation	10-03B-9
Specifications	01-10A-32	Service Tools	10-03B-16
Testing	01-10A-3	Servo and Bracket Assembly	10-03B-9
Wagon Second Seats	01-10A-2	Specifications	10-03B-15
Speakers	15-03-1	System Activation	10-03B-2
Description	15-03-1	Vehicle Speed Sensor	10-03B-1
Diagnosis & Testing	15-03-1		10-03B-12
Package Tray Mount	15-03-5	Speedometer/Odometer	13-02-1
Poor Sound Quality	15-03-3	Description & Operation	13-02-1
Speakers, Door Mounted	15-03-4	Diagnosis & Testing	13-02-1
Speakers, Rear	15-03-4	Major Service Operations	13-02-5
Speed Control System — 3.0L MFI, 3.0L SHO,		Removal & Installation	13-02-3
3.8L	10-03A-1	Specifications	13-02-5
Actuator Cable	10-03A-37	Speedometer Assembly	13-02-3
Adjustments	10-03A-44	Speedometer Cables	13-02-3
Check Valve	10-03A-42	Vehicle Speed Sensor (VSS)	13-02-3
Clockspring Assembly	10-03A-40	Starting System—Gear Reduced Permanent	
Clutch Switch	10-03A-41	Magnet	03-06-1
	10-03A-45	Armature Replacement	03-06-10

Alphabetical Index

Filler Pipe	10-01-13
Flexible Fuel Mixer/Sensor Assembly	10-01-18
Fuel Filter	10-01-18
Fuel Lines—Nylon	10-01-13
Fuel Pump & Sender Assembly	10-01-18
Fuel System Pressure Relief	10-01-6
Fuel Tank	10-01-6
Fuel Tank Draining Procedure — Flexible	
Fuel Vehicles	10-01-6
Fuel Tank Straps	10-01-13
Major Service Operations	10-01-21
Push Connect Fittings	10-01-14
Removal & Installation	10-01-5
Service Tools	10-01-23
Specifications	10-01-22
Spring Lock Coupling	10-01-15

G

Gauges, Warning Devices, Miscellaneous—

Electronic	13-09-1
Description & Operation	13-09-1
Diagnosis & Testing	13-09-3
Lamp-Out Warning Module	13-09-17
Lamp-Out Warning System	13-09-1
.....	13-09-8
Low Oil Level Warning System	13-09-2
Removal & Installation	13-09-17
Service Tools	13-09-19
Specifications	13-09-19
Warning Chimes	13-09-1
.....	13-09-17

Generator, Integral Rear Mount Regulator—

Internal Fan Type	14-02A-1
Battery Drain Test	14-02A-3
Charging System Tests	14-02A-4
Description & Operation	14-02A-1
Diagnosis & Testing	14-02A-2
Disassembly & Assembly	14-02A-15
Generator	14-02A-14
Generator Circuit	14-02A-2
Regulator	14-02A-14
Removal & Installation	14-02A-13
Service Tools	14-02A-15

Specifications	14-02A-15
----------------------	-----------

Generator, Integral Regulator—Internal Fan and Regulator Type

.....	14-02B-1
Adjustments	14-02B-17
Bearing Replacement	14-02B-16
Charging System	14-02B-1
Circuit Description	14-02B-2
Description	14-02B-1
Diagnosis & Testing	14-02B-3
Disassembly & Assembly	14-02B-13
Generator	14-02B-1
.....	14-02B-12
On-Bench Tests	14-02B-9
On-Vehicle Tests	14-02B-3
Operation	14-02B-2
Removal & Installation	14-02B-11
Service Tools	14-02B-17
Specifications	14-02B-17

Glass, Frames and Mechanisms

Adjustments	01-11-27
Defroster, Rear	01-11-2
.....	01-11-9
.....	01-11-25
Door Glass, Front	01-11-10
.....	01-11-27
Door Glass, Rear	01-11-10
.....	01-11-28
Glass & Channel Assembly, Rear Door	01-11-15
Grid Wire Service	01-11-26
Liftgate Glass	01-11-24
Lubrication	01-11-6
Major Service Operations	01-11-26
Mouldings	01-11-16
Quarter Window	01-11-20
Relay/Timer	01-11-26
Removal & Installation	01-11-10
Service Tools	01-11-29
Specifications	01-11-29
Switch	01-11-23
Testing	01-11-6
Window Motor	01-11-6
.....	01-11-24
Window Regulator, Front	01-11-13
Window Regulator, Rear	01-11-13
Window Switches	01-11-1
Windshield/ Rear Window Glass — Urethane	
Seal	01-11-16

Alphabetical Index

Official Vehicle Identification Number	00-01-1
Vehicle Certification Label	00-01-1
Instrument Cluster—Conventional	13-01B-1
Bulb, Illumination	13-01B-6
Description & Operation	13-01B-1
Diagnosis & Testing	13-01B-3
Flexible Printed Circuit	13-01B-6
Instrument Cluster	13-01B-4
Low Fuel Warning Assembly, Electronic	13-01B-6
Removal & Installation	13-01B-4
Specifications	13-01B-6
Instrument Cluster—Electronic	13-01A-1
Charging System	13-01A-7
Cluster Assembly	13-01A-30
Coolant Temperature Sender	13-01A-8
Description & Operation	13-01A-1
Diagnosis & Testing	13-01A-5
Dimmer Circuit	13-01A-6
Electronic Low Fuel Warning Assembly	13-01A-32
Fuel Computer	13-01A-4
Fuel Gauge	13-01A-6
Fuel Lines	13-01A-31
Fuel Pump & Sender Unit Assembly	13-01A-31
Lamp Out Warning	13-01A-6
Oil Level Warning	13-01A-9
Oil Pressure Switch	13-01A-33
Mask Assembly	13-01A-30
Removal & Installation	13-01A-30
Service Tools	13-01A-34
Specifications	13-01A-34
Speedometer	13-01A-5
Switch Module	13-01A-1
.....	13-01A-31
System Scanner	13-01A-5
Tachometer Circuit	13-01A-7
Windshield Washer Level	13-01A-8
Instrument Panel and Console	01-12-1
Air Bag System	01-12-2
Cluster Finish Panel	01-12-12
Console Armrest	01-12-16
Console Assembly, Floor	01-12-15
Console Assembly, Roof	01-12-16
Deployed Air Bags	01-12-1
Disassembly & Assembly	01-12-17
Instrument Panel	01-12-2
Live Air Bags	01-12-1
Parts Replacement	01-12-2
Removal & Installation	01-12-2

K

Service Precautions	01-12-1
Specifications	01-12-24
Steering Column	01-12-2
Keyless Entry System	01-14B-1
Antenna	01-14B-33
Autolock	01-14B-3
Description	01-14B-1
Diagnosis	01-14B-4
Entry Code	01-14B-2
Keyless Keypad	01-14B-3
Keypad Actuator Assembly	01-14B-32
Microprocessor/Relay Module	01-14B-32
Operation	01-14B-2
Remote/Keyless Entry Schematic	
Diagrams	01-14B-7
Remote Transmitter Operation	01-14B-3
Removal & Installation	01-14B-32
Service Tools	01-14B-34
Transmitter	01-14B-2
Transmitter Battery	01-14B-34

L

Lifting, Jacking, Spare Tire Stowage and	
Emergency Towing	00-02-1
Flatbed Towing	00-02-3
Front—T-Hook Procedure	00-02-3
Hoist, Drive-On	00-02-1
Hoist, Frame Contact	00-02-2
Hoisting & Jacking	00-02-1
Hoisting Instructions	00-02-1
Jack, Floor	00-02-1
Rear—T-Hook Procedure	00-02-4
Spare Tire	00-02-4
Tire Stowage	00-02-4
Towing	00-02-2
Towing Slings	00-02-2
Towing Speeds	00-02-2
Lighting, Exterior	17-01-1
Adjustments	17-01-30
Bulb Replacement, Headlamp	17-01-18

Alphabetical Index

H

Halfshafts, Front Drive	05-04-1
CV Joint Boot Indentation	05-04-8
Description	05-04-1
Diagnosis	05-04-8
Disassembly & Assembly	05-04-15
Halfshaft Assembly	05-04-9
Inboard CV Joint	05-04-24
Inspection	05-04-8
Link Shaft/Halfshaft — SHO Manual	05-04-34
Operation	05-04-7
Outboard CV Joint & Boot	05-04-15
Outboard CV Joints Dust Seal	05-04-22
Removal & Installation	05-04-9
Service Tools	05-04-37
Specifications	05-04-36
Speed Indicator Ring	05-04-23
Wheel & Tire Balancing, Front	05-04-7
Handles, Locks, Latches and Mechanisms	01-14A-1
Adjustments	01-14A-18
Child Safety Lock	01-14A-2
Diagnosis & Testing	01-14A-2
Door Latch Bellcrank, Rear	01-14A-9
Door Latch, Front	01-14A-5
Door Latch, Rear	01-14A-7
Door Latch Remote Control, Front or Rear	01-14A-9
Door Lock Cylinder	01-14A-9
Door Lock Switch, Power	01-14A-4
Door Locks, Power	01-14A-1
Door Outside Handle	01-14A-9
Door Striker	01-14A-10
Glove Compartment Latch & Lock	01-14A-18
Hood Latch	01-14A-12
Hood Latch Control Cable	01-14A-11
Latch and Cable, Fuel Filler Door Remote	01-14A-10
Latch & Lock, Luggage Compartment Deck	
Lid	01-14A-13
Latch & Striker, Liftgate	01-14A-14
Latch Striker Assembly, Luggage Compartment	
Deck Lid	01-14A-13
Lock Cylinder	01-14A-16
Lubrication	01-14A-19
Luggage Compartment Remote Control	
Cable & Latch	01-14A-17
Motor	01-14A-2
Remote Luggage Compartment Release	01-14A-16

Removal & Installation	01-14A-4
Service Tools	01-14A-20
Specifications	01-14A-19
Striker Anchor Plate	01-14A-16
Support Cylinder, Liftgate	01-14A-14
Heating and Defrosting	12-02-1
Adjustments	12-02-24
Air Inlet Duct & Blower Housing Assembly	12-02-21
Airflow	12-02-1
Airflow Schematic	12-02-2
Blower Motor & Wheel Assembly	12-02-13
Blower Motor Resistor	12-02-14
Blower Switch	12-02-10
Components	12-02-6
Control Assembly	12-02-3
	12-02-6
	12-02-9
Defroster Nozzle	12-02-17
Demisters & Demister Hoses	12-02-18
Description & Operation	12-02-1
Floor Air Distribution Duct	12-02-19
Floor Heater System	12-02-19
Floor-Panel Door Vacuum Motor	12-02-21
Heater Case Assembly	12-02-10
Heater Core	12-02-9
	12-02-12
Heater Hoses	12-02-22
Outside-Recirc Door Vacuum Motor	12-02-14
Panel-Defrost Door Vacuum Motor	12-02-21
Plenum Chamber & Duct Assembly	12-02-15
Recirc Duct Assembly	12-02-13
Removal & Inspection	12-02-9
Safety Precautions	12-02-6
Service Tools	12-02-25
Specifications	12-02-24
Temperature Control	12-02-4
Vacuum Selector Switch	12-02-10
Horn	13-06-1
Backup Power Supply	13-06-1
Circuit Check	13-06-1
Horn Button Switch	13-06-2
Removal & Installation	13-06-1
Specifications	13-06-2

I

Identification Codes	00-01-1
Description	00-01-1

Alphabetical Index

F

Fuel Charging and Controls—3.0L	03-04A-1
Adjustments	03-04A-22
Air Cleaner	03-04A-22
Cleaning & Inspection	03-04A-22
Cold Start Injector (CSI)	03-04A-14
Components	03-04A-6
Description	03-04A-1
Fuel Injection Wiring Harness	03-04A-21
Fuel Injector Manifold Assembly	03-04A-16
Fuel Injectors	03-04A-6
Fuel Pressure Regulator	03-04A-7
	03-04A-20

Fuel Pressure Relief Valve (Schrader Valve)	03-04A-15
Fuel Sensor	03-04A-20
Idle Air Control (IAC) Valve Assembly	03-04A-14
Operation	03-04A-3
Removal & Installation	03-04A-8
Service Tools	03-04A-23
Specifications	03-04A-22
Spring Lock Coupling	03-04A-8
Throttle Body	03-04A-11
Throttle Position (TP) Sensor	03-04A-15

Fuel Charging and Controls—3.0L/3.2L SHO ..	03-04B-1
Air Intake Manifold	03-04B-2
Air Intake Throttle Body	03-04B-8
Cleaning & Inspection	03-04B-12
Components	03-04B-3
Description	03-04B-1
Fuel Charging Assembly	03-04B-4
Fuel Injection Pulse Dampener	03-04B-12
Fuel Injector(s)	03-04B-3
	03-04B-11
Fuel Pressure Regulator	03-04B-3
	03-04B-11
Fuel Rail Assembly	03-04B-10
Idle Air Control (IAC) Valve Assembly	03-04B-9
Intake Manifold & Throttle Body	03-04B-8
Operation	03-04B-2
Removal & Installation	03-04B-4
Service Tools	03-04B-13
Specifications	03-04B-13
Spring Lock Coupling	03-04B-5
Throttle Position Sensor	03-04B-9

Fuel Charging and Controls—3.8L	03-04C-1
Air Cleaner	03-04C-12
Air Intake Manifold	03-04C-4
Air Intake Throttle Body	03-04C-10
Cleaning and Inspection	03-04C-12
Components	03-04C-5
Description	03-04C-1
Fuel Charging Assembly	03-04C-6
Fuel Injection, Electronic	03-04C-14
Fuel Injection Supply Manifold Assembly	03-04C-6
Fuel Injectors	03-04C-5
	03-04C-11
Fuel Metering Assembly Identification	03-04C-1
Fuel Pressure Regulator	03-04C-5
	03-04C-11
Fuel Rail Assembly	03-04C-10
Idle Air Control (IAC) Valve Assembly	03-04C-10
Operation	03-04C-2
Removal & Installation	03-04C-6
Service Tools	03-04C-13
Specifications	03-04C-13
Spring Lock Coupling	03-04C-7
Throttle Body	03-04C-9
Throttle Position (TP) Sensor	03-04C-10
Upper Intake Manifold & Throttle Body	03-04C-9

Fuel Gauge and Low Fuel Warning	13-03-1
Description & Operation	13-03-1
Diagnosis & Testing	13-03-4
Fuel Gauge	13-03-10
Fuel Level Indication System	13-03-1
Fuel Pump & Sender Assembly	13-03-8
Fuel Sending Unit	13-03-2
Low Fuel Warning/Anti-Slosh Module	13-03-4
Removal & Installation	13-03-8
Service Tools	13-03-10

Fuel System—Service	10-00-1
Adjustments	10-00-13
Air Cleaner	10-00-12
Cleaning & Inspection	10-00-12
Description	10-00-1
Diagnosis	10-00-2
Idle Air Control (IAC) Valve	10-00-13
Service Tools	10-00-13
Specifications	10-00-13
Wiring Diagram	10-00-4

Fuel Tank, Filter and Electric Fuel Pump	10-01-1
Description & Operation	10-01-1

Alphabetical Index

Cleaning	17-01-30
Cornering Lamp	17-01-21
Daytime Running Lamps	17-01-2
Diagnosis & Testing	17-01-5
Fog Lamp Assembly	17-01-19
Fog Lamp & Switch	17-01-4
Headlamp Aim	17-01-30
Headlamp Assembly	17-01-15
Headlamp & Dimmer Switch	17-01-2
Headlamp Delay System — Autolamp	17-01-3
Headlamp Switch	17-01-8
Headlamp Switch Connector Checkout	17-01-28
Headlamps, Aerodynamic	17-01-5
Headlamps ON Warning Chime	17-01-1
High-Mount Stoplamp	17-01-2
Potentiometer	17-01-25
Removal & Installation	17-01-28
Service Tools	17-01-15
Specifications	17-01-30
Stoplamp Switch, Mechanical	17-01-26
Lighting, Interior	17-02-1
Diagnosis & Testing	17-02-3
Illuminated Entry	17-02-2
Lamp, Cargo	17-02-9
Lamp, Dome/Map Combination	17-02-11
Lamp, Front Door	17-02-7
Lamp Switch, Courtesy/Dome	17-02-11
Lamp Switch, Glove Compartment	17-02-10
Lamp, Transmission Control Selector	17-02-10
Removal & Installation	17-02-7
Specifications	17-02-11

M

Maintenance and Lubrication	00-03-1
Chassis Lubrication Points	00-03-11
Description	00-03-1
Engine Lubrication Service Points	00-03-7
General Maintenance Information	00-03-2
Lubrication	00-03-6
Maintenance Schedule & Record Log	00-03-2

Specifications	00-03-11
Vehicle Emission Control Information Decal	00-03-1

Mirrors, Rear View	01-09-1
Cleaning	01-09-5
Description	01-09-1
Diagnosis	01-09-1
Frozen Mirrors	01-09-5
Mirror Assembly, Outside Rear View	01-09-3
Mirror Glass, Power—Replacement	01-09-4
Mirror, Inside Rear View	01-09-4
Mirror, Mounting Bracket	01-09-5
Mirror Switch, Power	01-09-4
Mirrors, Power	01-09-1
Removal & Installation	01-09-3
Service Tools	01-09-5
Specifications	01-09-5

Moon Roof, Electric	01-17-1
Adjustments	01-17-8
Description & Operation	01-17-1
Diagnosis	01-17-2
Glass & Sunshade	01-17-3
Glass Height	01-17-8
Glass Weatherstrip	01-17-5
Halo	01-17-7
Lifter Arm	01-17-5
Moon Roof Assembly	01-17-5
Motor	01-17-7
Removal & Installation	01-17-3
Service Tools	01-17-11
Specifications	01-17-10
Switch	01-17-7
Switch Test	01-17-2
Water Drainage System & Water Leak Corrections	01-17-8

N

Noise, Vibration and Harshness	00-04-1
CV Joint Noise & Vibration	00-04-7
Diagnosis & Testing	00-04-7
Diagnostic Theory	00-04-1
Exhaust System Noises	00-04-7
Glossary	00-04-2
NVH Diagnosis	00-04-4

Alphabetical Index

Engine, 3.0L/3.2L SHO	03-01B-1	Flywheel	03-01C-33
Camshaft	03-01B-33	Front Cover Assembly	03-01C-17
Camshaft Seals	03-01B-36	Intermediate Shaft	03-01C-48
Connecting Rod Bearings	03-01B-33	In-Vehicle Service	03-01C-3
Crankshaft/Damper/Front Oil Seal	03-01B-17	Main Bearing Inserts	03-01C-25
Cylinder Heads	03-01B-21	Oil Pan	03-01C-23
	03-01B-43	Oil Pump	03-01C-48
Cylinder Head Cover	03-01B-19	Piston & Connecting Rods	03-01C-29
Description	03-01B-1	Pressure Relief Valve	03-01C-48
Disassembly & Assembly	03-01B-37	Removal & Installation	03-01C-33
Engine Code Information Label	03-01B-2	Rocker Arm Cover	03-01C-12
Engine Dampers	03-01B-8	Service Tools	03-01C-57
Exhaust Manifolds	03-01B-28	Spark Plug Thread Service	03-01C-49
Induction System	03-01B-4	Specifications	03-01C-52
Intake Manifold	03-01B-20	Subassemblies	03-01C-46
Main Bearing Inserts	03-01B-29	Tappet (Roller)	03-01C-11
Oil Pan & Oil Pump	03-01B-26	Upper and Lower Intake Manifolds	03-01C-15
Piston & Connecting Rods	03-01B-24	Water Pump	03-01C-13
	03-01B-41		
Positive Crankcase Ventilation (PCV)	03-04B-5	Evaporative Emissions	03-13-1
Removal & Installation	03-01B-6	Carbon Canister	03-13-4
Sensors	03-01B-27	Description & Operation	03-13-1
Service Tools	03-01B-50	Diagnosis & Testing	03-13-5
Specifications	03-01B-45	Fill Control/Vapor Vent System	03-13-2
Subassemblies	03-01B-41	Flexible Fuel (FF) Evaporative Emission	
Thermostat	03-01B-21	System	03-13-2
Throttle Body	03-01B-9	Fuel Tank Evaporative Emission System	03-13-1
Timing Belt	03-01B-10		03-13-5
Vehicle Emission Control Information (VECI)		Fuel Tank Vapor Orifice, Pressure Relief &	
Label	03-01B-2	Rollover Valve Assy	03-13-3
Water Pump	03-01B-19	Fuel Vapor Emissions Control System	03-13-1
		Pressure & Vacuum Relief System	03-13-4
Engine, 3.8L	03-01C-1	Purge Solenoid Valve	03-13-4
Adjustments	03-01C-50	Removal & Installation	03-13-7
Balance Shaft & Camshaft Rear Bearing Bore		Service Tools	03-13-12
Plug	03-01C-32	Vapor Control Valve	03-13-3
Camshaft	03-01C-28	Vapor Management Valve	03-13-4
Camshaft & Balance Shaft Bearings	03-01C-32		
Connecting Rod Bearings	03-01C-25	Exhaust System	09-00-1
Crankshaft	03-01C-26	Catalytic Converter	09-00-3
Crankshaft Front Oil Seal	03-01C-14	Description	09-00-1
Crankshaft Rear Main Oil Seal	03-01C-23	Exhaust Shields	09-00-2
Cylinder Heads	03-01C-20	General Information	09-00-1
	03-01C-47	Muffler Assembly	09-00-3
Description & Operation	03-01C-1	Removal & Installation	09-00-2
Disassembly & Assembly	03-01C-40	Resonator Assembly	09-00-2
Engine Assembly	03-01C-33	Specifications	09-00-11
Exhaust Manifold, LH	03-01C-3		
Exhaust Manifold, RH	03-01C-4		