


## REMOVAL AND INSTALLATION (Continued)

13. Disconnect VAPS electrical connectors.

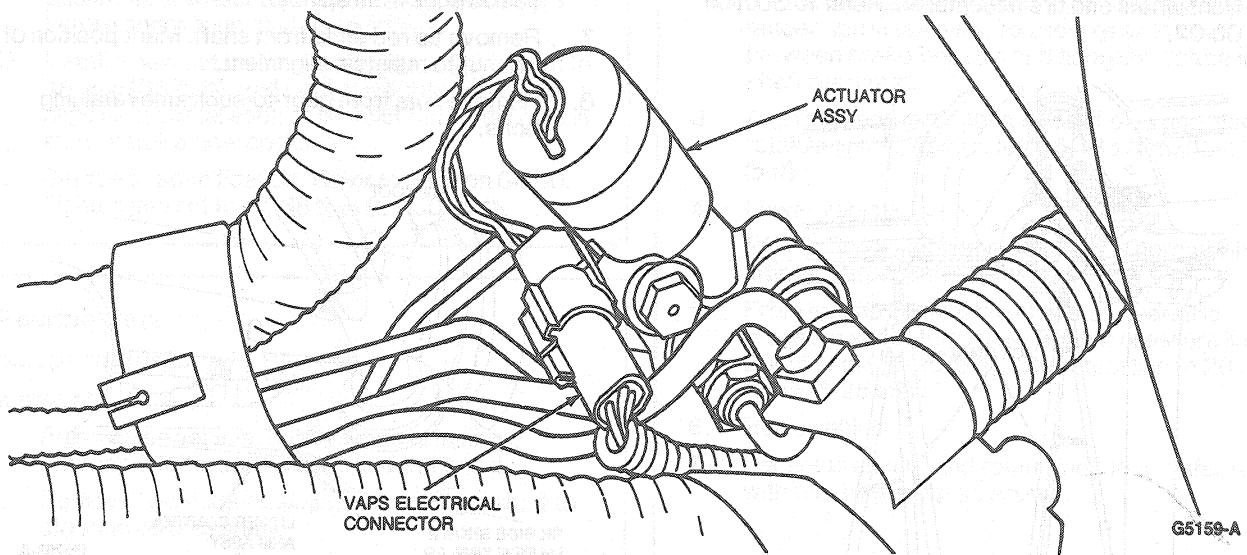

14. Rotate gear to clear bolts from subframe and pull left to facilitate line fitting removal.
15. Place a drain pan under vehicle and remove line fittings.
16. Remove LH sway bar link.
17. Remove gear assembly through LH wheel well.

