



REMOVAL AND INSTALLATION (Continued)

9. Get the proper service kit for the vehicle you're working on. Filter kits with the service part number suffix "A" are to be used on vehicles with a nylon lined suction hose. Filter kits with the service part number suffix "B" are for vehicles with rubber lined suction hose. The label on the filter shows which hose it is to be used with.

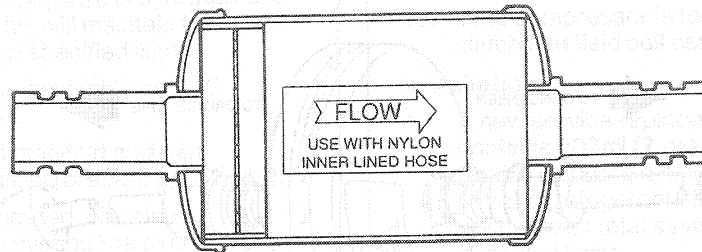

CCL 3730-A

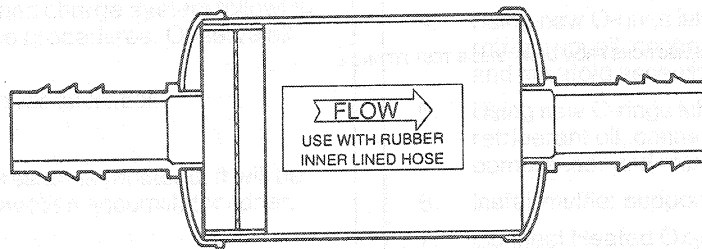

CCL 3731-A

10. Remove a length of suction hose to accommodate the suction filter and install the filter using the hose clamps provided with the kit. Be sure filter is correctly oriented for refrigerant system flow. Check the label on the filter. On the filter for nylon lined hose, install O rings (two on each filter tube being sure they are properly seated in the grooves on the tube). Tighten the hose clamps securely.

11. Install a new orifice tube. If the orifice tube is located in the liquid line between the condenser and the evaporator, replace the liquid line assembly. See Section 12-00.