



REMOVAL AND INSTALLATION (Continued)

Taurus Except SHO

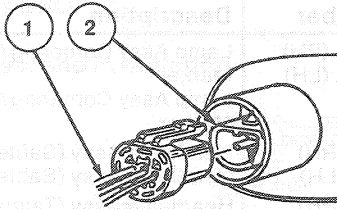

VIEW SHOWING INSTALLATION OF WIRING ASSY TO HEADLAMP ASSY

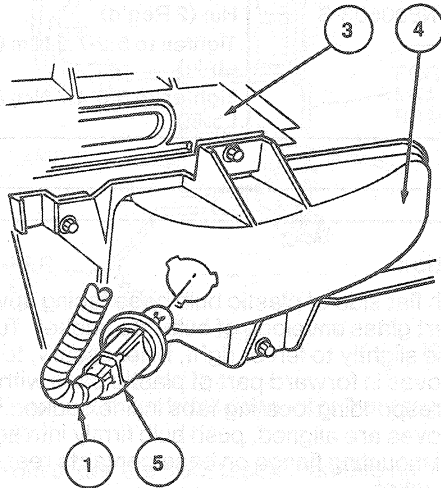


RH CORNERING LAMP SHOWN
LH TYPICAL

K12990-D

Item	Part Number	Description
1	14290	Wiring Assy
2	13005 (RH) 13006 (LH)	Headlamp Assy
3	—	Bumper Assy
4	—	Cornering Lamp Assy
5	—	Cornering Lamp Socket Assy

Sable and Taurus SHO

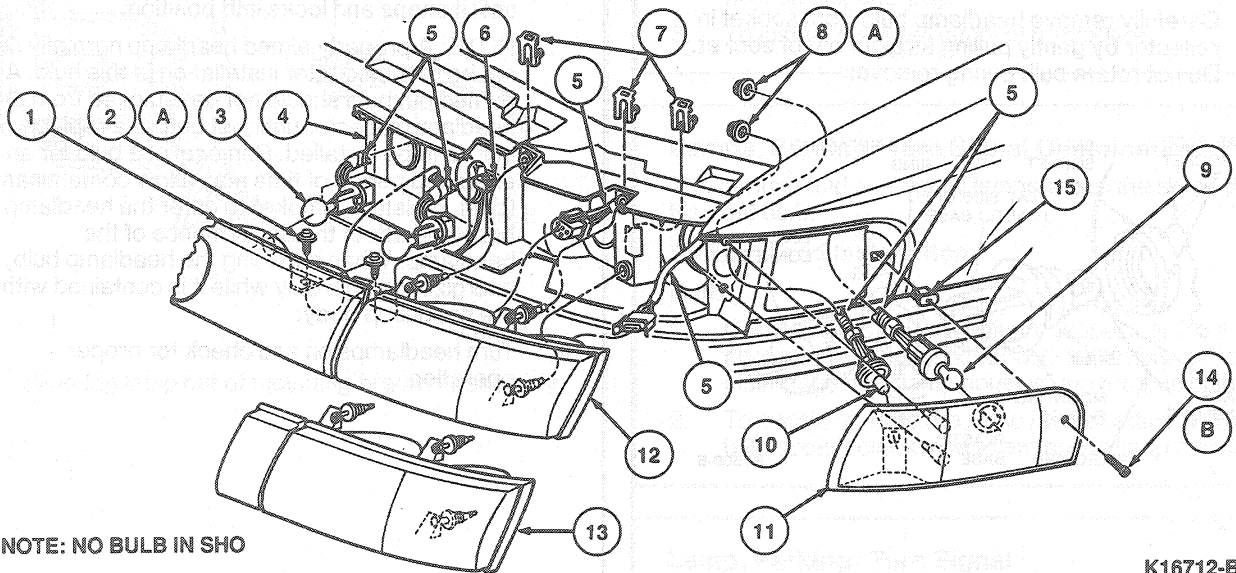

NOTE: NO BULB IN SHO

K16712-B