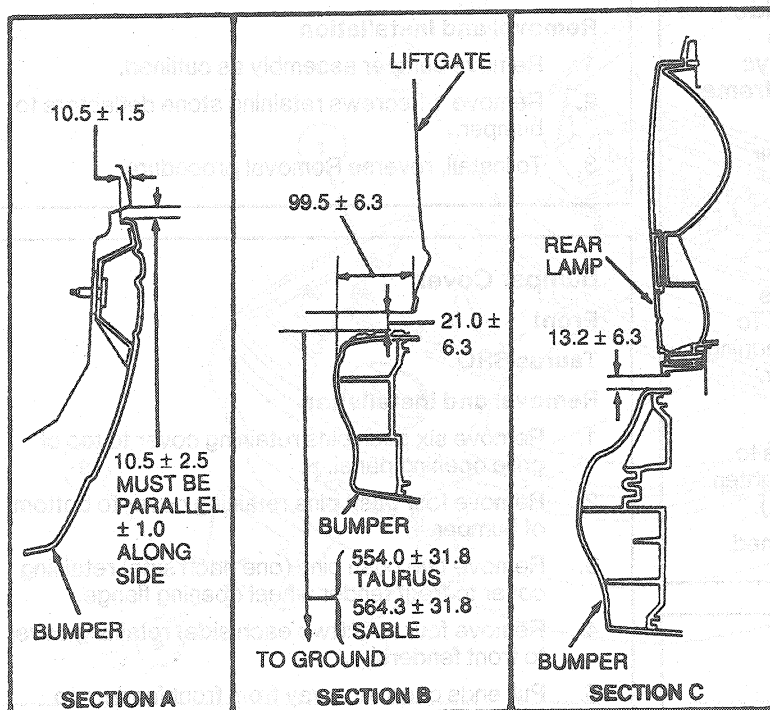
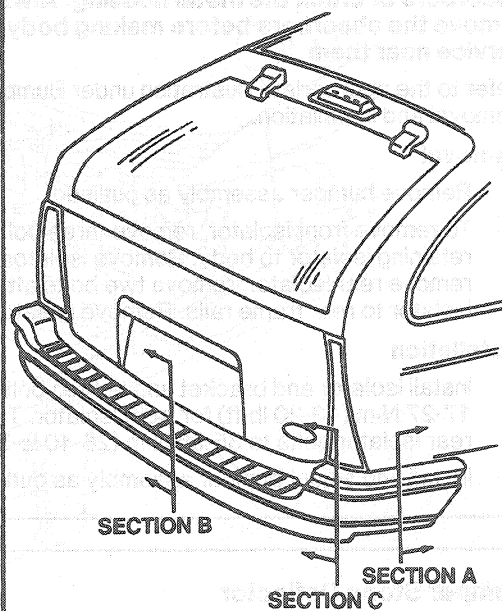
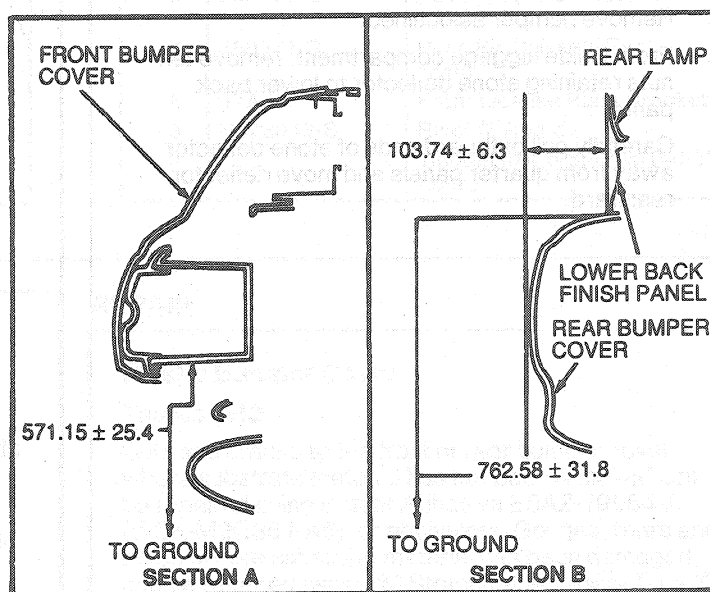
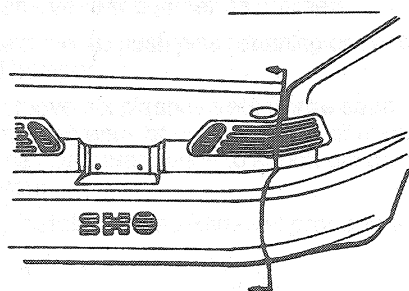
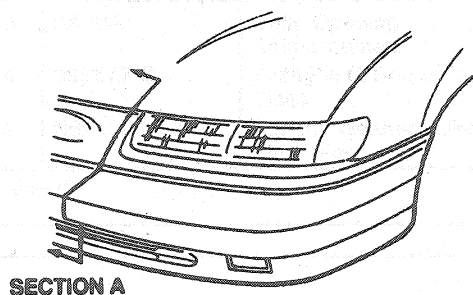


REMOVAL AND INSTALLATION (Continued)

Bumper, Rear
Station WagonNOTE: ALL MEASUREMENTS
ARE IN MILLIMETERS

N9327-A

Taurus SHO

NOTE: ALL MEASUREMENTS
ARE IN MILLIMETERS

N9328-A