

Fig. 34 Common front door mounted speaker assembly

To install:

6. Connect the speaker electrical wires, then install the speaker to the mounting bracket using the retaining screws.
7. Install the front door trim panel.
8. Connect the negative battery cable.

1995-00

1. Remove the lower door panel.
2. Remove the four screws retaining the speaker to the door.
3. Pull the speaker away from the door and disconnect the speaker lead. Remove the speaker from the vehicle.

To install:

4. Firmly push the radio speaker lead into the radio speaker connector.
5. Position the speaker to the door and install the retaining screws.
6. Install the lower door panel.

Package Tray Speaker

1988-94 CONTINENTAL

♦ See Figure 35

1. Disconnect the negative battery cable.
2. Remove the speaker cover.

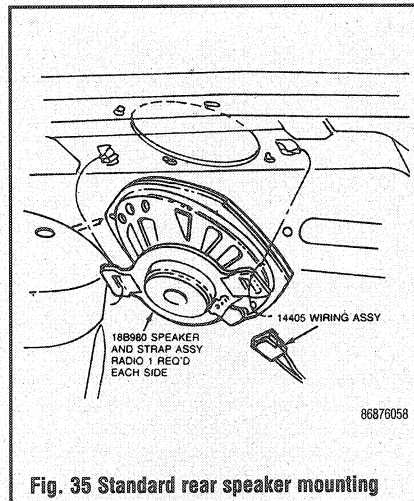


Fig. 35 Standard rear speaker mounting

3. From the inside of the trunk, disconnect the speaker wiring harness from the speaker.
4. Pull one end of the speaker rubber retaining strap to disengage it from the tab on the package tray, then remove the speaker from the vehicle.

To install:

5. Position the speaker and strap assembly in place with one end of the strap over the tab on the package tray. Pull the opposite end of the strap to index over the other tab, securing the assembly.
6. Connect the speaker harness wiring, then connect the negative battery cable and check speaker operation.
7. Connect the negative battery cable.

1995-00 CONTINENTAL

1. Remove the package tray panel.
2. Remove the four screws retaining the speaker to the package tray.
3. Pull the speaker away from the package tray and disconnect the speaker lead. Remove the speaker from the vehicle.

To install:

4. Firmly push the radio speaker lead into the radio speaker connector.
5. Position the speaker to the package tray and install the retaining screws.
6. Install the package tray panel.

Mark VII 1988-1992

DOOR SPEAKERS

1. Remove the front door trim panel. Remove the radio speaker retaining screws.
2. Disconnect the radio speaker connector and remove the radio speaker.

To install:

3. Connect the radio speaker connector.
4. Installation is the reversal of the removal process.

QUARTER TRIM SPEAKERS

1. Remove the quarter trim panel.
2. Remove the radio speaker retaining screws.
3. Remove the radio speaker and disconnect the radio speaker connector.

To install:

4. Connect the radio speaker connector.
5. Installation is the reversal of the removal process.

WINDSHIELD WIPERS AND WASHERS

Windshield Wiper Blade and Arm

REMOVAL & INSTALLATION

♦ See Figures 36, 37 and 38

➔ To prevent damage, do not pry arm from pivot with metal or sharp tool.

Raise the blade end of the arm off the windshield and move the slide latch away from the pivot shaft. This will unlock the wiper arm from the pivot shaft and hold the blade end of the arm off the glass at the same time. The wiper arm can now be pulled off the pivot shaft without the aid of any tools.

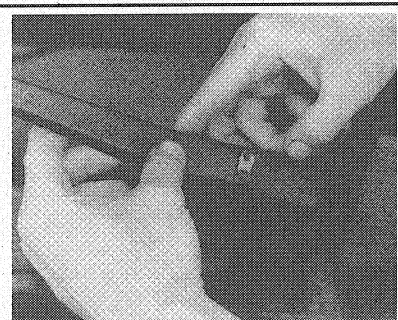


Fig. 36 Raise the wiper arm off the windshield

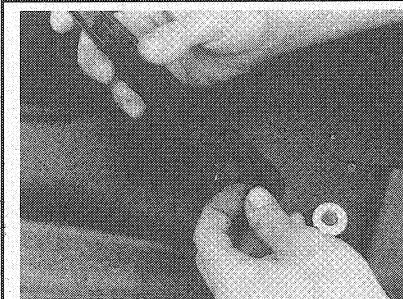


Fig. 37 Move the slide latch away from the pivot shaft. This will unlock the wiper arm from the pivot shaft