
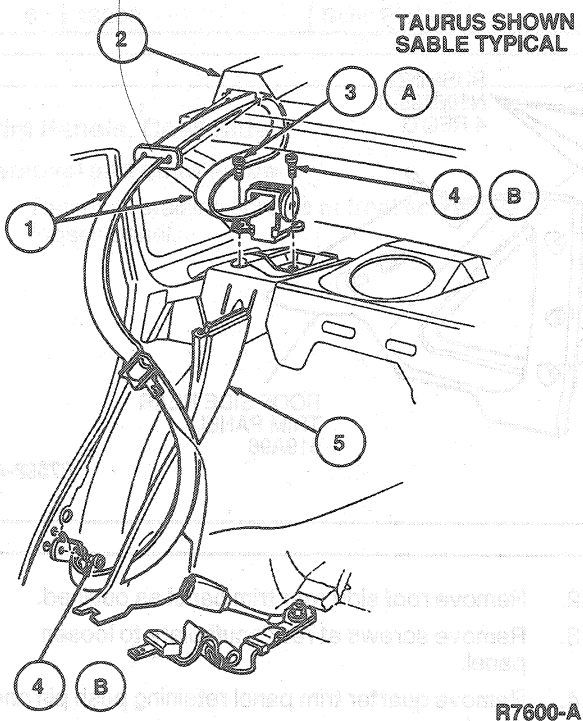


REMOVAL AND INSTALLATION (Continued)

5. Remove bolt at safety belt anchor tab and slide belt through access slot in quarter trim panel.
 6. To install, reverse Removal procedure.
- NOTE:** Position safety belt anchor tab into original position while feeding in quarter trim panel.

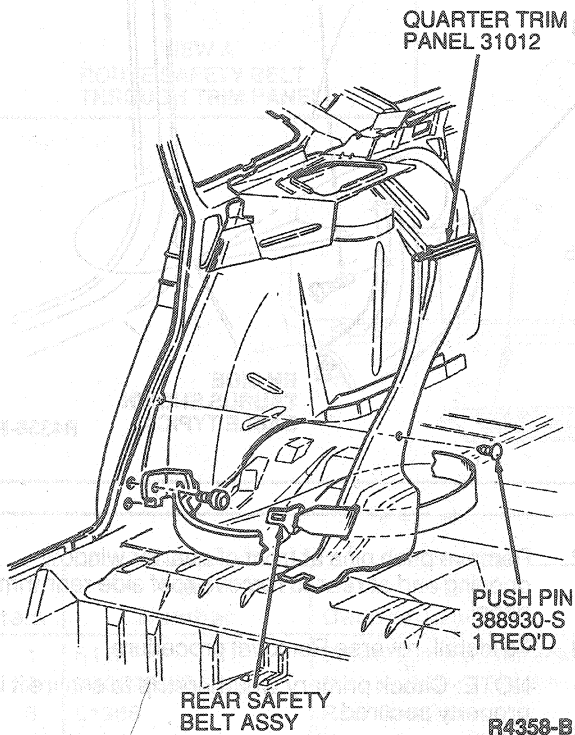

Item	Part Number	Description
1	611B68	Rear Safety Belt and Retractor Assy
2	46668	Package Tray Trim Panel Assy
3A	N801010-S40	Screw (1 Req'd Each Side)
4B	389370-S100	Bolt (1 Req'd Each Side)
5	31012	Quarter Trim Panel Assembly
A		Tighten to 23-32 N·m (17-23 Lb·Ft)
B		Tighten to 30-40 N·m (23-29 Lb·Ft)

Wagon

Removal and Installation

1. Remove rear seat. Refer to Section 01-10A,
2. Remove roof side inner rear moulding retaining screws and moulding as outlined.
3. Remove liftgate header rail garnish moulding retaining screws and moulding.
4. Remove assist handle (RH side and back) retaining screws and handle.