


REMOVAL AND INSTALLATION (Continued)

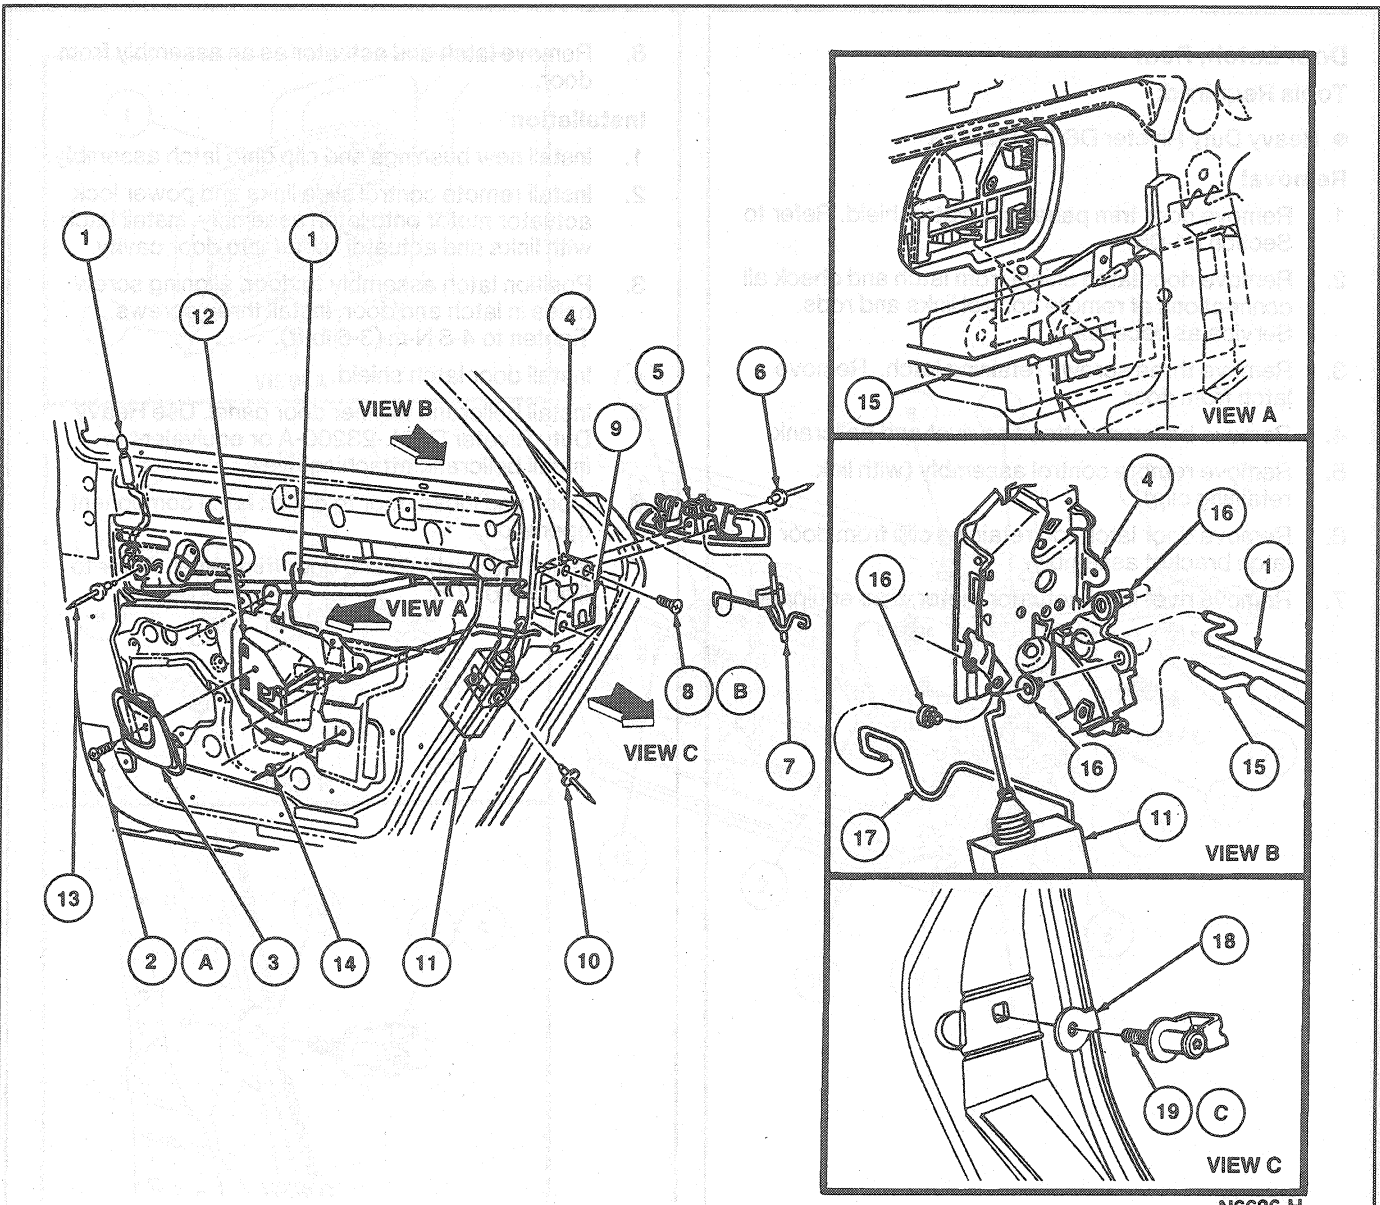

N6636-H

Item	Part Number	Description
1	264B14	Button and Link Assy
2A	N610128-S2	Screw
3	21818	Remote Control Assy
4	26412	Latch Assy
5	26600	Outside Handle
6	391255-S102	Rivet (2 Req'd)
7	26596	Link
8B	N805653-S100	Screw (3 Req'd)
9	219860	Door Lock Decal
10	N805995-S100	Rivet
11	26594	Power Latch Actuator
12	266A22	Bracket

(Continued)

Item	Part Number	Description
13	N802034-SG	Rivet
14	385189-S	Rivet (4 Req'd Each Door)
15	26414	Link Assy
16	386656-S	Bushing
17	26596	Rod
18	N804243-S	Shim (1 Req'd Each Side)
19C	21982	Door Latch Striker Assy
A		Tighten to 7-11 N·m (5-8 Lb·Ft)
B		Tighten to 4-8 N·m (3-6 Lb·Ft)
C		Tighten to 33-45 N·m (24-33 Lb·Ft)