


DIAGNOSIS (Continued)

26-Pin Connector (J1) (Cont'd)

PIN NO.	WIRE NO. AND COLOR	CONNECTS TO
20	707 W/Y	Luggage Compartment Lamp / Switch
21	N/C	No Connection
24	14 BR	Parking Lamps Output
26	6 Y/LG	Horn Relay

J2 Connector

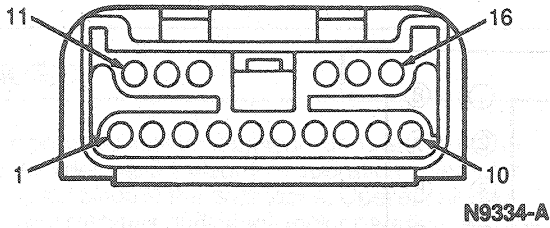

16 Pin Connector (J2)

PIN NO.	WIRE NO. AND COLOR	CONNECTS TO
1	54 LG/Y	Signal B+
2	123 R	9/0 Keypad Switch

(Continued)

16 Pin Connector (J2) (Cont'd)

PIN NO.	WIRE NO. AND COLOR	CONNECTS TO
3	79 LG/R	3/4 Keypad Switch
4	124 BR	Keypad Common
5	397 BK/W	Signal Ground
6	298 P/O	Ignition (Hot in RUN)
7	465 W/LB	Door Latch Switch
8	66 LB	Keypad Lamp
9	627 BK/O	Door Ajar
10	809 GY/Y	Program B
11	122 Y	7/8 Keypad Switch
12	121 Y/BK	5/6 Keypad Switch
13	78 LB/Y	1/2 Keypad Switch
14	177 W	Seat Switch
15	808 W/Y	Program A
16	140 BK/PK	PRNDL Switch