



## REMOVAL AND INSTALLATION (Continued)

3. To remove sunshade, remove glass retaining screws and washers.

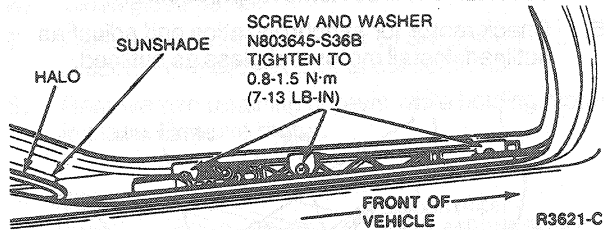


4. Push glass up from inside vehicle and remove. Take care not to scratch glass or roof paint.
5. Slide halo and sunshade forward halfway across moon roof opening.
6. Lift halo to clear sunshade.

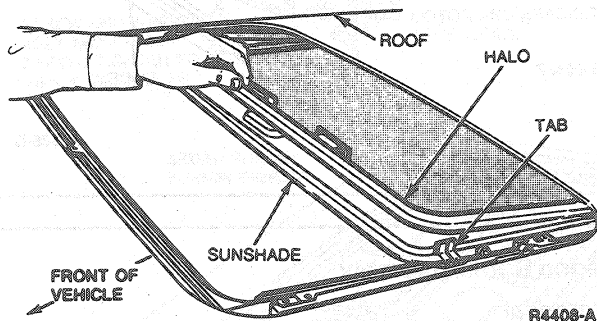


7. Push halo fully rearward.
8. Slide sunshade fully forward.
9. Lift front on sunshade, slide forward and rotate 90 degrees to remove.

IDENTIFIED BY MOITA LIA/CPM/GMA JAVOMBY

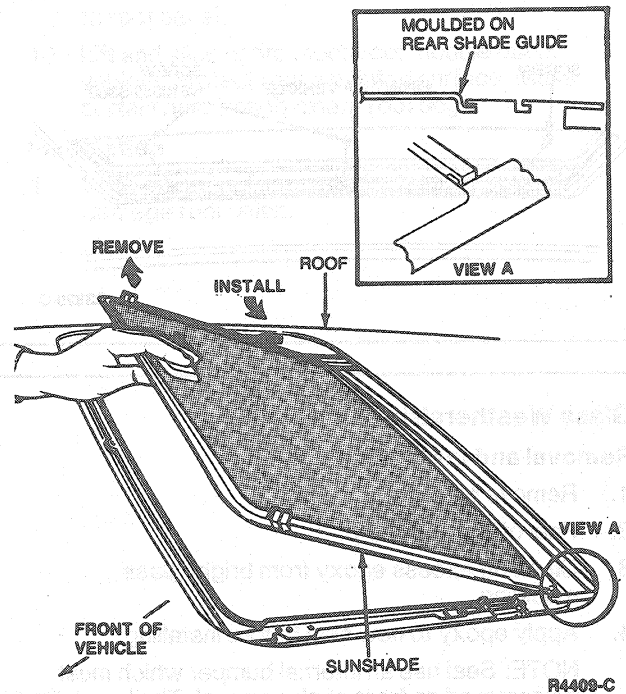

## Installation

1. With sunshade at an angle, insert one sunshade rear tab into channel at rear of moon roof opening.
2. Insert other rear tab and place sunshade in position.
3. Slide halo forward, lifting it to clear sunshade.
4. Lower halo onto sunshade. Halo must be outside of rail or moon roof will not function properly.
5. Slide sunshade and halo fully rearward.
6. Install glass. Align with holes for screws. Take care not to push lifter arm slide out of track.

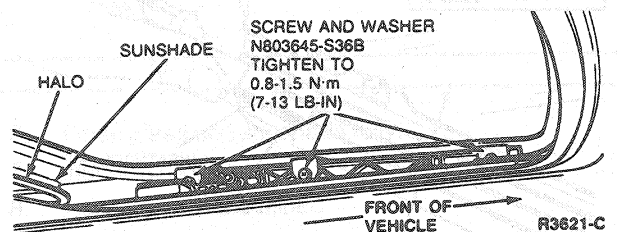

7. Install six glass retaining screws and washers. Tighten to 0.8-1.5 N·m (7-13 lb-in).
8. Adjust glass as outlined.
9. Slide halo fully forward and install three screws.