


DESCRIPTION AND OPERATION (Continued)

SS2 ALWAYS ON	GEAR SELECTOR POSITION			
	OD	D or 3rd w/OD OFF (SHO)	2 SHO	1
PCM GEAR COMMANDED	ACTUAL GEAR OBTAINED			
1	1	1	1	1
2	2	2	2	2
3	1	1		
4	2			

SS3 ALWAYS ON	GEAR SELECTOR POSITION			
	OD	D or 3rd w/OD OFF (SHO)	2 SHO	1
PCM GEAR COMMANDED	ACTUAL GEAR OBTAINED			
1	1	1	1	1
2	2	2	2	2
3	3	3		
4	4			

Internal Transmission Connector/Harness Diagram

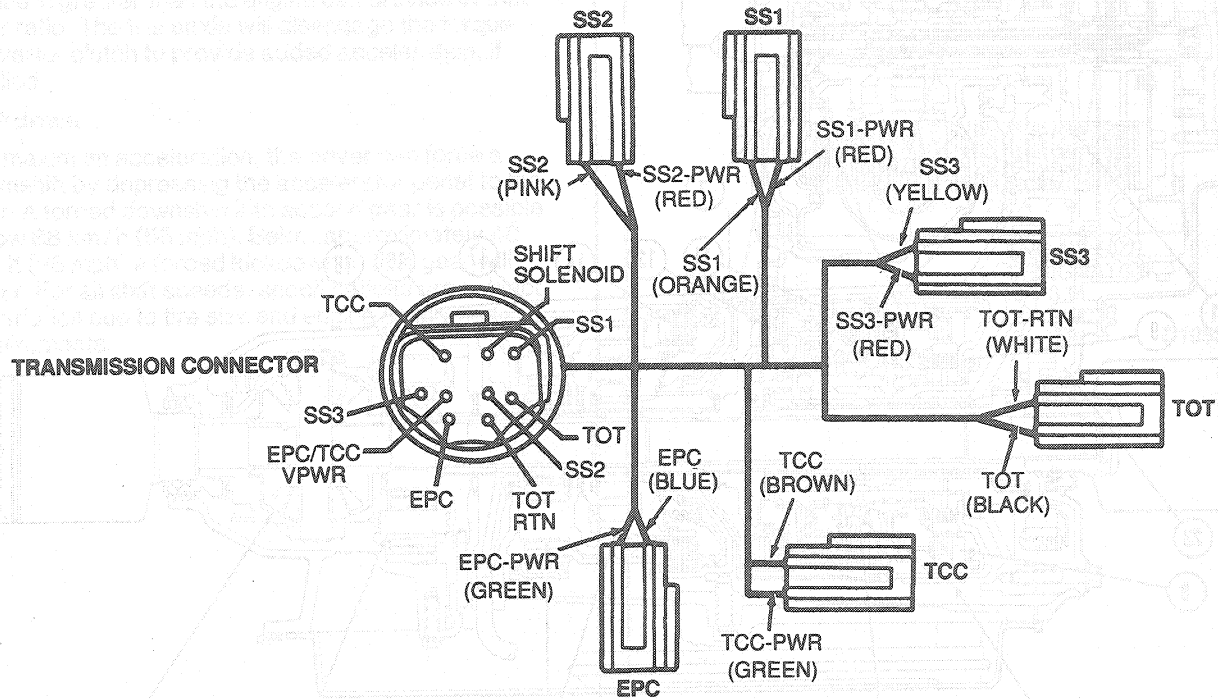


D11463-A

WIRE COLOR	CIRCUIT DESCRIPTION	PCM TEST PINS
BL	EPC	38
Y	SS3	55
GR	EPC/TCC VPWR	37, 57
BR	TCC	53
W	TOT RETURN	46
BK	TOT	49
PK	SS2	52
O	SS1	51
R	VPWR	37, 57

0-8880

Transmission Speed Sensor Connector

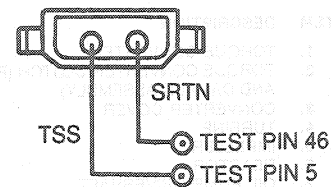

D11464-A

SENSOR	PCM TEST PIN
TSS+	5
TSS-	46