

DIAGNOSIS AND TESTING (Continued)

Key to Circuit Numbers and Wire Colors


Description	Pin	Circuit	Wire Harness/Wire Color
Servo Assembly Connector			14290 Harness
Not Used	1		
Not Used	2		
VSS Signal to Servo	3	150	DG/W
Stoplamp Switch to Stoplamps	4	810	R/LG

(Continued)

Key to Circuit Numbers and Wire Colors (Cont'd)

Description	Pin	Circuit	Wire Harness/Wire Color
Command Signal	5	151	LB/BK
Command Return	6	461	O
Fused Accy Feed	7	296	W/P
Not Used	8		
Deactivator Switch	9	636	O
Ground	10	57	BK
Battery Feed	—	10	LG/R

See EVTM for more details of this circuit

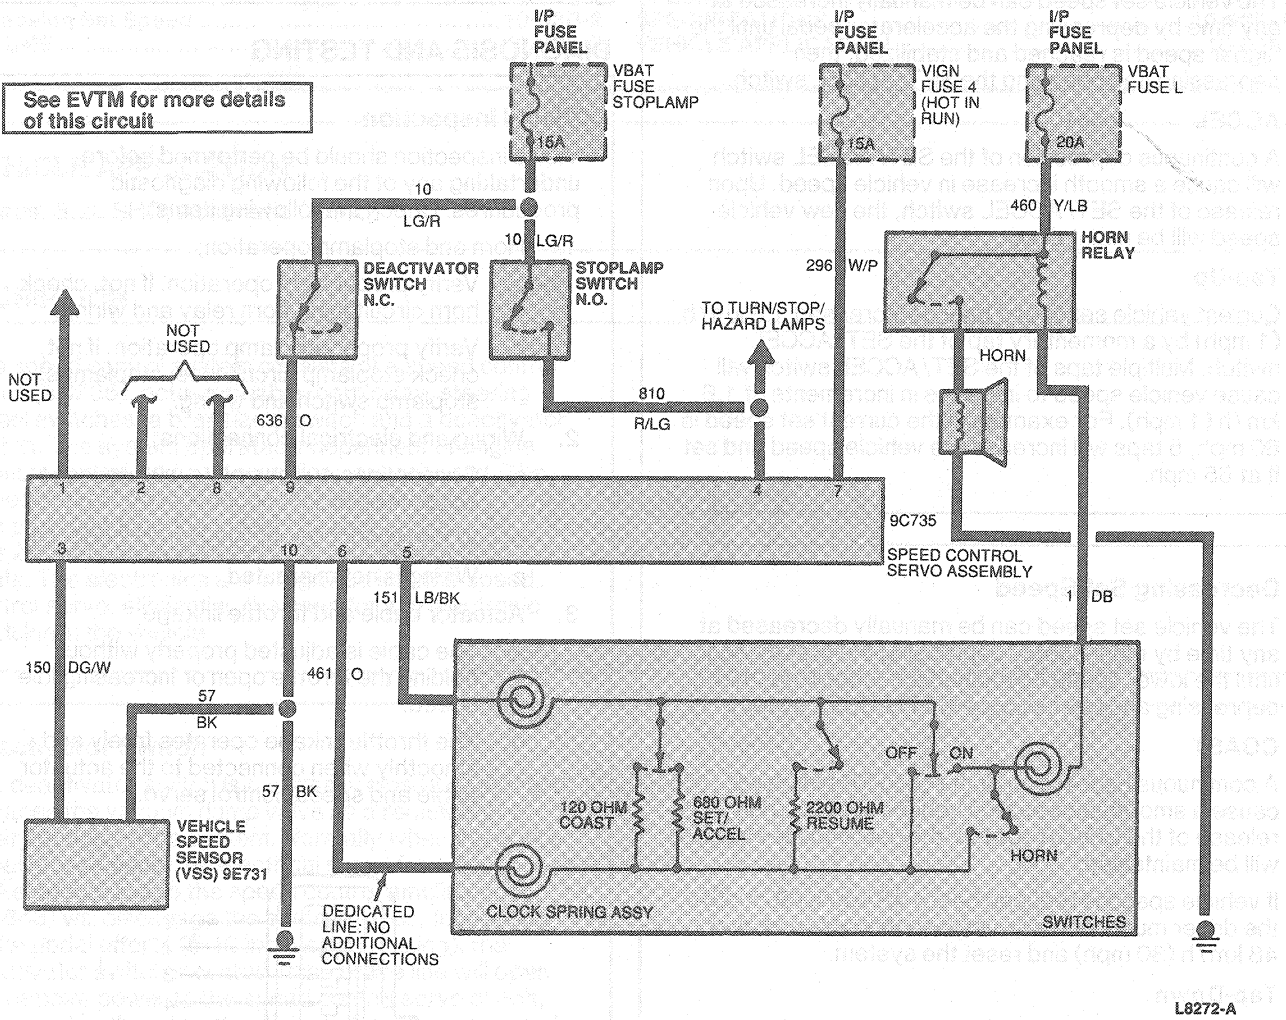

PINPOINT TEST INDEX

SYMPTOM	PINPOINT TESTS
Speed Control Does Not Work	A
Speed Continuously Changes	B

(Continued)

PINPOINT TEST INDEX (Cont'd)

SYMPTOM	PINPOINT TESTS
COAST/Tap-Down Inoperative	C

(Continued)