



REMOVAL AND INSTALLATION (Continued)

Ignition Capacitor

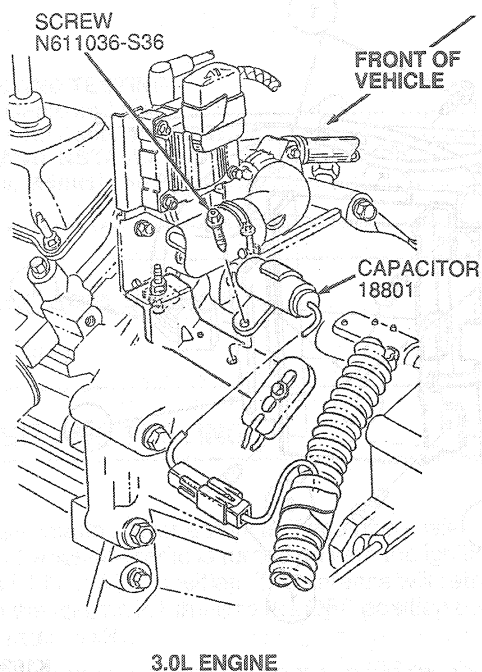

3.0L ENGINE

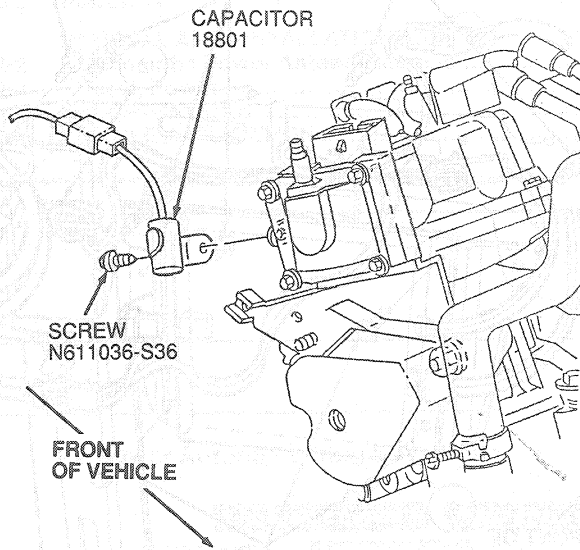

3.8L ENGINE

K13042-B


JBL Suppression Choke

Sedan

Removal and Installation

1. Remove rear seat cushion and seat back.
2. Remove sound insulation material.
3. Remove two screws retaining choke bracket.

Part No.	Part Name	Quantity
18801	Ignition Capacitor	1
N611036-S36	Screw	2

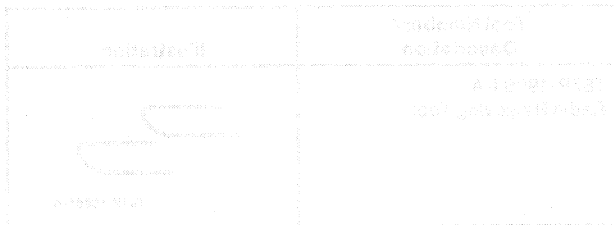

4. Remove ground wire screw.
5. Remove amplifier trim cover from inside luggage compartment.
6. Disconnect electrical connectors and remove choke and bracket assembly.
7. To install, reverse Removal procedure.