# DESCRIPTION (Continued)
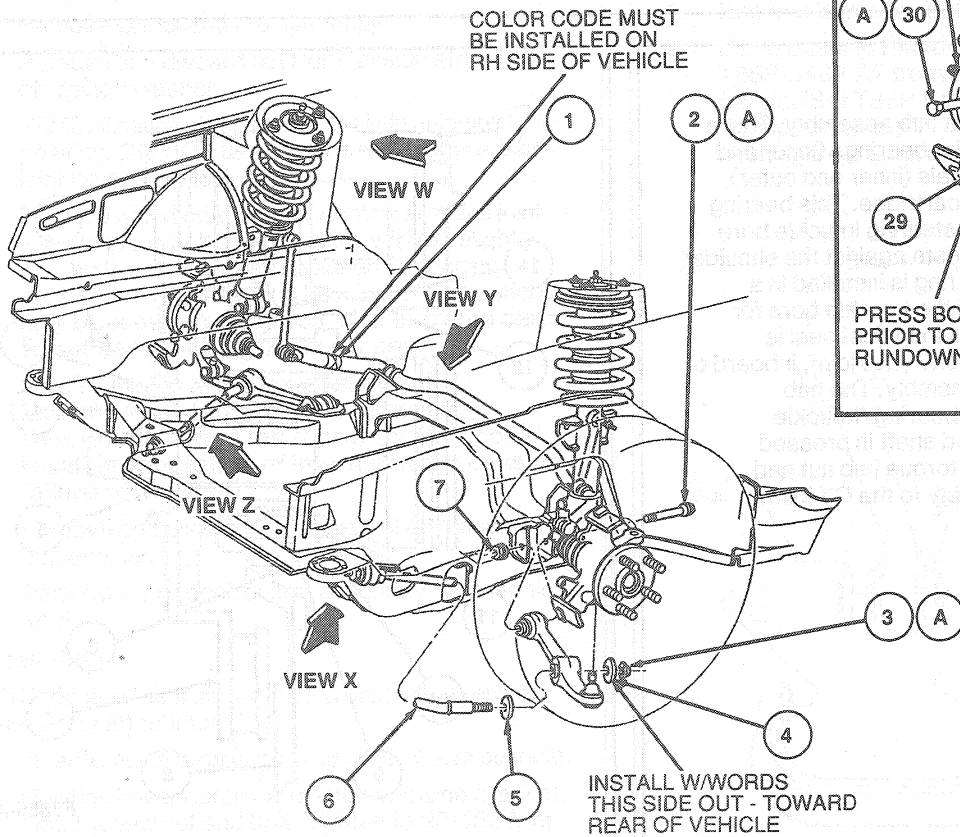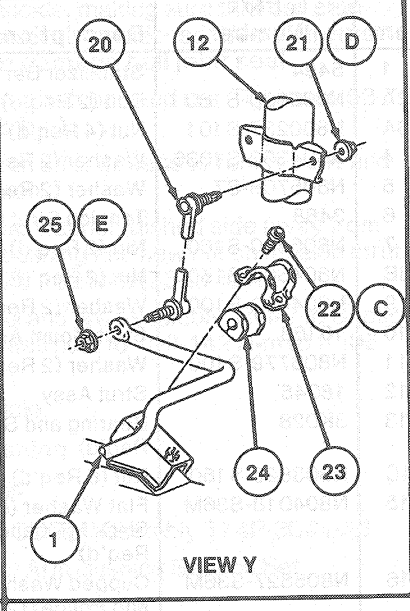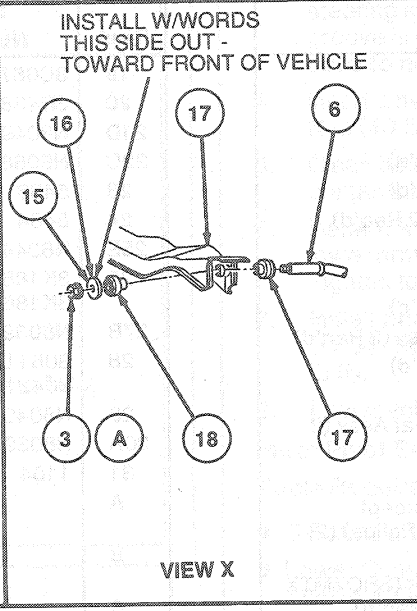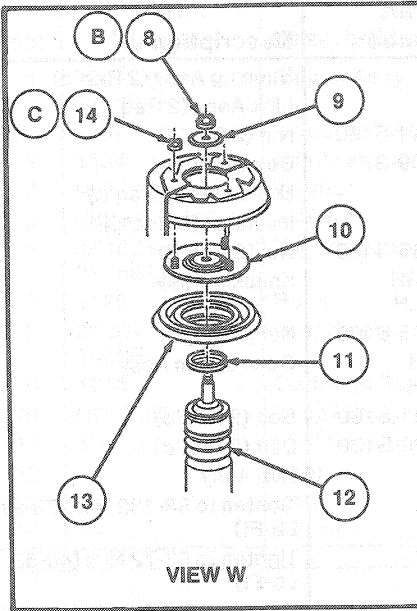
VIEW W

VIEW X

INSTALL W/WORDS THIS SIDE OUT - TOWARD FRONT OF VEHICLE

VIEW Y

VIEW Z

PRESS BOLT IN PRIOR TO NUT RUNDOWN

COLOR CODE MUST BE INSTALLED ON RH SIDE OF VEHICLE

VIEW W

VIEW Y

VIEW Z

VIEW X

INSTALL W/WORDS THIS SIDE OUT - TOWARD REAR OF VEHICLE

F3891-H