

REMOVAL AND INSTALLATION (Continued)

11. Disconnect tube assembly from each bolster bladder. Remove two Christmas-tree fasteners from each bolster bladder and each bolster guide.

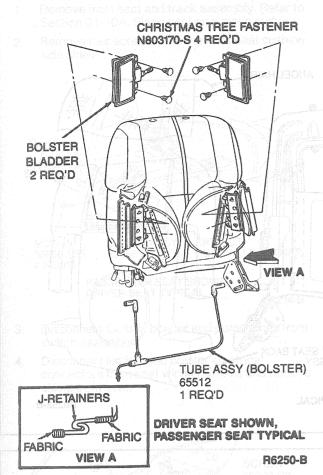

12. Remove two screws from each bolster guide and brackets on seat back frame. Disconnect the bottom of two springs from the seat back frame at the left bolster opening and two springs from the seat back frame at the right bolster opening.

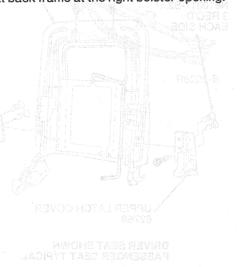

- 13. Remove bolster tubing from between lumbar bladder and back side of seat back pad.
- 14. Cut three hog rings from each bolster listing tie down wire and lumbar listing wires and remove each bolster tie down wire from each bolster listing.

