


DIAGNOSIS AND TESTING (Continued)

PINPOINT TEST CC:  
WHEEL SENSOR DIAGNOSIS (Continued)

	TEST STEP	RESULT	ACTION TO TAKE
CC24	CHECK LH REAR SENSOR VOLTAGE		
	<ul style="list-style-type: none"> <li>● Turn ignition switch OFF.</li> <li>● Place vehicle on hoist and raise wheels clear of ground. Refer to Section 00-02.</li> <li>● Set multi-meter to voltage range (2 volts AC)</li> <li>● Measure voltage between Pins 28 and 46 at breakout box while spinning LH rear wheel at approximately 1 revolution per second.</li> </ul>	Between 0.10 and 1.40 volts AC Less than 0.10 or more than 1.40 volts AC	<ul style="list-style-type: none"> <li>▶ GO to CC25.</li> <li>▶ CHECK sensor mounting, air gap or toothed wheel mounting. CORRECT as required.</li> </ul>
CC25	CHECK LH REAR SENSOR CIRCUIT CONTINUITY TO GROUND		
	<ul style="list-style-type: none"> <li>● Check continuity between breakout box Pins 28 and 60.</li> <li>● Is continuity present?</li> </ul>	No Yes	<ul style="list-style-type: none"> <li>▶ GO to CC27.</li> <li>▶ GO to CC26.</li> </ul>
CC26	CHECK LH REAR SENSOR TO GROUND		
	<ul style="list-style-type: none"> <li>● Disconnect LH rear wheel sensor plug.</li> <li>● Check for continuity between each sensor plug pin (sensor side) and vehicle ground.</li> </ul> <div style="text-align: center; margin-top: 20px;">  <p>LH REAR SENSOR H7776-A</p> </div>	Yes No	<ul style="list-style-type: none"> <li>▶ REPLACE LH rear sensor.</li> <li>▶ SERVICE or REPLACE cable harness Circuit 518 or 519. RECONNECT sensor plug.</li> </ul>
CC27	CHECK ABS MODULE TO GROUND WIRE		
	<ul style="list-style-type: none"> <li>● Check continuity between breakout box Pin 60 and body ground.</li> <li>● Is continuity present?</li> </ul>	Yes No	<ul style="list-style-type: none"> <li>▶ GO to CC28.</li> <li>▶ SERVICE or REPLACE cable harness Circuit 530 (Taurus / Sable). Circuit 57 or 530 (Taurus SHO).</li> </ul>
CC28	CHECK FOR EXCESSIVE AXLE VIBRATION		
	<ul style="list-style-type: none"> <li>● Check differential housing for excessive play.</li> <li>● Check rear axle bearings for excessive play.</li> <li>● Inspect toothed sensor ring for damaged teeth.</li> <li>● Were any parts loose or damaged?</li> </ul>	Yes No	<ul style="list-style-type: none"> <li>▶ SERVICE or REPLACE damaged parts.</li> <li>▶ REVERIFY symptom.</li> </ul>

TH7911B

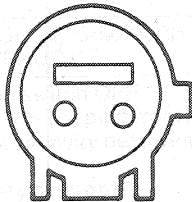