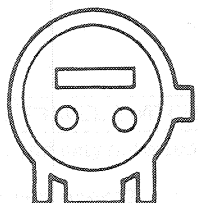


DIAGNOSIS AND TESTING (Continued)

(Continued)

**PINPOINT TEST DD:**  
**WHEEL SENSOR DIAGNOSIS (Continued)**

TEST STEP	RESULT	ACTION TO TAKE
<p><b>DD14</b> CHECK LH REAR SENSOR CONTINUITY</p> <ul style="list-style-type: none"> <li>● Disconnect LH rear wheel sensor plug.</li> <li>● Check for continuity between each sensor plug pin (sensor side) and vehicle ground.</li> <li>● <b>Is continuity present?</b></li> </ul> <div style="text-align: center;">  <p><b>LH REAR SENSOR H7776-A</b></p> </div>	<p>Yes</p> <p>No</p>	<p>REPLACE LH rear sensor.</p> <p>SERVICE or REPLACE cable harness Circuit 518 or 519. RECONNECT sensor plug.</p>
<p><b>DD15</b> CHECK ABS MODULE TO GROUND WIRE</p> <ul style="list-style-type: none"> <li>● Check continuity between breakout box Pin 60 and body ground.</li> <li>● <b>Is continuity present?</b></li> </ul>	<p>Yes</p> <p>No</p>	<p>GO to DD16.</p> <p>SERVICE or REPLACE cable harness Circuit 530 (Taurus/Sable). Circuit 57 or 530 (Taurus SHO).</p>
<p><b>DD16</b> CHECK ANTI-LOCK OPERATION LH REAR WHEEL</p> <ul style="list-style-type: none"> <li>● Lift vehicle and rotate wheels to ensure they turn freely.</li> <li>● Apply moderate brake pedal effort and check that LH rear wheel will not turn.</li> <li>● Jump Pins 34 and 19.</li> <li>● Short Pins 36, 54 and 60 to each other at breakout box.</li> <li>● Check that LH rear wheel turns freely with ignition switch ON.</li> </ul> <p><b>CAUTION: Do not leave ignition on for more than 1 minute, or valve damage may result.</b></p>	<p>Wheel turns freely</p> <p>Wheel does not turn freely or pedal drops</p>	<p>REVERIFY symptom.</p> <p>REPLACE solenoid valve body.</p>

TH7912B