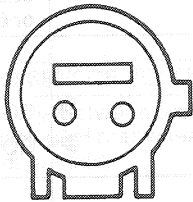
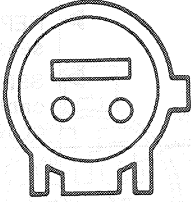
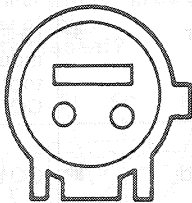


DIAGNOSTIC TESTS (A-J) (Continued)

**PINPOINT TEST C: ANTI-LOCK WARNING INDICATOR ON AFTER VEHICLE STARTS TO MOVE OR FALSE CYCLING OF ANTI-LOCK SYSTEM (Continued)**

TEST STEP		RESULT	ACTION TO TAKE
<b>C4</b>	<b>CHECK RH FRONT SENSOR RESISTANCE</b>		
	<ul style="list-style-type: none"> <li>● Disconnect RH front sensor plug.</li> <li>● Measure resistance of sensor at sensor plug.</li> <li>● Is resistance between 800 and 1400 ohms?</li> </ul>  <p><b>RH FRONT SENSOR H7774-A</b></p>	Yes → SERVICE or REPLACE cable harness Circuit 514 or 516. No → REPLACE RH front sensor.	
<b>C5</b>	<b>MEASURE RH REAR SENSOR CIRCUIT RESISTANCE</b>		
	<ul style="list-style-type: none"> <li>● Measure resistance between breakout box Pins 27 and 45.</li> <li>● Is resistance between 800 and 1400 ohms?</li> </ul>	Yes → GO to C7. No → GO to C6.	
<b>C6</b>	<b>CHECK RH REAR SENSOR RESISTANCE</b>		
	<ul style="list-style-type: none"> <li>● Disconnect RH rear sensor plug.</li> <li>● Measure resistance of sensor at sensor plug.</li> <li>● Is resistance between 800 and 1400 ohms?</li> </ul>  <p><b>RH REAR SENSOR H7775-A</b></p>	Yes → SERVICE or REPLACE cable harness Circuit 523 or 524. No → REPLACE RH rear sensor.	
<b>C7</b>	<b>MEASURE LH REAR SENSOR CIRCUIT RESISTANCE</b>		
	<ul style="list-style-type: none"> <li>● Measure resistance between breakout box Pins 28 and 46.</li> <li>● Is resistance between 800 and 1400 ohms?</li> </ul>	Yes → GO to C9. No → GO to C8.	
<b>C8</b>	<b>CHECK LH REAR SENSOR RESISTANCE</b>		
	<ul style="list-style-type: none"> <li>● Disconnect LH rear sensor plug.</li> <li>● Measure resistance of sensor at sensor plug.</li> <li>● Is resistance between 800 and 1400 ohms?</li> </ul>  <p><b>LH REAR SENSOR H7776-A</b></p>	Yes → SERVICE or REPLACE cable harness Circuit 518 or 519. No → REPLACE LH rear sensor.	
<b>C9</b>	<b>CHECK LH FRONT SENSOR AND CIRCUITRY TO GROUND</b>		
	<ul style="list-style-type: none"> <li>● Check for continuity between breakout box Pins 30 and 60.</li> <li>● Is continuity present?</li> </ul>	Yes → GO to C10. No → GO to C11.	