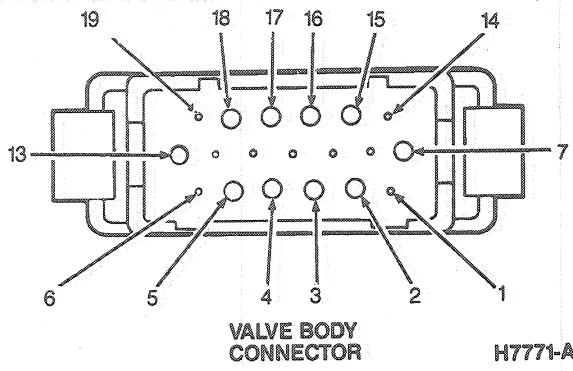
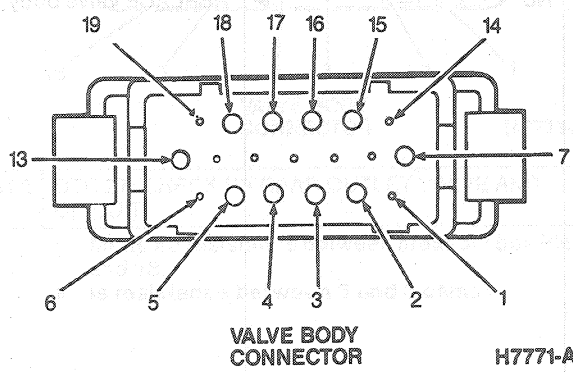


DIAGNOSIS AND TESTING (Continued)

(Continued) DIAGNOSIS AND TESTING

PINPOINT TEST BB:
SOLENOID VALVE DIAGNOSIS (Continued)

	TEST STEP	RESULT	ACTION TO TAKE
BB3	<p>CHECK LH FRONT INLET VALVE</p> <ul style="list-style-type: none"> ● Disconnect valve body 19-pin connector. ● Measure resistance between Pins 17 and 7. ● Is resistance between 5 and 8 ohms?  <p style="text-align: center;">VALVE BODY CONNECTOR H7771-A</p>	<p>Yes</p> <p>No</p>	<p>▶ REPLACE or SERVICE cable harness Circuits 495.</p> <p>▶ REPLACE valve body.</p>
BB4	<p>DTC 23: CHECK LH FRONT OUTLET VALVE AND CIRCUIT</p> <ul style="list-style-type: none"> ● Measure resistance between breakout box Pins 3 and 2. ● Is resistance between 3 and 6 ohms? 	<p>Yes</p> <p>No</p>	<p>▶ GO to BB..</p> <p>NOTE: If any other codes are output, SERVICE next code.</p> <p>▶ GO to BB5.</p>
BB5	<p>CHECK LH FRONT OUTLET VALVE</p> <ul style="list-style-type: none"> ● Disconnect valve body 19-pin connector. ● Measure resistance between Pins 18 and 7. ● Is resistance between 3 and 6 ohms?  <p style="text-align: center;">VALVE BODY CONNECTOR H7771-A</p>	<p>Yes</p> <p>No</p>	<p>▶ REPLACE or SERVICE cable harness Circuit 498.</p> <p>▶ REPLACE valve body.</p>
BB6	<p>DTC 24: CHECK RH FRONT INLET VALVE AND CIRCUIT</p> <ul style="list-style-type: none"> ● Measure resistance between breakout box Pins 3 and 38. ● Is resistance between 5 and 8 ohms? 	<p>Yes</p> <p>No</p>	<p>▶ GO to BB8.</p> <p>NOTE: If other codes are output, SERVICE next code.</p> <p>▶ GO to BB7.</p>