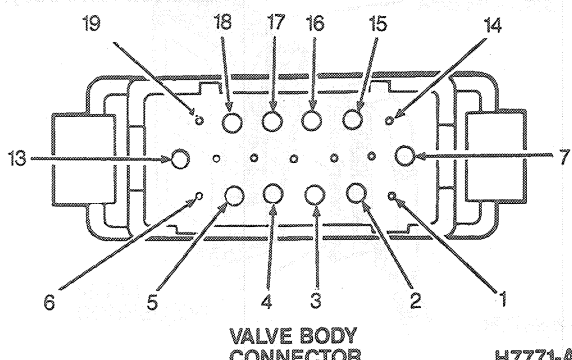
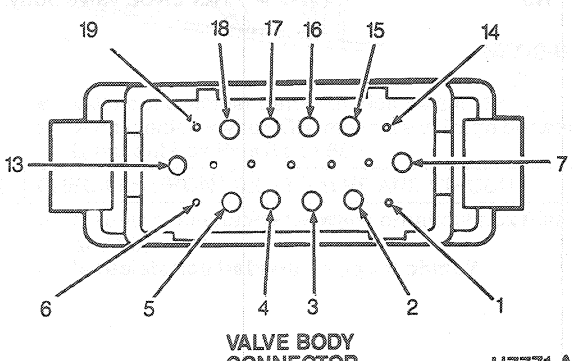


DIAGNOSIS AND TESTING (Continued)

PINPOINT TEST BB:
SOLENOID VALVE DIAGNOSIS (Continued)

TEST STEP	RESULT	ACTION TO TAKE
<p>BB7 CHECK RH FRONT INLET VALVE</p> <ul style="list-style-type: none"> ● Disconnect valve body 19-pin connector. ● Measure resistance between Pins 15 and 7. ● Is resistance between 5 and 8 ohms?  <p style="text-align: center;">VALVE BODY CONNECTOR H7771-A</p>	<p>Yes</p> <p>No</p>	<p>REPLACE or SERVICE cable harness Circuit 510.</p> <p>REPLACE valve body.</p>
<p>BB8 DTC 25: CHECK RH FRONT OUTLET VALVE AND CIRCUIT</p> <ul style="list-style-type: none"> ● Measure resistance between breakout box Pins 3 and 21. ● Is resistance between 3 and 6 ohms? 	<p>Yes</p> <p>No</p>	<p>GO to BB 10.</p> <p>NOTE: If other codes are output, SERVICE next code.</p> <p>GO to BB9.</p>
<p>BB9 CHECK RH FRONT OUTLET VALVE</p> <ul style="list-style-type: none"> ● Disconnect valve body 19-pin connector. ● Measure resistance between Pins 16 and 7. ● Is resistance between 3 and 6 ohms?  <p style="text-align: center;">VALVE BODY CONNECTOR H7771-A</p>	<p>Yes</p> <p>No</p>	<p>REPLACE or SERVICE cable harness Circuit 497.</p> <p>REPLACE valve body.</p>