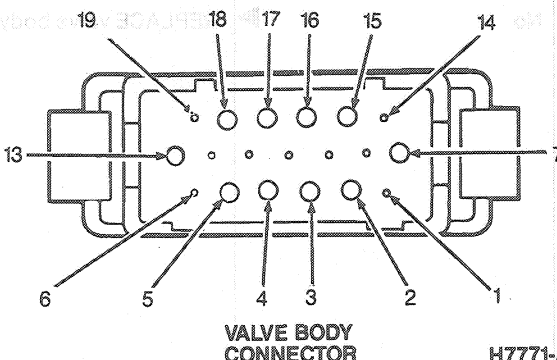
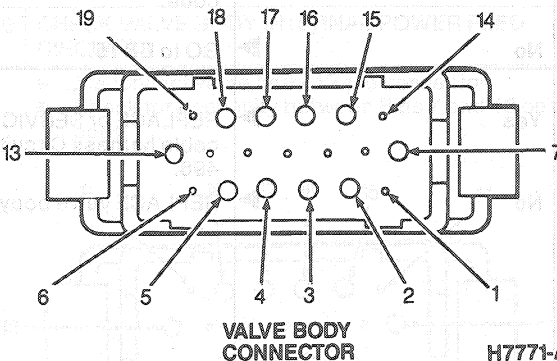


DIAGNOSIS AND TESTING (Continued)

PINPOINT TEST BB:
SOLENOID VALVE DIAGNOSIS (Continued)

TEST STEP	RESULT	ACTION TO TAKE
<p>BB10 DTC 26: CHECK RH REAR INLET VALVE AND CIRCUIT</p> <ul style="list-style-type: none"> ● Measure resistance between breakout box Pins 3 and 55. ● Is resistance between 5 and 8 ohms?  <p>VALVE BODY CONNECTOR H7771-A</p>	<p>Yes</p> <p>No</p>	<p>▶ GO to BB12.</p> <p>NOTE: If other codes are output, SERVICE next code.</p> <p>▶ GO to BB11.</p>
<p>BB11 CHECK RH REAR INLET VALVE</p> <ul style="list-style-type: none"> ● Disconnect valve body 19-pin connector. ● Measure resistance between Pins 2 and 7. ● Is resistance between 5 and 8 ohms?  <p>VALVE BODY CONNECTOR H7771-A</p>	<p>Yes</p> <p>No</p>	<p>▶ REPLACE or SERVICE cable harness Circuit 455 (Taurus/Sable). Circuit 678 (Taurus SHO).</p> <p>▶ REPLACE valve body.</p>
<p>BB12 DTC 27: CHECK RH REAR OUTLET VALVE AND CIRCUIT</p> <ul style="list-style-type: none"> ● Measure resistance between breakout box Pins 3 and 18. ● Is resistance between 3 and 6 ohms? 	<p>Yes</p> <p>No</p>	<p>▶ GO to BB14.</p> <p>NOTE: If other codes are output, SERVICE next code.</p> <p>▶ GO to BB13.</p>