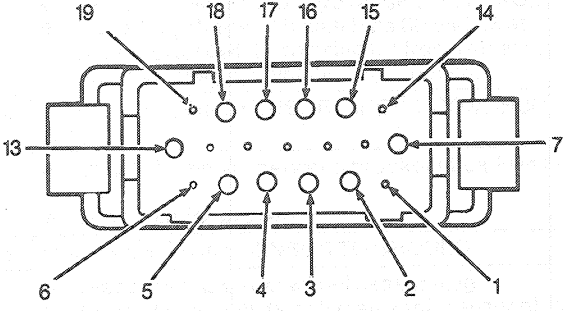
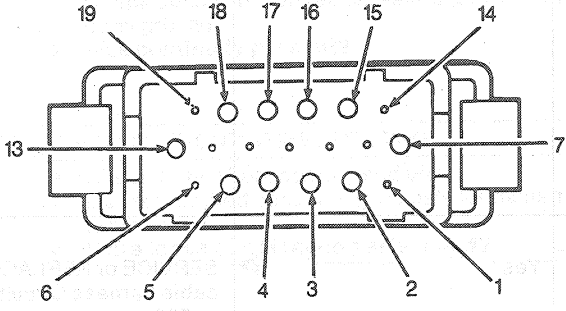


DIAGNOSIS AND TESTING (Continued)

PINPOINT TEST BB:
SOLENOID VALVE DIAGNOSIS (Continued)

TEST STEP	RESULT	ACTION TO TAKE
<p>BB17 CHECK LH REAR OUTLET VALVE</p> <ul style="list-style-type: none"> ● Disconnect valve body 19-pin connector. ● Measure resistance between Pins 5 and 7. ● Is resistance between 3 and 6 ohms?  <p style="text-align: center;">VALVE BODY CONNECTOR H7771-A</p>	<p>Yes</p> <p>No</p>	<p>▶ REPLACE or SERVICE cable harness Circuit 499.</p> <p>▶ REPLACE valve body.</p>
<p>BB18 CHECK VALVE BODY POWER FEED AND CIRCUITRY</p> <ul style="list-style-type: none"> ● Remove main power relay from harness connector. ● Check for continuity between breakout box Pins 3 and 33. ● Is there continuity? 	<p>Yes</p> <p>No</p>	<p>▶ GO to BB19.</p> <p>▶ REPLACE or SERVICE cable harness circuit 532.</p>
<p>BB19 CHECK VALVE BODY INTERNAL POWER FEED CIRCUITS</p> <ul style="list-style-type: none"> ● Disconnect valve body 19-pin connector. ● Check for continuity between Pins 7 and 13 on valve body.  <p style="text-align: center;">VALVE BODY CONNECTOR H7771-A</p> <ul style="list-style-type: none"> ● Is there continuity? 	<p>Yes</p> <p>No</p>	<p>▶ REVERIFY symptom.</p> <p>▶ REPLACE valve body.</p> <p>NOTE: If symptom is reverified and no malfunction is found, GO to Anti-Lock Quick Test Check.</p>

TH7291D