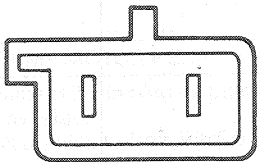


DIAGNOSIS AND TESTING (Continued)

**PINPOINT TEST EE:**  
**FLUID LEVEL INDICATOR/PEDAL TRAVEL SWITCH/PRESSURE SWITCH DIAGNOSIS (Continued)**

TEST STEP		RESULT	ACTION TO TAKE
EE3	CHECK FOR VOLTAGE ON FLS NO. 2 SWITCH AND CIRCUITRY		
	<ul style="list-style-type: none"> <li>Turn ignition switch to ON position.</li> <li>Measure voltage between breakout box Pins 8 and 60.</li> </ul>	No voltage 12 volts	GO to EE4. SERVICE or REPLACE cable harness circuit 542, 535, or 549 (Taurus/Sable). Circuit 550, 535, or 549 (Taurus SHO).
EE4	CHECK PEDAL TRAVEL SWITCH AND CIRCUITRY		
	<ul style="list-style-type: none"> <li>Check for continuity between breakout box Pins 5 and 60.</li> <li>Is continuity present?</li> </ul>	No Yes	GO to EE6. GO to EE5.
EE5	CHECK PEDAL TRAVEL SWITCH		
	<ul style="list-style-type: none"> <li>Disconnect 2-pin plug on pedal travel switch.</li> </ul> <div style="text-align: center;">  <p><b>2 PIN BRAKE PEDAL POSITION SWITCH H7778-A</b></p> </div> <ul style="list-style-type: none"> <li>Check for continuity between each pin and body ground.</li> <li>Is continuity present?</li> </ul>	Yes No	REPLACE pedal travel switch. SERVICE or REPLACE cable harness (Circuit 535 or 549).
EE6	CHECK FOR VOLTAGE ON PEDAL TRAVEL SWITCH AND CIRCUITRY		
	<ul style="list-style-type: none"> <li>Turn ignition switch to ON position.</li> <li>Measure voltage between breakout box Pins 5 and 60.</li> </ul>	No voltage 12 volts	VERIFY code 61 and/or 62. SERVICE or REPLACE cable harness circuit 542, 535 or 549 (Taurus/Sable). Circuit 550, 535 or 549 (Taurus SHO).