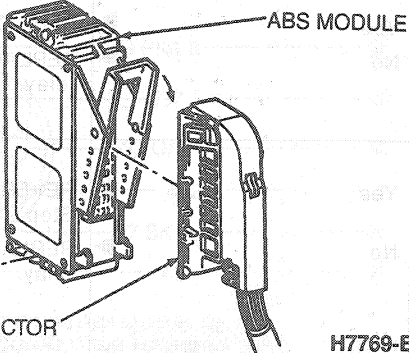
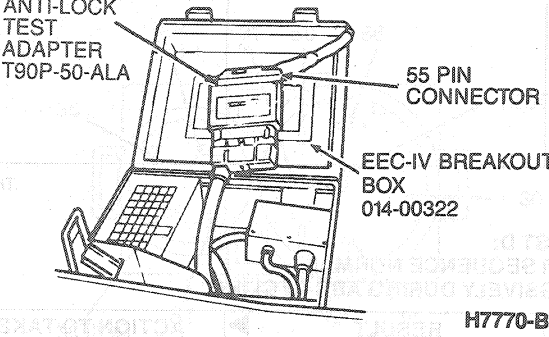



DIAGNOSTIC TESTS (A-J) (Continued)

(Continued)

PINPOINT TEST D:
ANTI-LOCK WARNING INDICATOR SEQUENCE NORMAL —
BRAKE PEDAL RISES OR DROPS EXCESSIVELY DURING ABS CYCLING (Continued)

TEST STEP	RESULT	ACTION TO TAKE
<p>D2 CHECK PEDAL TRAVEL SWITCH AND CIRCUITRY</p> <ul style="list-style-type: none"> Turn ignition switch to OFF position. Disconnect 55-pin plug from ABS Module.  <p>ABS MODULE 55 PIN CONNECTOR H7769-B</p> <ul style="list-style-type: none"> Connect EEC-IV Breakout Box 014-00322 with Anti-Lock Test Adapter T90P-50-ALA or equivalent to the anti-lock 55-pin plug on the wiring harness.  <p>ANTI-LOCK TEST ADAPTER T90P-50-ALA 55 PIN CONNECTOR EEC-IV BREAKOUT BOX 014-00322 H7770-B</p> <ul style="list-style-type: none"> Check continuity between breakout box Pins 5 and 26. Is continuity present? 	<p>Yes</p> <p>No</p>	<p>▶ GO to D4.</p> <p>▶ GO to D3.</p>
<p>D3 CHECK PEDAL TRAVEL SWITCH</p> <ul style="list-style-type: none"> Disconnect pedal travel switch 2-pin plug. Check for continuity between Pins 1 and 2. Is continuity present?  <p>2 PIN BRAKE PEDAL POSITION SWITCH H7785-A</p>	<p>Yes</p> <p>No</p>	<p>▶ SERVICE or REPLACE cable harness Circuit 535 or 549.</p> <p>▶ REPLACE pedal travel switch.</p>
<p>D4 CHECK PEDAL TRAVEL SWITCH FUNCTION</p> <ul style="list-style-type: none"> Push brake pedal down at least 3 inches and hold down. Check for continuity between breakout box Pins 5 and 26. Is continuity present? 	<p>Yes</p> <p>No</p>	<p>▶ GO to D5.</p> <p>▶ GO to D6.</p>